

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
0009-0073-18A	GENACT	ACTUATOR ASSY, STAB TRIM
0009-0073-24	HSTA	ACTUATOR ASSY, STAB TRIM
0009-0143-4	HSTA	ACTUATOR ASSEMBLY, HSTA
0009-0145-2	B-C-17	ACTUATOR ASSY - PITCH TRIM
0009-0148-2	ERJ 19	HORIZONTAL STABILIZER TRIM ACTUATOR ASSY
0009-0148-4	ERJ 19	HORIZONTAL STABILIZER TRIM ACTUATOR ASSY
013-1960-010	GPS-ANT	ANTENNA, GPS
013-1985-010	GPS-ANT	ANTENNA, GPS
020-0071-04	SSEE-6000	CCC SURROUND SOUND PROCESSOR
0204-0004	ACCUMU	ACCUMULATOR HYDRAULIC, SELF DISPLACING
0240-0005-1	G450/550	PEDESTAL, ASSEMBLY, GIV-X
0240-0006-1	G450/550	PEDESTAL, ASSEMBLY, GV-SP
1000005	TMA	TAIL MOUNT ANTENNA
1000009	TMA	TAIL MOUNT ANTENNA
100-601981-001	EDU-104	MISC ELECTR:OTHER
1007783	ACU	ACU
1013-1-1	ACM1013	AUDIO CONTROL MODULE
102002-1	DBS2100E	ANTENNA,DBS
102002-3	DBS2100E	ANTENNA,DBS
102002-4	DBS2100E	ANTENNA,DBS
102005	DBS2400E	ANTENNA, DBS
102012-1	AIU	AIU,INTERNATIONAL
102012-3	AIU	AIU,INT'L WITH BNC CONNECTOR
102012-4	AIU	AIU,WESTERN HEMISPHERE BNC CON
1020-1-3	PNP1020	PLUG 'N' PLAY
1021-1-1	VM-1021	VIDEO MULTIPLEXER
1022-1-1	AVC1022	A/V CONTROLLER
1022-1-2	AVC1022	AUDIO VIDEO MODULE
1023-1-1	AVM1023	AUDIO VIDEO MODULE
1024-1-1	AVM1024	AUDIO VIDEO MODULE
1025-1-3	AVM1025	AUDIO VIDEO MODULE
1025-1-4	AVM1025	AUDIO VIDEO MODULE
1025-1-5	AVM1025	AUDIO VIDEO MODULE
1025-1-6	AVM1025	AUDIO VIDEO MODULE
1026-1-2	AVM1026	AUDIO VIDEO MODULE
1027-1-1	AVM1027	AUDIO VIDEO MODULE
1027-1-2	AVM1027	AUDIO VIDEO MODULE
1029-1-1	AVM1029	AUDIO MULTIPLEXER
1030-1-2	INA1030	INFRARED INTERPRETER MODULE
1033-1-1	INA1033	INTERPRETER
1033-1-10	RFIRI1033	INTERPRETER, RF/IR 418MHZ
1033-1-8	RFIRI1033	INTP,418MHZ MOD
1047182	TMA	TAIL MOUNT ANTENNA
1050-1-1	UM1050	UNIVERSAL MODULE
1050-1-2	UM1050	UNIVERSAL MODULE
1051-1-1	CMM1051	CABIN MANAGEMENT MODULE

1051-1-2	CMM1051	CABIN MANAGEMENT MODULE
1051-1-3	CMM1051	CABIN MANAGEMENT MODULE
1051-1-7	CMM1051	CABIN MANAGEMENT MODULE
1051-1-8	CMM1051	CABIN MANAGEMENT MODULE
1052-1-1	SC1052	SWITCH CONTROLLER
1052-1-3	SC1052	SWITCH CONTROLLER
1052850	AACU-6000	ACU PHASE 2
1053-1-3	C1053	UNET/RS-32 CONVERT
1054023	AITR-6000	AIRBORNE INTEGRATED TRANSCEIVER/ROUTER
1054-1-1	CC1054	8 CKT AC/DC MODULE
1055-1-1	CC1055	EIGHT CIRCUIT CONTROLLER
1055-1-2	CC1055	EIGHT CIRCUIT CONTROLLER
1056-1-1	CC1056	EIGHT CIRCUIT CONTROLLER
1056-1-2	CC1056	EIGHT CIRCUIT CONTROLLER
1056-1-3	CC1056	EIGHT CIRCUIT CONTROLLER
1056-1-4	CC1056	EIGHT CIRCUIT CONTROLLER
1058-1-1	DM1058	28VDC DIMMER MODULE - 5A
1059-1-1	CC1059	15 CIRCUIT CONTROLLER - 1A AC
1060076	TMA	TAIL MOUNT ANTENNA
1060-1-1	DP1060	DIGITAL POTENTIOMETER
1060-1-3	DP1060	DIGITAL POTENTIOMETER
1061-1-1	CM1061	CALL MODULE
1062-1-1	IM1062	INTERPHONE MODULE
10718B01E01	PDE-6000	POWER DISTRIBUTION EQUIP DC
10719B01E01	PDE-6100	POWER DISTRIBUTION EQUIP AC
10720B01E00	PDE-6010	POWER DISTRIBUTION EQUIP DC
10722B01E00	PDE-6110	POWER DISTRIBUTION EQUIP AC
1142400-130	SEB	SEAT ELECTRONICS BOX
1167012-140	PCP	PILOT CALL PANEL
1180-1-2	CSW-1180	CURRENT SENSOR
1226-1-1	DC-1226	DATA CONVERTER
128-384030-1	AMFQIF	FUEL QUANTITY INDICATOR-FUSELAGE
128-384031-1	AMFQIW1	FUEL QUANTITY INDICATOR-WING
128-384031-3	AMFQIW3	FUEL QUANTITY INDICATOR-WING
128-384045-5	AMFQI	TURBINE SPEED INDICATORS
128-384046-3	AMFQI	FAN SPEED INDICATOR
128-384047-5	AMITTIND	ITT INDICATOR
1287-1-1	FAW-1287	FINAL ASSY, WARNING UNIT
1287-1-2	AWT1287	WARNING UNIT
1288-1-1	JA-1288	JUMP SEAT AUDIO
1302046-106	DU-6400	MONITOR, SEATBACK, LCD - 6.4 INCH
1303910-100	LCD-100	MONITOR, RETRACTOR, LCD - 10.4 INCH - 73
1304-1-11	CA-1304	ANNUNCIATOR
1304-1-12	CA-1304	ANNUNCIATOR
1304-1-16	CA-1304	ANNUNCIATOR
1304-1-17	CA-1304	ANNUNCIATOR
1304-1-7	CA-1304	ANNUNCIATOR

1305-1-5	SSA1305	SMARTSWITCH ADAPTER
1305-1-6	SSA1305	SMARTSWITCH ADAPTER
1308520-100	TSE-6014	TOUCH SCREEN EQPT (TSE), 10.4
1308521-100	TSE-8500	TOUCH SCREEN EQPT (TSE), 8.4 INCH
1308523-100	ZDE-6000	ZONE DISTRIBUTION EQPT
1308523-101	ZDE-6000	ZONE DISTRIBUTION EQPT
1308524-100	DTE-6000	DIGITAL TAPPING EQPT
1308525-100	VEE-6000	VIDEO ENCODER EQPT
1322-1-108Q100D	SP1322	SWITCH PANEL
1322-1-109Q100D	SP1322	SWITCH PANEL
1322-1-112Q100D	SP1322	SWITCH PANEL
1322-1-117Q100D	SP1322	SWITCH PANEL
1322-1-147Q100D	SP1322	SWITCH PANEL
1322-1-156Q100D	SP1322	SWITCH PANEL
1322-1-16Q100D	SP1322	SWITCH PANEL
1322-1-193Q100D	SP1322	SWITCH PANEL
1322-1-199Q100D	SP1322	SWITCH PANEL
1322-1-42Q100D	SP1322	SWITCH PANEL
1322-1-44Q100D	SP1322	SWITCH PANEL
1322-1-53Q100D	SP1322	SWITCH PANEL
1322-1-59Q100D	SP1322	SWITCH PANEL
1322-1-6Q100D	SP1322	SWITCH PANEL
1322-1-89Q100D	SP1322	SWITCH PANEL
1445-1-1	TCCA1445	TCC AUDIO FILE
1448-1-1/Q120B	SP1448	SWITCH PANEL
1448-1-10Q100D	SP1448	SWITCH PANEL
1448-1-11Q100D	SP1448	SWITCH PANEL
1448-1-37Q100D	SP1448	SWITCH PANEL
1448-1-51Q100D	SP1448	SWITCH PANEL
1448-1-60Q100D	SP1448	SWITCH PANEL
1448-1-61Q100D	SP1448	SWITCH PANEL
1448-1-62Q100D	SP1448	SWITCH PANEL
1448-1-67Q100D	SP1448	SWITCH PANEL
1448-1-7Q120B	SP1448	SWITCH PANEL
1448-1-9Q100D	SP1448	SWITCH PANEL
1457-1-1	WLS1457	WATER LEVEL SENSOR, 10 GAL GV
1457-1-2	WLS1457	WATER LEVEL SENSOR, 10 GAL GIV
1500-0490-002	DEU-2350	DEU
1500-0500-002	HCP-4000	CONTROL PANEL
1500-0520-001	OHU-2350	OHU
1500-1080-501	M2100-OHU	OHU RJ
1500-1090-502	CMB-2100	COMBINER
1500-1100-500	DEU-2100	DEU RJ
1500-1360-002	HAP-2800	ANNUNCIATOR
1500-1460-004	CMP-2100STC	ASSY, HGS CMP MDL 2100
1500-1460-503	CMP-2100TC	CMP
1500-1470-501	HCP-2100TC	CONTROL PANEL

1500-1470-502	HCP-2100STC	ASSY, HGS CONTROL PANEL
1500-1550-001	OHU-2860	OHU F2000
1500-1550-003	OHU-4860	OHU
1500-1560-001	CMB-2860	COMBINER F2000
1500-1620-002	CMP-2850	CMP
1500-1620-003	CMP-2850	CMP
1500-1620-004	CMP-2850	CMP
1500-1620-103	CMP-2850	CMP
1500-1640-001	HCP-2850	HCP F2000
1500-1650-001	HCP-2150	HCP
1500-1720-001	CMB-2350	COMBINER 737X
1500-1730-002	CMP-2350	ASSY, HGS CMP MDL 2350
1500-1730-004	CMP-2350	CMP
1500-1760-001	CMB-2150	COMBINER
1500-1880-002	CMP-2860	ASSY, CMP MDL2860
1500-1880-003	CMP-2860	CMP, PROG F900EX
1500-2000-001	OHU-3300	OHU
1500-2010-001	CMB-3300	COMBINER
1500-2050-003	CMP-3300	CMP
1500-2090-001	CMP-2150	CMP
1500-2090-002	CMP-2150	CMP
1500-2140-001	OHU-4200	ASSY, OHU MDL 4200
1500-2160-003	CMP-4200	CMP MDL 4200
1500-2230-001	CMB-4200	ASSY, CMBR
1500-2240-001	M4100 - HAP	ANN PANEL, DHC-8/400
1500-2260-002	OHU-4100	OHU HGS
1500-2270-002	CMB-4100	COMBINER
1500-2280-001	CMP-4100	ASSEMBLY, HGS COMPUTER
1500-2290-001	HCP-4100	CONTROL PANEL
1500-2310-001	CMB-4000	COMBINER
1500-2360-001	OHU-4000	OHU 4000
1500-2370-003	CMB-4000	ASSEMBLY, COMBINER, 4000 RASTER
1500-2380-002	CMP-4860	HC
1500-2380-003	CMP-4860	HC
1500-2430-001	M4000 - HAP	ANN PANEL
1500-2460-002	CMP-4000	CMP
1500-2460-003	CMP-4000	CMP
1500-2550-001	CMP-4100	CMP
1500-2620-001	OHU-5860	ASSY, OHU
1500-2620-002	OHU-5860	ASSY, OHU
1500-2620-003	OHU-5860	OHU
1500-2630-001	CMB-5860	ASSEMBLY, COMBINER
1500-2630-003	CMB-5860	ASSEMBLY, COMBINER
1500-2630-005	CMB-5860	COMBINER, EVS
1500-2640-001	CMP-5860	HC
1500-2640-002	CMP-5860	ASSEMBLY, HUD COMPUTER
1500-2840-003	CMP-5600	ASSEMBLY, HUD COMPUTER

1500-2850-003	OHU-5600	OHU
1500-2860-005	CMB-5600	COMBINER
1500-2860-006	CMB-5600	COMBINER R/H SIDE
1500-2890-001R	HCU-2200	COMBINER ASSEMBLY
1500-2890-101	HCU-2200	COMBINER ASSEMBLY
1500-2890-102	HCU-2200	COMBINER ASSEMBLY
1500-2900-001	OHU-2200	ASSEMBLY, HPU
1500-2900-101	OHU-2200	ASSEMBLY, HPU
1500-2900-102	OHU-2200	ASSEMBLY, HPU
1500-2950-002	CMB-4860	COMBINER
1500-2950-003	CMB-4860	COMBINER
1500-2960-001	M5860-IRS	SENSOR, IR
1500-2960-002	M5860-IRS	SENSOR, IR
1500-2960-003	M5860-IRS	SENSOR, IR
1500-2970-001	M5860-IRW	WINDOW, IR
1500-3030-001	OHU-2200	ASSEMBLY, OHU, LHS
1500-3050-004	CMP-4200	ASSEMBLY, HC
1500-3060-001	HCA-1500	ASSEMBLY, HUD COMPUTER
1500-3070-001	AC-3000	ASSEMBLY, OHU
1500-3080-101	AC-3000	ASSEMBLY, COMBINER
1500-3080-102	AC-3000	ASSEMBLY, COMBINER
1500-3080-501	AC-3000	ASSEMBLY, COMBINER
1500-3080-502	AC-3000	ASSEMBLY, COMBINER
1500-3090-001	CMP-4000	ASSEMBLY, EVS HGS COMPUTER
1500-3100-001	OHU-6600	ASSEMBLY, OHU
1500-3110-001	AC-3100	ASSEMBLY, M660X COMBINER
1500-3120-001	AC-3100	ASSEMBLY, HUD COMPUTER
1500-3140-001	AC-3100	ASSY, COMBINER
1500-3140-002	AC-3100	ASSY, COMBINER
1500-3150-001	AC-3100	ASSEMBLY, IR WINDOW
1500-3190-001	IW-1500	WINDOW, INFRARED
1500-3210-001	EVS-1500	SENSOR, EVS
1500-3320-001	SRA-1500	IR SENSOR, ROLL ADJUSTED
1670-1-1	CDC1670	CD CHANGER
1706-1-1	AM1706	AUDIO MULTIPLEXER
1710-1-1	AVM1710	AUDIO/VIDEO MODULE
1710-1-2	AVM1710	AUDIO/VIDEO MODULE
1730-1-1	CA-1730	ANNUNCIATOR
1730-1-3	CA-1730	ANNUNCIATOR
1734-1-1Q100D	SP1734	SWITCH PANEL
1734-1-24Q100D	SP1734	SWITCH PANEL
1734-1-29Q100D	SP1734	SWITCH PANEL
1734-1-30Q100D	SP1734	SWITCH PANEL
1734-1-31Q100D	SP1734	SWITCH PANEL
1734-1-32Q100D	SP1734	SWITCH PANEL
1734-1-3Q100D	SP1734	SWITCH PANEL
1734-1-5/Q551	SP1734	SWITCH PANEL , 1X3 HOT PLATE/LIGHT

1734-1-6/Q420	SP1734	SWITCH PANEL ENTRY LIGHT
1734-1-8Q100D	SP1734	SWITCH PANEL
1944-1-4	CMM1944	CABIN MANAGEMENT MODULE
1944-1-5	CMM1944	CABIN MANAGEMENT MODULE
1944-1-8	CMM1944	CONTROLLER, WATER PURGE SYS
1959-1-1	PR1959	PIONEER REMOTE
200-97450-101	PIA200	PLUG-IN ARM
2020-1-1	AVD202	DISTRIBUTOR, 8X8 AUDIO
2022-1-1	AVD202	8 X 8 AUDIO-VIDEO DISTRIBUTOR
2022-1-10	AVD202	8 X 8 AUDIO-VIDEO DISTRIBUTOR
2023-1-1	AVD202	16 X 16 AUDIO-VIDEO DISTRIBUTOR
2027-1-1	AVD202	24X24 AUDIO/VIDEO DISTRIBUTOR
2040-1-1	SPC204	CONTROLLER, SECONDARY PORT
2050-1-1	ACPC-1000	PRIMARY PORT CONTROLLER
2050-1-2	PPC205	PRIMARY PORT CONTROLLER
2052-1-1	ACPC-1000	CONTROLLER, ENVIRONMENTAL
2052-1-10	ACPC-1000	ENVIRONMENTAL CONTROLLER
2052-1-2	ACPC-1000	CONTROLLER, ENVIRONMENTAL
2052-1-3	EC205	CABIN MANAGEMENT MODULE
2052-1-6	EC205	CONTROLLER, ENVIRONMENTAL
2052-1-7	EC205	CONTROLLER, ENVIRONMENTAL
2052-1-8	EC205	CONTROLLER, ENVIRONMENTAL
2052-1-9	EC205	CONTROLLER, ENVIRONMENTAL
2056-1-1	HPC205	HIGH-POWER RELAY CONTROL
2058-1-1	LD2058	CONTROLLER, LAMP DIMMER
2080-1-1	NE208	EXPANDER, MDSB NODE
2090-1-2	C2090	ENVIRONMENTAL CONTROLLER
228-1	TMD228	TRIM IN MOTION DETECTOR
229-0236-000	332G-2	GYRO, RATE
229-0310-000	332G-2	GYRO, RATE
229-0324-010	NAC-80	ACCELEROMETER
229-0324-020	LAC-80	LATERAL ACCELEROMETER
245-001	AAE-6200	PASSENGER ADDRESS AMPLIFIER
245-604128-000	EFB245	EFB - EDU (CMC)
245-604170-105	EFB245	EFB - EEMU (CMC)
2501-1-005H406A	SP2501	SWITCH PANEL
2501-1-006/H101A	SP2501	SWITCH PANEL, 1X2 CABIN TABLE LIGHT
2501-1-006H101A	SP2501	SWITCH PANEL, 1X2 CABIN TABLE LIGHT
2501-1-007/H101A	SP2501	SWITCH PANEL, 1X2 CABIN TABLE LIGHT
2501-1-007H101A	SP2501	SWITCH PANEL, 1X2 CABIN TABLE LIGHT
2501-1-009C103A	SP2501	SWITCH PANEL
2501-1-009H101A	SP2501	SWITCH PANEL, 1X1 CABIN READ LIGHT
2501-1-009H794A	SP2501	SWITCH PANEL
2501-1-012H406A	SP2501	SWITCH PANEL, 1X1 TOILET FLUSH
2501-1-015H101A	SP2501	SWITCH PANEL, 1X1 CABIN LIGHT
2501-1-028C101A	SP2501	SWITCH PANEL, 2X4 VESTIBULE
2501-1-028Q588A	SP2501	SWITCH PANEL, 2X4 VESTIBULE

2501-1-029C103A	SP2501	SWITCH PANEL:AS 21 CMS 1X9 (LAV) 1ST
2501-1-030H101A	SP2501	SWITCH PANEL, 1X2 CABIN LIGHT & SHADE
2501-1-031C103A	SP2501	SWITCH PANEL, AS 21 CMS 1X10 (AFT LAV) 1
2501-1-032Q760A	SP2501	SWITCH PANEL, 1X7, FWD LAV.
2501-1-065C103A	SP2501	SWITCH PANEL (1X3) 1ST ACFT 5002
2501-1-065Q020A	SP2501	SWITCH PANEL (1X3) 1ST ACFT 5002
2501-1-066Q020A	SP2501	SWITCH PANEL (1X3) 1ST ACFT 5002
2501-1-071H406A	SP2501	SWITCH PANEL, 1X2 "READ/CALL"
2501-1-134H101A	SP2501	SWITCH PANEL, 1X1 TOILET FLUSH
2501-1-136H209N	SP2501	SWITCH PANEL: (1X1 AFT BAG LT)1ST AC
2501-1-136H436N	SP2501	SWITCH PANEL, 1X1 AFT BAGGAGE LIGHT
2501-1-138H209N	SP2501	SWITCH PANEL:(1X4 VANITY/LAV)1ST ACF
2501-1-138H436N	SP2501	SWITCH PANEL, 1X4 VANITY
2501-1-139H436N	SP2501	SWITCH PANEL, 1X8.5 LAV.
2501-1-140/H114B	SP2501	SWITCH PANEL, 1X7 VIP
2501-1-140/H436N	SP2501	SWITCH PANEL, 1X7 VIP
2501-1-140H407N	SP2501	SWITCH PANEL, 1X7 VIP
2501-1-140H436N	SP2501	SWITCH PANEL, 1X7 VIP
2501-1-141H209N	SP2501	SWITCH PANEL: (1x1 Entry Lt)1st Acf
2501-1-141H436N	SP2501	SWITCH PANEL, 1X1 ENTRY LIGHT
2501-1-142H209N	SP2501	SWITCH PANEL: (1X8.5 LAVATORY)1ST A
2501-1-142H436N	SP2501	SWITCH PANEL, 1X8.5 LAV.
2501-1-192H406A	SP2501	SWITCH PANEL, 1X9 LAV MDSB
2501-1-199T17SA	SP2501	SWITCH PANEL, 1X1 FLUSH
2501-1-200T17SA	SP2501	SWITCH PANEL, 1X1 SINK DRAIN
2501-1-202T17SA	SP2501	SWITCH PANEL, 1X3 ENTRY
2501-1-204T17SA	SP2501	SWITCH PANEL, 1X3 WARDROBE SERVICE
2501-1-205T17SA	SP2501	SWITCH PANEL, 1X3 WARDROBE SERVICE
2501-1-206T17SA	SP2501	SWITCH PANEL, 1X3 AFT LAV
2501-1-207	SP2501	SWITCH PANEL, 1X5 ENTRY
2501-1-208	SP2501	SWITCH PANEL, 1X4 LAV
2501-1-209	SP2501	SWITCH PANEL (1X4 PCU)1st Acft Dassa
2501-1-210	SP2501	OUTLINE, SWITCH PANEL: (1X4 PCU) 1ST
2501-1-212	SP2501	SWITCH PANEL (1X1 TABLE)1ST ACFT DAS
2501-1-213	SP2501	SWITCH PANEL, 1X1 CLOSET 900EX
2501-1-214	SP2501	SWITCH PANEL: (1X2 LIGHT/VANITY)1ST
2501-1-215	SP2501	SWITCH PANEL, 1X3 READ/FLUSH/CALL 900EX
2501-1-216	SP2501	Switch Panel (1X1 LIGHT)1st Acft Das
2501-1-217	SP2501	SWITCH PANEL, 1X1 DOOR 900EX
2501-1-233	SP2501	SWITCH PANEL, 1X2 READ TABLE
2501-1-242	SP2501	SWITCH PANEL, 1X1 LAV
2501-1-243	SP2501	SWITCH PANEL, 1X1 READ
2501-1-245	SP2501	SWITCH PANEL, 1X1 VANITY
2501-1-316	SP2501	OUTLINE, SWITCH PANEL (1X3 READ, TA
2501-1-317	SP2501	SWITCH PANEL: (1X1 READ, DISCRETE) 1
2501-1-322	SP2501	SWITCH PANEL: (1X1 FAX DISCRETE) 1st
2501-1-325	SP2501	OUTLINE, SWITCH PANEL (1X1 DEPLOY/RE

2501-1-326	SP2501	SWITCH PANEL: (1X4 AFT LAV PANEL) 1S
2501-1-341	SP2501	SWITCH PANEL (1X1 PRINTER) 1st Acft
2501-1-342	SP2501	SWITCH PANEL: (1X1 UPWASH) 1st Acft
2501-1-343	SP2501	SWITCH PANEL: (1X1 WI-FI ON/OFF) 1st
2501-1-344	SP2501	OUTLINE, SWITCH PANEL (1X2 DUAL ELEC
2501-1-345	SP2501	SWITCH PANEL: (1X2 MONITOR POWER/ CL
2501-1-346	SP2501	OUTLINE, SWITCH PANEL (1X2 LAV VANIT
2501-1-347	SP2501	SWITCH PANEL (1X1 VANITY) 1st Acft D
2501-1-348	SP2501	SWITCH PANEL (1X1 LAV) 1ST ACFT DASS
2501-1-351	SP2501	SWITCH PANEL (1X2 READ CALL) 1st Acf
2501-1-354	SP2501	OUTLINE, SWITCH PANEL: (1X2 READ TAB
2501-1-369	SP2501	SWITCH PANEL: (1X2 WI-FI) 1ST ACFT D
2501-1-370	SP2501	OUTLINE, SWITCH PANEL (1X2 LAV UPWAS
2501-2-002H101A	SP2501	SWITCH PANEL, 1X8 A/V
2501-2-004H101A	SP2501	SWITCH PANEL, 1X8 AUDIO
2501-2-004Q530A	SP2501	SWITCH PANEL, 1X8 AUDIO
2501-2-008H101A	SP2501	SWITCH PANEL, 1X8 LIGHT & SHADE
2501-2-029H101A	SP2501	SWITCH PANEL, 1X9 A/V W/SHADE CNTRL
2501-2-030H101A	SP2501	SWITCH PANEL, 1X9 A/V W/SHADE CNTRL
2501-2-074H101A	SP2501	SWITCH PANEL, 1X10 A/V
2501-2-075/H101A	SP2501	SWITCH PANEL, 1X10 A/V
2501-2-075H101A	SP2501	SWITCH PANEL, 1X10 A/V
2501-2-075H794A	SP2501	SWITCH PANEL
2501-2-110H101A	SP2501	SWITCH PANEL, 2X11 FWD VIP
2501-2-114H101A	SP2501	SWITCH PANEL, 2X8 AFT VIP
2501-2-176H436N	SP2501	SWITCH PANEL, 1X6 AUDIO CONTROL
2501-2-177H102N	SP2501	SWITCH PANEL (1X6 SS)1ST ACFT 800XP
2501-2-206H101A	SP2501	SWITCH PANEL, 2X7 ENTERTAINMENT
2501-2-286T17SA	SP2501	SWITCH PANEL, 1X10 PCU
2501-2-287T17SA	SP2501	SWITCH PANEL, 1X13 PCU W/AUDIO & VIDEO
2501-2-291	SP2501	OUTLINE, SWITCH PANEL (1X9 VIP)1ST A
2501-2-292	SP2501	SWITCH PANEL, 1X9 VIP
2501-2-295H505A	SP2501	SWITCH PANEL
2501-2-296H505A	SP2501	SWITCH PANEL
2501-2-561	SP2501	SWITCH PANEL: (1X10 VIP)1ST ACFT F90
2501-2-562	SP2501	SWITCH PANEL: (1X10 VIP)1ST ACFT F90
2501-2-565	SP2501	SWITCH PANEL: (1X7 CABIN) 1st Acft D
2501-2-566	SP2501	OUTLINE, SWITCH PANEL (1X7 CABIN) 1S
2501-2-579	SP2501	SWITCH PANEL (2X4 Headphone, Audio,
2501-2-607	SP2501	SWITCH PANEL (1X10 VIP)1st Acft F7X
2501-3-010H101A	SP2501	SWITCH PANEL
2501-3-047H101A	SP2501	SWITCH PANEL
2501-3-056H101A	SP2501	SWITCH PANEL
2501-3-056Q760A	SP2501	SWITCH PANEL, 3X14 GALLEY
2501-3-060Q518A	SP2501	SWITCH PANEL
2501-3-074Q515A	SP2501	SWITCH PANEL, 3X11 ACP
2501-4-008H101A	SP2501	SWITCH PANEL, 1X4 RCA AUX

2501-4-023	SP2501	SWITCH PANEL: (2X4 HOT CUP)1ST ACFT
2501-4-024	SP2501	SWITCH PANEL, 1 X 1 HEADPHONE
2501-4-034	JP2501	JACK PANEL: (1X3 SINGLE IPOD 1)
2501-4-035	JP2501	JACK PANEL: (1X3 DUAL IPOD 1-2)
2501-4-036	JP2501	JACK PANEL: (1X3 DUAL IPOD 3-4)
2501-4-037	JP2501	JACK PANEL: (1X3 SINGLE IPOD 2)
2501-4-038	JP2501	JACK PANEL: (1X3 SINGLE IPOD 3)
2501-4-039	JP2501	JACK PANEL: (1X3 SINGLE IPOD 4)
2501-4-045	JP2501	JACK PANEL: (1X3 SINGLE IPOD) AIRCRA
2507-1-003	CTR2507	COLOR TOUCHSCREEN REMOTE
2509-1-011H436N	SP2509	SWITCH PANEL, VIP MASTER HH
2509-1-012H436N	SP2509	SWITCH PANEL, PCU, LEFT
2509-1-013H436N	SP2509	SWITCH PANEL, PCU, RIGHT
2509-1-013H706N	SP2509	SWITCH PANEL, PCU, RIGHT HH
2509-1-016H436N	SP2509	SWITCH PANEL, LAVATORY HH
2509-1-017H436N	SP2509	SWITCH PANEL, GALLEY MASTER
251-003	PAA251	PA AMPLIFIER
2515-1-1	TSS2515	SWITCH, 3.8" COLOR TOUCH SCREEN
2515-1-2	AD-2515	ASSEMBLY 3.8 INCH DISPLAY
2516-1-1	TSS2516	SWITCH, 3.8" COLOR TOUCH SCREEN
2516-1-2	TSS2516	3.8 INCH COLOR DISPLAY SWITCH PANEL
2517-1-1	JPE-2517	JACK PANEL, HEAD PHONE, ANODIZED
251A4510-10	HSTA B737NG	ACTUATOR ASSY, STAB TRIM
251A4510-12	HSTA B737NG	ACTUATOR ASSY, STAB TRIM
251A4510-6	GENACT	ACTUATOR ASSY, STAB TRIM
251A4510-9	GENACT	ACTUATOR ASSY, STAB TRIM
251N2051-10	HSTA B757	ACTUATOR ASSY, STAB TRIM
251N2051-3	GENACT	ACTUATOR ASSY, STAB TRIM
251N2051-7	GENACT	ACTUATOR ASSY, STAB TRIM
251N2051-8	GENACT	ACTUATOR ASSY, STAB TRIM
251N2051-9	GENACT	HORIZONTAL STAB. TRIM ACTUATOR ASSY
251T4310-1	GENACT	ACTUATOR ASSY, STAB TRIM
251T4310-2	GENACT	ACTUATOR ASSY, STAB TRIM
2525-1-08400	ODD2525	OUTLINE DRAWING 8.4 INCH DISPLAY
2526-1-001	AMD2526	RECEPTACLE, DISPLAY ARM, 0# AND 180# LOC
2526-1-003	AMD2526	RECEPTACLE, DISPLAY ARM, 180# LOCK
2526-1-084L33	AMD2526	ARM MOUNT 8.4
2526-1-084R33	AMD2526	ARM MOUNT 8.4
2526-1-104L33	AMD2526	ARM MOUNT 10.4
2526-1-104R33	AMD2526	ARM MOUNT 10.4
2600-1-10-T17SA	SP2600	SWITCH PANEL, 1X3 AFT WARDROBE
2600-1-12-T15SA	SP2600	SWITCH PANEL, 1X3 READ/TBL/CALL (LH)
2600-1-12-T17SA	SP2600	SWITCH PANEL, 1X3 READ/TBL/CALL (LH)
2600-1-13-T17SA	SP2600	SWITCH PANEL, 1X3 READ/READ/CALL
2600-1-14-T17SA	SP2600	SWITCH PANEL, 1X3 READ/TABLE/CALL
2600-1-15-T17SA	SP2600	SWITCH PANEL, 1X3 CALL/TABLE/READ
2600-1-16-T17SA	SP2600	SWITCH PANEL, 1X3 READ/TABLE/CALL

2600-1-17-T17SA	SP2600	SWITCH PANEL, 1X3 CALL/TABLE/READ
2600-1-1-T15SA	SP2600	SWITCH PANEL, 1X1 FLUSH
2600-1-1-T17SA	SP2600	SWITCH PANEL, 1X1 FLUSH
2600-1-27-T17SA	SP2600	SWITCH PANEL, 2X2 LAV.
2600-1-28-T17SA	SP2600	SWITCH PANEL, 1X3 AFT LAV.
2600-1-2-T17SA	SP2600	SWITCH PANEL, 1X1 SINK DRAIN
2600-1-2-T40SA	SP2600	SWITCH PANEL, 1X1 SINK DRAIN
2600-1-31-T17SA	SP2600	SWITCH PANEL, 1X1 DOOR RELEASE
2600-1-32-T16PA	SP2600	SWITCH PANEL GLOBAL 5000 - CONFEREN
2600-1-38-T17SA	SP2600	SWITCH PANEL, 2X2 FWD LAV.
2600-1-39-T17SA	SP2600	SWITCH PANEL, 1X3 AFT LAV.
2600-1-3-T17SA	SP2600	SWITCH PANEL, 1X1 TABLE LIGHT
2600-1-41-T17SA	SP2600	SWITCH PANEL, 1X1 FLUSH
2600-1-42-T17SA	SP2600	SWITCH PANEL, 1X1 CALL
2600-1-43-T17SA	SP2600	SWITCH PANEL, 1X4 LIGHTING
2600-1-44-T17SA	SP2600	SWITCH PANEL, 1X1 JUMP SEAT LIGHT
2600-1-45-T17SA	SP2600	SWITCH PANEL, 1X4 LIGHTING
2600-1-45-T24SA	SP2600	SWITCH PANEL, 1X4 LIGHTING
2600-1-46-T17SA	SP2600	SWITCH PANEL, 2X2 LAV.
2600-1-47-T17SA	SP2600	SWITCH PANEL, 1X1 DOOR, XRS
2600-1-4-T17SA	SP2600	SWITCH PANEL, 1X3 FWD WARDROBE
2600-1-5-T17SA	SP2600	SWITCH PANEL, 1X3 AFT WARDROBE
2600-1-6-T17SA	SP2600	SWITCH PANEL, 1X3 AFT LAV.
2600-1-7-T17SA	SP2600	SWITCH PANEL, 1X4 FWD LAV.
2600-1-8-T17SA	SP2600	SWITCH PANEL, 1X3 CALL/TABLE/READ
2600-1-9-Q220A	SP2600	SWITCH PANEL, 1X3 CALL/READ/READ
2600-1-9-T17SA	SP2600	SWITCH PANEL, 1X3 CALL/READ/READ
2600-2-1	JPE-6001	JACK PANEL, HEAD PHONE
2600-2-10	JPE-6001	AUDIO JACK MODULE ASSEMBLY
2600-2-2	JPE-6001	JACK PANEL, KIT RJ45 ETHERNET
2600-2-4	JPE-6001	JACK PANEL, VGA, VIDEO
2600-2-7	JPE-6001	JACK PANEL, 1X1 BLANK
2600-2-8	JPE-6001	JACK PANEL, 1X2 BLANK
2600-3-1	HSM2600	SWITCHING MODULE, HYBRID
2601-1-10-T17SA	SP2601	SWITCH PANEL, 1X3, UNDERMOUNT, CL604
2601-1-11-T17SA	SP2601	SWITCH PANEL, 1X3, UNDERMOUNT, CL604
2601-1-14-T138SA	SP2601	SWITCH PANEL
2601-1-1-T138SA	SP2601	SWITCH PANEL
2601-1-1-T17SA	SP2601	SWITCH PANEL, 1X3 CALL/TABLE/READ UM
2601-1-2-T138SA	SP2601	SWITCH PANEL
2601-1-2-T17SA	SP2601	SWITCH PANEL, 1X3 READ/TABLE/CALL UM
2601-1-3-T17SA	SP2601	SWITCH PANEL, 1X3 CALL/TABLE/READ
2601-1-4-T17SA	SP2601	SWITCH PANEL, 1X3 READ/TABLE/CALL
2601-1-5-T17SA	SP2601	SWITCH PANEL, 1X3 CALL/READ/READ
2601-1-6-T17SA	SP2601	SWITCH PANEL, 1X3 READ/READ/CA,,
2601-1-7-T17SA	SP2601	SWITCH PANEL, 1X3 CALL/READ/READ UM.
2601-1-8-T17SA	SP2601	SWITCH PANEL, 1X3, UNDERMOUNT, CL604

2601-1-9-T17SA	SP2601	SWITCH PANEL, 1X3, UNDERMOUNT, CL604
2601-2-2-T17SA	SP2601	SWITCH PANEL, UNDERMOUNT, PACP
2601-2-3-T17SA	SP2601	SWITCH PANEL, UNDERMOUNT, PACP
2610-1-1	PCU6000	PCU, GLOBAL 5000, TETHERED
2651-278-21	BVA-2651	BALL VALVE ASSY
2700-1-1	MON270	MONITOR, 17" CMS2
270-0859-010	590A-6A	CONTROL, ALTITUDE
270-0891-080	SVL-80	LINEAR SERVO
270-0930-010	YRS-65	RATE SENSOR
270-1306-020	CMA-764AN	VLF ANT COUP H-FIELD
270-1306-050	CMA-764AN	VLF ANT COUP E-FIELD
270-1306-060	CMA-764SE	ANTENNA COUPLER VLF
270-1306-071	CMA764()	ANTENNA COUPLER VLF
270-1306-090	CMA-764GV	GPS (CERTIFIED)/VLF
270-2196-030	590B-2	AIR SPEED SENSOR
270-2424-010	329T-1	TURN & SLIP INDICATOR
270-2426-040	329A-4V	FLIGHT DIRECTOR INDICATOR
270-2426-070	329A-3V4V	HORIZONTAL REFERENCE
270-2687-010	WX-1000PR	LIGHTNING DETECTION SYS
270-2687-020	WX1000	LIGHTNING DETECTION SYS
270-2687-030	WX-1000AN	LIGHTNING DETECTION SYS
2710-1-1501	DB2710	DISPLAY BULKHEAD, 15" ANALOG
2710-1-1503	DB2710	BULKHEAD DISPLAYS (15 INCH DISPLAY)
2710-1-1702	DB2710	DISPLAY BULKHEAD, 17" DIGITAL (CMS-TWO)
2710-1-1703	DB2710	BULKHEAD DISPLAYS
2710-1-2133	DB2710	DISPLAY BULKHEAD, 21.3" DIGITAL
273-1	LD273	D.C. LAMP DIMMER
2800-1-1	DDIB2800	END ITEM - DDIB
2800-1-2	DDIB2800	END ITEM - DDIB
2800-1-3	DDIB2800	END ITEM - DDIB
2801-1-1	DDIB2801	END ITEM - DDIB
2801-1-2	DDIB2801	END ITEM - DDIB
2801-1-3	DDIB2801	END ITEM - DDIB
2802-1-1	RU2802	REPEATER UNIT (RU)
297-1	DSC-297	DUAL SIGNAL CONDITIONER
3004-1-11	BBU3004	BATTERY B.U.FLUSH MNT. 7.5"
3004-1-12	BBU3004	BATTERY B.U.RACK MNT. 8.5"
307-1	CSW-307	CURRENT SENSOR
3100-1-24	VCP310	VCP RACK MNT. 12.5"
3200-1-22	CDC3200	CD CHNGR 6 DISC RACK MNT.8.5"
3201-1-1	CDC3201	CD CHANGER
3201-1-2	CDC3201	CD CHANGER. RACK MOUNT
3210-1-1	CDC3210	CD CHANGER, FLUSH MOUNT, CMS
3210-1-2	CDC3210	END ITEM, CD CHANGER, RACK MOUNT, CMS
3300-1-21	DVD330	DVD PLAYER FLUSH MNT. 7.5"
3300-1-23	DVD330	DVD PLAYER FLUSH MNT. 11.5"
3301-1-1	DVD PLAYER	DVD PLAYER

3302-1-1	DVD PLAYER	DVD PLAYER FLUSH MOUNT
3302-1-2	DVD PLAYER	DVD PLAYER RACK MOUNT
3310-1-1	DVD331	END ITEM, DVD PLAYER, FLUSH MOUNT, CMS
3400-1-1	VCRP340	VCR NEW CONFIG FOR FUTURE
3402-1-1	VCR340	VCR, MULTISTANDARD 28V DC
3404-1-2	VCR3404	END ITEM, 28 VDC, RACK MOUNT, MS-VCR, PA
3411-1-1	VCR	END ITEM, MULTI-STANDARD VCR, 1394, 110V
3413-1-1	VCR	VCR. MS 1394 115V AC FLUSH MOUNT
350000-10-010000	PS350	PHONE SYSTEM (INT'L COMM GROUP)
350000-10-010200	PS350	MISC ELECTR:OTHER(INTERNATIONAL COMM
3500-1-1	AMP350	AMPLIFIER,3-CHANNEL AUDIO
354-1	FB-354	FINAL ASSEMBLY, BALLAST - FLUORESCENT
356-1-1	TDR356	TIME DELAY RELAY
3600-1-1	AMP360	AMPLIFIER,6-CHANNEL AUDIO 28V
3600-1-2	ACA3600	AMPLIFIER,6-CHANNEL AUDIO 115V
3700-1-1	CM3700	SPEAKER, CABIN MIDRANGE
3700-1-2	CM3700	SPEAKER, CABIN SUBWOOFER
373-1-2	VIP373	CONTROLLER VIP
4111-0048-1	G450/550	SPEEDBRAKE ASSEMBLY
4137-0153-1	RPC-4137	SIDE PLATE ASSY, RUDDER PEDAL COVER
415200-1003	GENACT	HORIZONTAL STABILIZER ASSY
415200-1017	GENACT	HORIZONTAL STABILIZER ACTUATOR ASSY
4214-0031-6	GENACT	HORIZONTAL STABILIZER ELECTRONIC CONTROL
4214-0034-6	GENACT	HORZ STAB ELECTRONIC BACK-UP UNIT
4260-0018-4	ERJ 17	THROTTLE QUADRANT ASSY
4260-0018-5	ERJ 17	THROTTLE QUADRANT ASSY
4260-0034-1	TCQ4260	THROTTLE CONTROL QUADRANT
4260-0036-2	AFCMA-4260	ALTERNATE FLAP CONTROL MODULE ASSY.
4260-0039-2	G450/550	THROTTLE QUADRANT ASSEMBLY
4260-0039-3	G450/550	THROTTLE QUADRANT ASSEMBLY
4260-0045-1	G450/550	FLAP MODULE ASSY
4260-0049-1	G450/550	SECTOR ASSY, GULFSTREAM 450/550
4260-0052-1	G450/550	SPEEDBRAKE ASSEMBLY
4260-0054-1	G450/550	CONTROL ELEVATOR TRIM R.H.
4260-0054-2	G450/550	CONTROL ELEVATOR TRIM, R.H.
43068-035	GENPLC	THROTTLE QUADRANT ASSY
43083-406-6	G450/550	CONTROL ELEVATOR TRIM R.H
43083-406-7	G450/550	CONTROL ELEVATOR TRIM R.H
43102-004	GENPLC	THROTTLE QUADRANT ASSY
435-1-6	LC435	LIGHTING CONTROLLER
436-1-19	GC436	GALLEY CONTROLLER
436-1-9	GC436	GALLEY CONTROLLER
437-1-4	GC437	CHIME VOLUME CONTROLLER, GALLEY CALL
437-1-9	GC437	GALLEY CALL INTERPHONE CONTROLLER
441-0004-100	AJ441	10.6 INCH HD MONITOR WITH ARM
441-0005-100	AJ441	10.6 INCH HD MONITOR - BULKHEAD
441-0006-100	AJ441	BASE RECEPTACLE 10.6 IN HD MONITOR W

441-0007-100	AJ441	HIGH DEFINITION AUDIO VIDEO (HDAV)
441-0007-102	AJ441	HIGH DEFINITION AUDIO VIDEO (HDAV)
441-0008-100	AJ441	MEDIA CENTER DEVICE (MCD)
441-0010-100	AJ441	PROGRAMMABLE SWITCH, AUDIO JACK
441-0024-100	AJ441	1X1 MINI SWITCH
441-0024-101	AJ441	1X1 MINI SWITCH
441-0025-100	AJ441	1X3 MINI SWITCH
441-0025-101	AJ441	1X3 MINI SWITCH
441-0026-100	AJ441	JACK PANEL VGA, RS-232 AND RCA
441-0038-100	ECM441	ELECTRONIC CONTROL MODULE
441-0043-100	ECM441	PROGRAMMABLE SWITCH AND CABLE ASSEMB
441-0054-100	ECM441	USB, USB CHARGE, AUDIO IN JACK PANEL
441-0055-100	ECM441	VGA, RCA, HDMI, USB, USB CHARGE, AUDIO I
441-0056-100	ECM441	JACK PANEL HDMI STAND-ALONE
441-0062-100	ECM441	1X2 MINISWITCH
441-0070-100	ECM441	PROGRAMMABLE SWITCH (PSW), AUDIO JACK, L
441-0070-101	ECM441	PROGRAMMABLE SWITCH (PSW), AUDIO JACK, L
441-0080-100	ECM441	JACK PANEL, HDMI, RS-232, AND RCA
441-0081-100	ECM441	15.3 INCH HIGH DEFINITION MONITOR, BULKH
441-0087-100	TSR441	ASSEMBLY COLOR TOUCHSCREEN REMOTE
441-0095-100	TSR441	ASSEMBLY COLOR TOUCHSCREEN REMOTE
45AS86803-7	AMVM	VIBRATION MONITOR
45AS86846-009	AMHPI	HYDRAULIC PRESSURE INDICATOR
45AS86846-9	AMHPI	HYDRAULIC PRESSURE INDICATOR
45AS86848-001	AMRTI	ROLL TRIM INDICATOR
45AS86848-1	AMRTI	ROLL TRIM INDICATOR
460-1-12	SPU460	14 CKT HIGH POWER SPU WITH ALAN I
463092-110	ICG463	1.9 GHZ CORDLESS HANDSET, BLACK (ICG)
463092-120	ICG463	1.9 GHZ CORDLESS CRADLE IN BLACK (ICG)
463092-230	ICG463	1.9 GHZ CORDLESS BASE STATION (ICG)
464-1	CH-464	CHIME
465-1-17	CA-465	ANNUNCIATOR, PANEL
497-1-3	WT-497	WINDSHIELD TEMPERATURE CONTROL
500044-00-00-1	BS75000	BLACK SIGMA 7 HANDSET (INT'L COMM GROUP)
500044-00-02-1	BES75000	BEIGE SIGMA 7 HANDSET
500044-00-03-1	GS75000	GREY SIGMA 7 HANDSET (INT'L COMM GRP)
500044-00-40-1	BS75000	SIGMA-7 HANDSET WITH REEL (BLACK)
500044-00-42-1	BES75001	SIGMA-7 HANDSET WITH REEL (BEIGE)NO
500044-00-43-1	GS75001	SIGMA-Y HANDSET WITH REEL(GREY)NO FL
500092-210	BCP5000	BLACK CORDLESS PHONE HNDST (NO CRADLE)
500092-211	BECP5000	BEIGE CORDLESS PHONE HNDST (NO CRADL
500092-215	PCP5000	PANTONE 5435 CORDLESS PHONE HNDST (INT'L)
500092-220	BCPC5000	BLACK CORDLESS PHONE CRADLE (INT'L COMM
500092-230	BCPBS5000	BLACK CORDLESS PHONE BASE STATION (INT'L)
500092-240	WCH5000	2.4 GHZ, +28 VDC 4 WIRE CORDLESS HANDSET
500616-2	ICG5006	ICS-100 SNGL CHAN IRIDIUM TRANSCEVI(ICG)
500617	ICS500	IRIDIUMCOMMSYSTEM(ICS 200)

500617-2	ICG5006	ICS-200 DUAL CHAN IRIDIUM
500644	ICS500	IRIDIUM GPS ANTENNA (INT'L COMMUNICATION)
500905-10-10-1	S75009	SIGMA 7 HANDSET (INT'L COMM GRP)
500905-20-00-1	SH500	SIGMA 7 BLK SHORT CRADLE PHONE HANDS
500918	IF500	IRIDIUM FILTER (INT'L COMM GROUP)
501-1-10	SP501	SWITCH PANEL
50200-01	ARE-6000	IN ARM MECHANISM WITH HARNESS(LEFT)
50200-02	ARE-6000	IN ARM MECHANISM WITH HARNESS(RIGHT)
507-1-4	ADU507	AUDIO DISTRIBUTION UNIT (ADU)
517-1-1	CC517	6 CIRCUIT CONTROLLER
522-0700-023	37P-5	GLIDESLOPE ANTENNA NAV
522-0854-003	37X-2	ANTENNA, MARKER BEACON
522-0854-069	37X-2	ANTENNA, MARKER BEACON
522-1171-005	328A-2	COMPASS AMPLIFIER
522-1225-000	334C-3	DIRECT DRIVE SERVO
522-1513-005	332E-2	GYRO, DIRECTIONAL
522-1619-046	328A-2A	COMPASS AMPLIFIER
522-1660-000	618T-3	AIRBORNE TRANSCEIVER
522-1836-000	51Y-4	ADF RECEIVER
522-1837-000	137A-5	ANTENNA, ADF LOOP
522-2450-015	51RV-1	RECEIVER, NAVIGATION
522-2587-000	51Y-4A	RECEIVER ADF
522-2599-504	313N-5	CONTROL, RADIO SET
522-2615-006	137A-6	ANTENNA, ADF LOOP
522-2632-000	237Z-1	L BAND AIRBORNE ANTENNA
522-2638-003	331A-3G	INDICATOR, COURSE
522-2638-006	331A-3G	INDICATOR, COURSE
522-2638-007	331A-3G	INDICATOR, COURSE
522-2638-009	331A-3G	INDICATOR, COURSE
522-2644-011	328A-3G	AMPLIFIER, COMPASS
522-2644-013	328A-3G	AMPLIFIER, COMPASS
522-2645-000	332E3G	GYRO, DIRECTIONAL
522-2702-014	860E-2	AIRBORNE DISTANCE MEASURING EQPT
522-2702-053	860E-2	AIRBORNE DISTANCE MEASURING EQPT
522-2703-011	621A-3	TRANSPONDER, ATC
522-2703-013	621A-3	TRANSPONDER, ATC
522-2782-004	331A-6A	INDICATOR, COURSE
522-2788-015	54W-1	MONITOR, WARNING
522-2852-001	562C-4	AMPLIFIER, COMPUTER
522-2866-000	356C-4	AMPLIFIER, ISOLATION
522-2867-000	356F-3	AMPLIFIER, AUDIO
522-2900-026	562C-5	COMPUTER AMPLIFIER
522-2900-027	562C-5	COMPUTER AMPLIFIER
522-2900-099	562C-5	COMPUTER AMPLIFIER
522-2900-114	562C-5	COMPUTER AMPLIFIER
522-2901-002	APC-80	COMPUTER, AUTOPILOT
522-2901-003	APC-80	COMPUTER, AUTOPILOT

522-2901-007	APC-80	COMPUTER, AUTOPILOT
522-2901-009	APC-80	COMPUTER, AUTOPILOT
522-2901-010	APC-80	COMPUTER, AUTOPILOT
522-2901-011	APC-80	COMPUTER, AUTOPILOT
522-2901-015	APC-80	COMPUTER, AUTOPILOT
522-2901-016	APC-80	COMPUTER, AUTOPILOT
522-2901-017	APC-80	COMPUTER, AUTOPILOT
522-2901-018	APC-80	COMPUTER, AUTOPILOT
522-2901-020	APC-80	COMPUTER, AUTOPILOT
522-2901-021	APC-80	COMPUTER, AUTOPILOT
522-2901-023	APC-80	COMPUTER, AUTOPILOT
522-2901-024	APC-80	COMPUTER, AUTOPILOT
522-2901-025	APC-80	COMPUTER, AUTOPILOT
522-2901-031	APC-80	COMPUTER, AUTOPILOT
522-2901-033	APC-80	COMPUTER, AUTOPILOT
522-2901-034	APC-80	COMPUTER, AUTOPILOT
522-2901-035	APC-80	COMPUTER, AUTOPILOT
522-2901-036	APC-80	COMPUTER, AUTOPILOT
522-2996-011	51Z-4	RECEIVER MARKER BEACON
522-3073-000	331A-6D	INDICATOR, COURSE
522-3082-001	331A-3F	INDICATOR, COURSE
522-3082-002	331A-3F	INDICATOR, COURSE
522-3120-004	344C-1D	AMPLIFIER, INSTRUMENT
522-3130-000	590A-3A	CONTROL, ALTITUDE
522-3178-004	582A-4N	ERROR CORRECTOR
522-3206-004	329B-7A	FLIGHT DIRECTOR & ATTITUDE INDICATOR
522-3206-006	329B-7A	FLIGHT DIRECTOR & ATTITUDE INDICATOR
522-3206-008	329B-7A	FLIGHT DIRECTOR & ATTITUDE INDICATOR
522-3207-003	562A-5G	COMPUTER, FLIGHT
522-3226-001	344C-1F	FLIGHT DIRECTOR INDICATOR AMPLIFIER
522-3241-000	332E-4	GYRO, DIRECTIONAL
522-3466-000	334D-2-33D	SERVO, TRIM TAB
522-3487-004	329B-7C	FLIGHT DIRECTOR & ATTITUDE INDICATOR
522-3505-000	334D-2-33E	SERVO, TRIM TAB
522-3551-001	614E-4	CONTROL, PEDESTAL
522-3616-201	313N-4D	CONTROL UNIT
522-3698-002	860F-1	ALTIMETER, RADIO
522-3698-003	860F-1	ALTIMETER, RADIO
522-3743-000	51V-5	GLIDESCOPE RECEIVER
522-3761-001	137A-6A	ANTENNA, ADF LOOP
522-3763-001	346B-3	CONTROL, AUDIO
522-3763-002	346B-3	CONTROL, AUDIO
522-3763-003	346B-3	CONTROL, AUDIO
522-3851-001	345A-4B	SENSING UNIT
522-3866-001	344C-1G	AMPLIFIER, INSTRUMENT
522-3948-001	54W-1C	WARNING MONITOR
522-3948-002	54W-1C	WARNING MONITOR

522-3985-001	332D-11A	GYRO, HORIZONTAL
522-4017-002	614E2G	PEDESTAL CONTROL
522-4089-004	618M-2D	TRANSCEIVER, VHF
522-4089-204	618M-2D	TRANSCEIVER, VHF
522-4114-003	339H-1	INDICATOR, ALTITUDE
522-4140-001	437X-1	ANTENNA, ALTIMETER
522-4209-001	860E-3	AIRBORNE DISTANCE MEASURING EQPT
522-4255-001	437X-1A	ANTENNA, ALTIMETER
522-4280-001	51RV-2B	NAVIGATION RECEIVER
522-4280-101	51RV-2B	NAVIGATION RECEIVER
522-4329-001	345C-2A	SENSOR
522-4466-001	714E-6	REMOTE CONTROL
522-4529-001	329B-8G	FLIGHT DIRECTOR INDICATOR
522-4649-001	161A-1B	COUPLER, TRIM
522-4649-004	161A-1B	COUPLER, TRIM
522-4700-004	161F-1	COUPLER, AIR DATA
522-4700-015	161F1	COUPLER, AIR DATA
522-4700-019	161F1	COUPLER, AIR DATA
522-4945-001	323A-2G	MAGNETIC COMPASS
532-1-5	LD-532	28V LIGHT DIMMER
603-1-1	LD-603	LIGHT DIMMER
61-4-003	SP61	SWITCH PANEL
622-0080-001	699K-1	TRIM ADAPTER
622-0141-001	APP-80	AUTOPILOT PANEL
622-0141-003	APP-80	AUTOPILOT PANEL
622-0141-004	APP-80	AUTOPILOT PANEL
622-0141-006	APP-80	AUTOPILOT PANEL
622-0141-010	APP-80	AUTOPILOT PANEL
622-0141-011	APP-80	AUTOPILOT PANEL
622-0141-013	APP-80	AUTOPILOT PANEL
622-0141-015	APP-80	AUTOPILOT PANEL
622-0141-017	APP-80	AUTOPILOT PANEL
622-0141-022	APP-80	AUTOPILOT PANEL
622-0141-024	APP-80	AUTOPILOT PANEL
622-0141-025	APP-80	AUTOPILOT PANEL
622-0141-027	APP-80	AUTOPILOT PANEL
622-0142-002	614E-22D	SELECTOR, REMOTE
622-0181-001	345A-7B	TURN RATE SENSOR
622-0181-003	345A-7B	TURN RATE SENSOR
622-0192-001	548S-5	COUPLER, POWER AMPLIFIER
622-0192-004	548S-5	COUPLER, POWER AMPLIFIER
622-0193-001	641D-1	CAPACITOR, AUXILIARY
622-0213-001	FD-112A	FLIGHT DIRECTOR
622-0214-001	FD-112B	FLIGHT DIRECTOR
622-0224-006	ADI-85	ATTITUDE DIRECTOR INDICATOR
622-0410-001	860F-2	RADIO ALTIMETER
622-0555-003	332C-10	MAGNETIC INDICATOR

622-0555-004	332C-10	MAGNETIC INDICATOR
622-0555-008	332C-10	MAGNETIC INDICATOR
622-0757-001	FD-112C	FLIGHT DIRECTOR
622-0836-001	329B-7R-2	FLIGHT DIRECTOR & ATTITUDE INDICATOR
622-0836-003	329B-7R-2	FLIGHT DIRECTOR & ATTITUDE INDICATOR
622-0876-001	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-002	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-003	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-011	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-012	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-014	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-201	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0877-001	VIR-30M	RECEIVER, VOR/LOC/GS/MB
622-0877-002	VIR-30M	RECEIVER, VOR/LOC/GS/MB
622-0877-004	VIR-30M	RECEIVER, VOR/LOC/GS/MB
622-0944-003	614E-20R	MODE SELECTOR
622-0944-007	614E-20R	MODE SELECTOR
622-0945-003	614E-23R	MODE SELECTOR
622-0954-002	437X-1B	ANTENNA, ALTIMETER
622-0965-002	334D-6	TRIM SERVO
622-0965-003	334D-6	TRIM SERVO
622-0965-004	334D-6	TRIM SERVO
622-0965-008	334D-6	TRIM SERVO
622-0966-001	913K-1	COMPUTER CONTROL
622-1032-001	699Z-1	ADAPTER, RADIO MAGNETIC INDICATOR
622-1036-001	161H-1	GAIN PROGRAMMER
622-1116-004	562C-5B	COMPUTER AMPLIFIER
622-1116-018	562C-5B	COMPUTER AMPLIFIER
622-1116-019	562C-5B	COMPUTER AMPLIFIER
622-1204-001	339H-4	INDICATOR, ALTITUDE
622-1204-002	339H-4	INDICATOR, ALTITUDE
622-1204-003	339H-4	INDICATOR, ALTITUDE
622-1204-004	339H-4	INDICATOR, ALTITUDE
622-1205-003	339H-4A	INDICATOR, ALTITUDE
622-1205-004	339H-4A	INDICATOR, ALTITUDE
622-1233-001	DME-40	DISTANCE MEASURING EQPT
622-1234-002	339F-12	DME INDICATOR
622-1234-012	339F-12	DME INDICATOR
622-1234-013	339F-12	DME INDICATOR
622-1234-016	339F-12	DME INDICATOR
622-1234-113	339F-12	DME INDICATOR
622-1239-001	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-011	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-014	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-201	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-211	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1270-001	TDR-90	TRANSPONDER, AIR TRAFFIC CONTROL

622-1281-001	562C-5C	COMPUTER AMPLIFIER
622-1281-007	562C-5C	COMPUTER AMPLIFIER
622-1334-001	VHF-20B	COMMUNICATIONS TRANSCEIVER, VHF
622-1334-002	VHF-20B	COMMUNICATIONS TRANSCEIVER, VHF
622-1352-001	FD-112V	FLIGHT DIRECTOR
622-1352-002	FD-112V	FLIGHT DIRECTOR
622-1522-001	562C-13	AUTOPILOT COMPUTER
622-1734-012	ANS31	CONTROL DISPLAY PROCESSOR UNIT
622-1736-012	NCS31	CONTROL DISPLAY PROCESSOR UNIT
622-1736-016	NCS31	CONTROL DISPLAY PROCESSOR UNIT
622-1737-001	899P-1	RADIO ADAPTER
622-1737-002	899P-1	RADIO ADAPTER
622-1738-002	913Y-1	MODE SELECTOR
622-1742-003	990C-3D	MOUNTING
622-1879-001	VHF-20A	COMMUNICATIONS TRANSCEIVER, VHF
622-1879-002	VHF-20A	COMMUNICATIONS TRANSCEIVER, VHF
622-1910-001	VSI-80	VERTICAL SPEED INDICATOR
622-1910-003	VSI-80	VERTICAL SPEED INDICATOR
622-1910-004	VSI-80	VERTICAL SPEED INDICATOR
622-1910-005	VSI-80	VERTICAL SPEED INDICATOR
622-1910-007	VSI-80	VERTICAL SPEED INDICATOR
622-1910-008	VSI-80	VERTICAL SPEED INDICATOR
622-1920-001	899S-1	DME ADAPTER
622-1939-011	339R-1	REMOTE READOUT UNIT
622-1942-011	339R-4	REMOTE READOUT UNIT
622-1944-011	339R-6	REMOTE READOUT UNIT
622-1945-011	339R-7	REMOTE READOUT UNIT
622-1946-011	339R-8	REMOTE READOUT UNIT
622-1947-011	339R-9	REMOTE READOUT UNIT
622-1949-011	339R-11	REMOTE READOUT UNIT
622-1953-011	339R-15	REMOTE READOUT UNIT
622-1958-011	339R-1B	REMOTE READOUT UNIT
622-1959-011	339R-20	REMOTE READOUT UNIT
622-2012-011	339F-12A	DME INDICATOR
622-2012-012	339F-12A	DME INDICATOR
622-2012-013	339F-12A	DME INDICATOR
622-2012-201	339F-12A	DME INDICATOR
622-2175-001	339F-12B	DME INDICATOR
622-2175-002	339F-12B	DME INDICATOR
622-2175-003	339F-12B	DME INDICATOR
622-2175-201	339F-12B	DME INDICATOR
622-2224-001	621A-6A	AIR TRAFFIC CONTROL TRANSPONDER
622-2224-003	621A-6A	AIR TRAFFIC CONTROL TRANSPONDER
622-2256-002	FGC-80	FLIGHT GUIDANCE COMPUTER
622-2256-004	FGC-80	FLIGHT GUIDANCE COMPUTER
622-2263-001	APA-80	AUTOPILOT AMPLIFIER
622-2263-002	APA-80	AUTOPILOT AMPLIFIER

622-2263-003	APA-80	AUTOPILOT AMPLIFIER
622-2263-006	APA-80	AUTOPILOT AMPLIFIER
622-2263-007	APA-80	AUTOPILOT AMPLIFIER
622-2263-009	APA-80	AUTOPILOT AMPLIFIER
622-2263-010	APA-80	AUTOPILOT AMPLIFIER
622-2263-015	APA-80	AUTOPILOT AMPLIFIER
622-2263-016	APA-80	AUTOPILOT AMPLIFIER
622-2263-017	APA-80	AUTOPILOT AMPLIFIER
622-2263-018	APA-80	AUTOPILOT AMPLIFIER
622-2263-019	APA-80	AUTOPILOT AMPLIFIER
622-2263-023	APA-80	AUTOPILOT AMPLIFIER
622-2263-024	APA-80	AUTOPILOT AMPLIFIER
622-2263-031	APA-80	AUTOPILOT AMPLIFIER
622-2263-036	APA-80	AUTOPILOT AMPLIFIER
622-2265-002	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-006	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-026	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-027	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-030	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-031	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-044	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-045	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-058	FGP-81	FLIGHT GUIDANCE PANEL
622-2290-099	ADC-80F	AIR DATA COMPUTER
622-2292-001	ALI-80	INDICATOR, ALTIMETER
622-2292-005	ALI-80	INDICATOR, ALTIMETER
622-2292-007	ALI-80	INDICATOR, ALTIMETER
622-2292-008	ALI-80	INDICATOR, ALTIMETER
622-2293-005	MSI-80A	INDICATOR, MACH SPEED
622-2293-007	MSI-80A	INDICATOR, MACH SPEED
622-2293-017	MSI-80A	INDICATOR, MACH SPEED
622-2294-001	TAI-80A	INDICATOR, SAT/TAS
622-2294-002	TAI-80A	INDICATOR, SAT/TAS
622-2294-004	TAI-80A	INDICATOR, SAT/TAS
622-2294-013	TAI-80A	INDICATOR, SAT/TAS
622-2294-014	TAI-80A	INDICATOR, SAT/TAS
622-2313-011	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-031	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-053	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-054	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-055	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-062	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-068	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-069	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-079	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-093	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-101	FGP-80	FLIGHT GUIDANCE PANEL

622-2362-001	ADF-60A	RECEIVER,RADIO
622-2363-001	ANT-60A	ANTENNA ACTIVE
622-2366-001	334C-9A	PRIMARY SERVO
622-2366-002	334C-9A	PRIMARY SERVO
622-2366-003	334C-9A	PRIMARY SERVO
622-2485-001	WXT-150	RECEIVER-TRANSMITTER, RADIO
622-2486-001	IND-150	INDICATOR, WEATHER RADAR
622-2492-001	WXT-200	RECEIVER-TRANSMITTER, RADIO
622-2493-001	IND-201	INDICATOR, WEATHER RADAR
622-2494-002	ANT-212	ANTENNA WEATHER RADAR
622-2499-001	IND250	INDICATOR, WEATHER RADAR
622-2499-003	IND250	INDICATOR, WEATHER RADAR
622-2499-004	IND250	INDICATOR, WEATHER RADAR
622-2501-001	ANT-312	ANTENNA, WEATHER RADAR
622-2504-001	ANT-318	ANTENNA, WEATHER RADAR
622-2506-002	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-003	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-004	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-006	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-008	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-009	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-010	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-013	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-014	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-015	RMI-36	INDICATOR, RADIO MAGNETIC
622-2552-001	548S-5A	POWER AMPLIFIER-COUPLER
622-2552-002	548S-5A	POWER AMPLIFIER-COUPLER
622-2631-001	671U-4AN	RECEIVER-EXCITER
622-2631-003	671U-4AN	RECEIVER-EXCITER
622-2687-001	639U-1	POWER SUPPLY
622-2733-001	334C-11	PRIMARY SERVO
622-2733-002	334C-11	PRIMARY SERVO
622-2747-012	NCS-31R	CONTROL DISPLAY, REMOTE
622-2747-016	NCS-31R	CONTROL DISPLAY, REMOTE
622-2748-001	RPU-31A	REMOTE PROCESSOR UNIT
622-2757-001	RPU-31N	REMOTE PROCESSOR UNIT
622-2814-001	454N-3	MONITOR, TRIM SERVO
622-2855-001	ALT-55B	ALTIMETER
622-2855-002	ALT-55B	ALTIMETER
622-2855-011	ALT-55B	ALTIMETER
622-2873-001	ADF-60B	ADF RECEIVER, SIN/COS
622-2882-001	TCR-200	RECEIVER TRANSMITTER, RADIO
622-2883-001	PWR-200	POWER AMPLIFIER
622-2884-001	AAC-200	ANTENNA COUPLER, AUTO
622-2884-003	AAC-200	ANTENNA COUPLER, AUTO
622-2884-004	AAC-200	ANTENNA COUPLER, AUTO
622-2885-001	CTL-200	CONTROL HEAD

622-2892-001	IND-200	INDICATOR, WEATHER RADAR
622-2898-012	ANS-31A	AREA NAVIGATION COMPUTER
622-2899-012	NCS-31A	AREA NAV & RADIO CONTROL COMPUTER
622-2899-016	NCS-31A	AREA NAV & RADIO CONTROL COMPUTER
622-2913-001	462A-1	RELAY UNIT
622-2913-002	462A-1	RELAY UNIT
622-2921-001	860E-5	DISTANCE MEASURING EQPT
622-2923-002	PRE-80A	PRESELECTOR, ALERTER
622-2923-004	PRE-80A	PRESELECTOR, ALERTER
622-2923-005	PRE-80A	PRESELECTOR, ALERTER
622-2923-006	PRE-80A	PRESELECTOR, ALERTER
622-2923-015	PRE-80A	PRESELECTOR, ALERTER
622-2923-016	PRE-80A	PRESELECTOR, ALERTER
622-2923-024	PRE-80A	PRESELECTOR, ALERTER
622-2923-025	PRE-80A	PRESELECTOR, ALERTER
622-2923-026	PRE-80A	PRESELECTOR, ALERTER
622-2923-035	PRE-80A	PRESELECTOR, ALERTER
622-2937-001	ALI-55	INDICATOR, ALTIMETER
622-2937-002	ALI-55	INDICATOR, ALTIMETER
622-2937-004	ALI-55	INDICATOR, ALTIMETER
622-2937-009	ALI-55	INDICATOR, ALTIMETER
622-2938-001	ALI-55A	RADIO ALTITUDE INDICATOR
622-2938-002	ALI-55A	INDICATOR, ALTIMETER
622-3015-001	SVO-80A	PRIMARY SERVO
622-3016-001	SVO-80B	PRIMARY SERVO
622-3017-001	SVO-80C	PRIMARY SERVO
622-3097-001	334C-12H	PRIMARY SERVO
622-3104-001	FGC-80A	FLIGHT GUIDANCE COMPUTER
622-3106-001	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-002	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-004	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-006	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-009	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3108-003	APA-80A	AUTOPILOT AMPLIFIER
622-3108-011	APA-80A	AUTOPILOT AMPLIFIER
622-3108-016	APA-80A	AUTOPILOT AMPLIFIER
622-3108-018	APA-80A	AUTOPILOT AMPLIFIER
622-3108-021	APA-80A	AUTOPILOT AMPLIFIER
622-3108-025	APA-80A	AUTOPILOT AMPLIFIER
622-3108-031	APA-80A	AUTOPILOT AMPLIFIER
622-3108-033	APA-80A	AUTOPILOT AMPLIFIER
622-3108-035	APA-80A	AUTOPILOT AMPLIFIER
622-3109-001	APP-80A	AUTOPILOT PANEL
622-3109-004	APP-80A	AUTOPILOT PANEL
622-3109-009	APP-80A	AUTOPILOT PANEL
622-3109-011	APP-80A	AUTOPILOT PANEL
622-3109-023	APP-80A	AUTOPILOT PANEL

622-3167-041	562C-8F	YAW DAMPER COMPUTER
622-3167-055	562C-8F	YAW DAMPER COMPUTER
622-3167-061	562C-8F	YAW DAMPER COMPUTER
622-3167-099	562C-8F	YAW DAMPER COMPUTER
622-3167-199	562C-8F	YAW DAMPER COMPUTER
622-3201-001	ALT-50A	ALTIMETER
622-3201-011	ALT-50A	ALTIMETER
622-3202-001	913K-1A	COMPUTER, CONTROL
622-3202-003	913K-1A	COMPUTER, CONTROL
622-3202-013	913K-1A	COMPUTER, CONTROL
622-3202-014	913K-1A	COMPUTER, CONTROL
622-3202-016	913K-1A	COMPUTER, CONTROL
622-3234-001	TAI-80B	INDICATOR, SAT/TAS
622-3234-002	TAI-80B	INDICATOR, SAT/TAS
622-3234-004	TAI-80B	INDICATOR, SAT/TAS
622-3246-001	614E-41A	CONTROL, PITCH-TURN
622-3257-001	51RV-4B	RCVR, NAVIGATION
622-3260-001	334D-6A	TRIM SERVO
622-3338-001	WXT250	RECEIVER-TRANSMITTER, RADIO
622-3371-001	628T-1	RECEIVER-TRANSMITTER, RADIO
622-3371-002	628T-1	RECEIVER-TRANSMITTER, RADIO
622-3373-001	628T-3	RECEIVER-TRANSMITTER, RADIO
622-3594-012	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-013	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-015	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-016	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-017	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-018	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3595-001	562C-13A	COMPUTER, AUTOPILOT
622-3595-007	562C-13A	COMPUTER, AUTOPILOT
622-3595-011	562C-13A	COMPUTER, AUTOPILOT
622-3702-002	BDI-36	BEARING DISTANCE INDICATOR
622-3702-004	BDI-36	BEARING DISTANCE INDICATOR
622-3702-006	BDI-36	BEARING DISTANCE INDICATOR
622-3702-008	BDI-36	BEARING DISTANCE INDICATOR
622-3702-009	BDI-36	BEARING DISTANCE INDICATOR
622-3702-011	BDI-36	BEARING DISTANCE INDICATOR
622-3702-014	BDI-36	BEARING DISTANCE INDICATOR
622-3702-015	BDI-36	BEARING DISTANCE INDICATOR
622-3710-001	ANT-60B	ANTENNA ACTIVE
622-3711-005	MSI-80B	INDICATOR, MACH SPEED
622-3881-001	IND-40C	INDICATOR, DME
622-3881-002	IND-40C	INDICATOR, DME
622-3890-002	860F-4	ALTIMETER, RADIO
622-3890-003	860F-4	ALTIMETER, RADIO
622-3890-014	860F-4	ALTIMETER, RADIO
622-3891-001	614E-42A	SELECTOR, MODE

622-3915-001	IND-40	INDICATOR, DME
622-3915-002	IND-40	INDICATOR, DME
622-3916-001	IND-40A	INDICATOR, DME
622-3916-002	IND-40A	INDICATOR, DME
622-3917-001	IND-40B	INDICATOR, DME
622-3919-001	IND-41A	INDICATOR, DME
622-3920-002	IND-41B	INDICATOR, DME
622-3921-002	IND-41C	INDICATOR, DME
622-3975-001	ALI-80A	INDICATOR, ALTIMETER
622-3975-003	ALI-80A	INDICATOR, ALTIMETER
622-3975-004	ALI-80A	INDICATOR, ALTIMETER
622-3975-005	ALI-80A	INDICATOR, ALTIMETER
622-3975-006	ALI-80A	INDICATOR, ALTIMETER
622-3975-007	ALI-80A	INDICATOR, ALTIMETER
622-3975-011	ALI-80A	INDICATOR, ALTIMETER
622-3975-014	ALI-80A	INDICATOR, ALTIMETER
622-3979-001	AAM-751A	A/C ATTITUDE MONITOR
622-3992-019	APC-80A	COMPUTER, AUTOPILOT
622-4021-001	WXT-200A	RECEIVER-TRANSMITTER, RADIO
622-4022-001	WXT-250A	RECEIVER-TRANSMITTER, RADIO
622-4023-001	IND-200A	INDICATOR, WEATHER RADAR
622-4027-001	IND-250A	INDICATOR, WEATHER RADAR
622-4027-003	IND-250A	INDICATOR, WEATHER RADAR
622-4093-002	514A-7	CONTROL RADIO SET
622-4096-001	346D-2B	PASSENGER ADDRESS AMPLIFIER
622-4096-003	346D-2B	PASSENGER ADDRESS AMPLIFIER
622-4151-002	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-003	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-005	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-006	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-007	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-012	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-015	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-016	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4152-001	REU-84	UNIT, REMOTE ELECTRONICS
622-4160-004	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-005	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-008	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-011	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-013	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-015	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-017	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-018	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4176-001	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-002	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-003	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-004	HSI-85	INDICATOR, HORIZONTAL SITUATION

622-4176-005	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-006	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-008	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-009	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-012	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4177-001	HCP-85	PANEL, HEADING COURSE
622-4177-002	HCP-85	PANEL, HEADING COURSE
622-4177-004	HCP-85	PANEL, HEADING COURSE
622-4178-001	HCP-86	PANEL, HEADING COURSE
622-4178-003	HCP-86	PANEL, HEADING COURSE
622-4178-004	HCP-86	PANEL, HEADING COURSE
622-4185-013	VNI-80A	INDICATOR, VERTICAL NAVIGATION
622-4248-019	APA-80C	AMPLIFIER, AUTOPILOT
622-4331-001	IND-300	INDICATOR, WEATHER RADAR
622-4331-002	IND-300	INDICATOR, WEATHER RADAR
622-4331-003	IND-300	INDICATOR, WEATHER RADAR
622-4365-099	ADC-80H	AIR DATA COMPUTER
622-4371-099	ADC-80G	AIR DATA COMPUTER
622-4371-100	ADC-80G	AIR DATA COMPUTER
622-4382-004	MSI-80C	INDICATOR, MACH SPEED
622-4382-007	MSI-80C	INDICATOR, MACH SPEED
622-4382-011	MSI-80C	INDICATOR, MACH SPEED
622-4382-013	MSI-80C	INDICATOR, MACH SPEED
622-4382-015	MSI-80C	INDICATOR, MACH SPEED
622-4382-017	MSI-80C	INDICATOR, MACH SPEED
622-4382-018	MSI-80C	INDICATOR, MACH SPEED
622-4382-024	MSI-80C	INDICATOR, MACH SPEED
622-4393-001	590A-3J1	CONTROL, AIR DATA
622-4393-019	590A-3J1	CONTROL, AIR DATA
622-4394-001	590A-3K1	CONTROL, AIR DATA
622-4394-002	590A-3K1	CONTROL, AIR DATA
622-4394-004	590A-3K1	CONTROL, AIR DATA
622-4394-005	590A-3K1	CONTROL, AIR DATA
622-4394-008	590A-3K1	CONTROL, AIR DATA
622-4394-009	590A-3K1	CONTROL, AIR DATA
622-4394-013	590A-3K1	CONTROL, AIR DATA
622-4394-019	590A-3K1	CONTROL, AIR DATA
622-4394-042	590A-3K1	CONTROL, AIR DATA
622-4401-001	ADC-81A	AIR DATA COMPUTER
622-4404-001	SVO-85A	SERVO
622-4404-002	SVO-85A	SERVO
622-4404-101	SVO-85A	SERVO
622-4404-102	SVO-85A	SERVO
622-4424-001	332D-11V	GYRO, VERTICAL REFERENCE
622-4449-040	FGP-81A	FLIGHT GUIDANCE PANEL
622-4483-002	IND-31C	INDICATOR, WEATHER RADAR
622-4483-003	IND-31C	INDICATOR, WEATHER RADAR

622-4523-001	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-002	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-003	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-004	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-011	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-013	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-014	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-015	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-016	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-017	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-018	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-201	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-215	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-802	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-804	CTL-20	CONTROL, VHF COMMUNICATION
622-4524-043	CTL-30	CONTROL, NAVIGATION
622-4524-063	CTL-30	CONTROL, NAVIGATION
622-4524-064	CTL-30	CONTROL, NAVIGATION
622-4524-066	CTL-30	CONTROL, NAVIGATION
622-4524-067	CTL-30	CONTROL, NAVIGATION
622-4524-079	CTL-30	CONTROL, NAVIGATION
622-4524-086	CTL-30	CONTROL, NAVIGATION
622-4524-088	CTL-30	CONTROL, NAVIGATION
622-4524-106	CTL-30	CONTROL, NAVIGATION
622-4524-277	CTL-30	CONTROL, NAVIGATION
622-4524-278	CTL-30	CONTROL, NAVIGATION
622-4524-279	CTL-30	CONTROL, NAVIGATION
622-4524-813	CTL-30	CONTROL, NAVIGATION
622-4524-815	CTL-30	CONTROL, NAVIGATION
622-4526-001	CTL-60	CONTROL, ADF
622-4526-013	CTL-60	CONTROL, ADF
622-4526-015	CTL-60	CONTROL, ADF
622-4526-016	CTL-60	CONTROL, ADF
622-4526-019	CTL-60	CONTROL, ADF
622-4526-031	CTL-60	CONTROL, ADF
622-4526-032	CTL-60	CONTROL, ADF
622-4526-033	CTL-60	CONTROL, ADF
622-4526-034	CTL-60	CONTROL, ADF
622-4526-804	CTL-60	CONTROL, ADF
622-4527-007	CTL-90	CONTROL, TRANSPONDER
622-4527-011	CTL-90	CONTROL, TRANSPONDER
622-4527-013	CTL-90	CONTROL, TRANSPONDER
622-4527-015	CTL-90	CONTROL, TRANSPONDER
622-4527-016	CTL-90	CONTROL, TRANSPONDER
622-4527-017	CTL-90	CONTROL, TRANSPONDER
622-4527-018	CTL-90	CONTROL, TRANSPONDER
622-4527-019	CTL-90	CONTROL, TRANSPONDER

622-4527-020	CTL-90	CONTROL, TRANSPONDER
622-4527-804	CTL-90	CONTROL, TRANSPONDER
622-4540-001	DME-700	DISTANCE MEASURING EQPT
622-4540-023	DME-700	DISTANCE MEASURING EQPT
622-4540-122	DME-700	DISTANCE MEASURING EQPT
622-4542-002	LRA-700	RADIO ALTIMETER
622-4542-003	LRA-700	RADIO ALTIMETER
622-4542-020	LRA-700	RADIO ALTIMETER
622-4542-103	LRA-700	RADIO ALTIMETER
622-4542-120	LRA-700	RADIO ALTIMETER
622-4542-221	LRA-700	RADIO ALTIMETER
622-4545-001	CTL-220	CONTROL PANEL HF
622-4545-004	CTL-220	CONTROL PANEL HF
622-4545-005	CTL-220	CONTROL PANEL HF
622-4545-006	CTL-220	CONTROL PANEL HF
622-4545-013	CTL-220	CONTROL PANEL HF
622-4545-021	CTL-220	CONTROL PANEL HF
622-4565-001	332D-11T	GYRO, VERTICAL REFERENCE
622-4565-002	332D-11T	GYRO, VERTICAL REFERENCE
622-4569-001	REU-84A	UNIT, REMOTE ELECTRONICS
622-4570-001	ADI-70C	INDICATOR, ATTITUDE DIRECTOR
622-4572-001	HSI-70C	INDICATOR, HORIZONTAL SITUATION
622-4593-508	MCDP-701	PANEL, MAINTENANCE CONTROL DISPLAY
622-4717-004	MCP-701	PANEL, MODE CONTROL
622-4730-001	FPA-80	FLIGHT PROFILE ADVISORY
622-4730-002	FPA-80	FLIGHT PROFILE ADVISORY
622-4730-011	FPA-80	FLIGHT PROFILE ADVISORY
622-4730-012	FPA-80	FLIGHT PROFILE ADVISORY
622-4782-001	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-003	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-004	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-005	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-007	VSI-80A	VERTICAL SPEED INDICATOR
622-4784-001	180R-4M	ANTENNA COUPLER
622-4808-001	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-002	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-004	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-005	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-006	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-009	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4912-002	ADI-70	FLIGHT DIRECTOR & ATTITUDE INDICATOR
622-4913-001	HSI-70	INDICATOR, HORIZONTAL SITUATION
622-4913-002	HSI-70	INDICATOR, HORIZONTAL SITUATION
622-4938-001	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-002	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-004	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-005	RMI-30	INDICATOR, RADIO MAGNETIC

622-4938-006	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-007	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-027	RMI-30	INDICATOR, RADIO MAGNETIC
622-4964-001	APC-80F	COMPUTER, AUTOPILOT
622-5001-109	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-502	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-503	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-504	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-701	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5002-203	RMI-733	INDICATOR, RADIO MAGNETIC
622-5002-207	RMI-733	INDICATOR, RADIO MAGNETIC
622-5027-001	SVO-85B	SERVO
622-5027-002	SVO-85B	SERVO
622-5027-003	SVO-85B	SERVO
622-5027-101	SVO-85B	SERVO
622-5027-102	SVO-85B	SERVO
622-5028-001	SMT-85A	SERVO, MOUNT
622-5028-101	SMT-85A	SERVO, MOUNT
622-5029-001	SMT-85B	SERVO, MOUNT
622-5029-002	SMT-85B	SERVO, MOUNT
622-5029-101	SMT-85B	SERVO, MOUNT
622-5029-102	SMT-85B	SERVO, MOUNT
622-5029-111	SMT-85B	SERVO, MOUNT
622-5048-341	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5048-344	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5048-361	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5048-381	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5107-001	RNC-300	COMPUTER, RADAR NAVIGATION
622-5108-001	DCP-320	DISPLAY CONTROL PANEL
622-5108-004	DCP-320	DISPLAY CONTROL PANEL
622-5108-005	DCP-320	DISPLAY CONTROL PANEL
622-5108-006	DCP-320	DISPLAY CONTROL PANEL
622-5108-007	DCP-320	DISPLAY CONTROL PANEL
622-5108-008	DCP-320	DISPLAY CONTROL PANEL
622-5108-101	DCP-320	DISPLAY CONTROL PANEL
622-5108-103	DCP-320	DISPLAY CONTROL PANEL
622-5110-001	RDP-300	PROGRAMMER, REMOTE DATA
622-5112-001	ANS-31C	RNAV CTL 5V GY 6 POS
622-5112-002	ANS-31C	RNAV CTL 28V BK 6 PO
622-5112-003	ANS-31C	RNAV CTL, 5V, BK, 4 POSITION
622-5112-004	ANS-31C	CONTROL, R NAV
622-5129-105	WCP-701	PANEL, SINGLE CONTROL
622-5129-107	WCP-701	PANEL, SINGLE CONTROL
622-5129-108	WCP-701	PANEL, SINGLE CONTROL
622-5129-203	WCP-701	PANEL, SINGLE CONTROL
622-5129-204	WCP-701	PANEL, SINGLE CONTROL
622-5129-223	WCP-701	PANEL, SINGLE CONTROL

622-5129-802	WCP-701	PANEL, SINGLE CONTROL
622-5130-020	WCP-702	CONT. PANEL, DUAL
622-5130-021	WCP-702	CONT. PANEL, DUAL
622-5130-103	WCP-702	CONT. PANEL, DUAL
622-5130-111	WCP-702	CONT. PANEL, DUAL
622-5130-113	WCP-702	CONT. PANEL, DUAL
622-5130-114	WCP-702	CONT. PANEL, DUAL
622-5130-119	WCP-702	CONT. PANEL, DUAL
622-5130-205	WCP-702	CONT. PANEL, DUAL
622-5130-208	WCP-702	CONT. PANEL, DUAL
622-5132-104	WRT-701X	RECEIVER/TRANSMITTER
622-5132-107	WRT-701X	RECEIVER/TRANSMITTER
622-5132-109	WRT-701X	RECEIVER/TRANSMITTER
622-5132-120	WRT-701X	RECEIVER/TRANSMITTER
622-5132-622	WRT-701X	RECEIVER/TRANSMITTER
622-5132-623	WRT-701X	RECEIVER/TRANSMITTER
622-5132-633	WRT-701X	RECEIVER/TRANSMITTER
622-5133-002	WMT-701X	MOUNT, ANTENNA
622-5133-007	WMT-701X	MOUNT, ANTENNA
622-5133-102	WMT-701X	MOUNT, ANTENNA
622-5133-105	WMT-701X	MOUNT, ANTENNA
622-5134-064	WMT-702X	MOUNT, RADAR DUAL R/T
622-5135-002	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5135-102	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5135-202	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5135-802	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5136-001	WMA-702X	MOUNT, ANTENNA
622-5136-201	WMA-702X	MOUNT, ANTENNA
622-5136-202	WMA-702X	MOUNT, ANTENNA
622-5136-801	WMA-702X	MOUNT, ANTENNA
622-5136-802	WMA-702X	MOUNT, ANTENNA
622-5137-001	WFA-701X	ANTENNA RADIATOR X-BAND
622-5137-601	WFA-701X	ANTENNA RADIATOR X-BAND
622-5192-001	APC-841	COMPUTER, AUTOPILOT
622-5192-002	APC-841	COMPUTER, AUTOPILOT
622-5192-004	APC-841	COMPUTER, AUTOPILOT
622-5192-006	APC-841	COMPUTER, AUTOPILOT
622-5192-007	APC-841	COMPUTER, AUTOPILOT
622-5193-001	AAM-830	MONITOR, AIRCRAFT ATTITUDE
622-5193-002	AAM-830	MONITOR, AIRCRAFT ATTITUDE
622-5194-001	SVO-830	SERVO
622-5194-002	SVO-830	SERVO
622-5206-099	ADC-80J	AIR DATA COMPUTER
622-5206-100	ADC-80J	AIR DATA COMPUTER
622-5219-003	VHF-700	COMMUNICATIONS TRANSCEIVER, VHF
622-5219-020	VHF-700	COMMUNICATIONS TRANSCEIVER, VHF
622-5219-120	VHF-700	COMMUNICATIONS TRANSCEIVER, VHF

622-5220-002	VOR-700	RECEIVER, VOR
622-5220-020	VOR-700	RECEIVER, VOR
622-5220-103	VOR-700	RECEIVER, VOR
622-5220-120	VOR-700	RECEIVER, VOR
622-5221-002	ILS-700	RECEIVER, ILS
622-5221-102	ILS-700	RECEIVER, ILS
622-5221-120	ILS-700	RECEIVER, ILS
622-5222-002	ADF-700	RECEIVER, ADF
622-5222-020	ADF-700	RECEIVER, ADF
622-5222-102	ADF-700	RECEIVER, ADF
622-5222-120	ADF-700	RECEIVER, ADF
622-5224-001	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-002	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-003	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-004	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-005	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-006	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-007	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-009	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-010	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-012	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-013	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-015	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-016	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-021	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-023	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5272-020	HFS-700	RECEIVER/TRANSMITTER
622-5272-120	HFS-700	RECEIVER/TRANSMITTER
622-5337-001	TCR-220	RECEIVER-TRANSMITTER, RADIO
622-5342-001	PAU-700	PASSENGER ADDRESS AMPLIFIER
622-5342-101	PAU-700	PASSENGER ADDRESS AMPLIFIER
622-5350-014	ASI-80B	INDICATOR, AIRSPEED
622-5350-024	ASI-80B	INDICATOR, AIRSPEED
622-5352-014	ASI-80D	INDICATOR, AIRSPEED
622-5352-024	ASI-80D	INDICATOR, AIRSPEED
622-5352-054	ASI-80D	INDICATOR, AIRSPEED
622-5353-011	ASI-80E	INDICATOR, AIRSPEED
622-5374-002	ASA-701	ANNUNCIATOR AUTOLAND STATUS
622-5375-001	454N-2D	MONITOR, RATE CUTOUT
622-5375-002	454N-2D	MONITOR, RATE CUTOUT
622-5375-005	454N-2D	MONITOR, RATE CUTOUT
622-5377-001	628T-2A	RECEIVER-TRANSMITTER
622-5404-001	DFA-701A	ANTENNA, ADF
622-5404-002	DFA-701A	ANTENNA, ADF
622-5404-003	DFA-701A	ANTENNA, ADF
622-5441-020	APA-80F	AMPLIFIER, AUTOPILOT
622-5462-001	728U-2	RECEIVER TRANSMITTER, RADIO (Export License required)

622-5462-002	728U-2	RECEIVER TRANSMITTER, RADIO (Export License required)
622-5463-001	514A-8	CONTROL, RADIO SET (Export License required)
622-5463-011	514A-8	CONTROL, RADIO SET (Export License required)
622-5465-099	ADC-80K	AIR DATA COMPUTER
622-5465-100	ADC-80K	AIR DATA COMPUTER
622-5465-316	ADC-80K	AIR DATA COMPUTER
622-5465-618	ADC-80K	AIR DATA COMPUTER
622-5476-004	HCP-87	PANEL, HEADING COURSE
622-5510-001	999W-2A	ADAPTER SINGLE ANTENNA
622-5656-001	PAC-200	PROBE ANT. COUPLER
622-5734-001	SVO-65	SERVO, PRIMARY
622-5734-002	SVO-65	SERVO, PRIMARY
622-5735-001	SMT-65	SERVO, MOUNT
622-5735-002	SMT-65	SERVO, MOUNT
622-5735-003	SMT-65	SERVO, MOUNT
622-5735-004	SMT-65	SERVO, MOUNT
622-5735-020	SMT-65	SERVO, MOUNT
622-5735-021	SMT-65	SERVO, MOUNT
622-5735-022	SMT-65	SERVO, MOUNT
622-5735-023	SMT-65	SERVO, MOUNT
622-5735-024	SMT-65	SERVO, MOUNT
622-5735-103	SMT-65	SERVO, MOUNT
622-5735-104	SMT-65	SERVO, MOUNT
622-5735-105	SMT-65	SERVO, MOUNT
622-5735-511	SMT-65	SERVO, MOUNT
622-5796-001	APC-65	COMPUTER AUTOPILOT
622-5796-004	APC-65	COMPUTER AUTOPILOT
622-5796-006	APC-65	COMPUTER AUTOPILOT
622-5796-007	APC-65	COMPUTER AUTOPILOT
622-5796-008	APC-65	COMPUTER AUTOPILOT
622-5796-009	APC-65	COMPUTER AUTOPILOT
622-5796-010	APC-65	COMPUTER AUTOPILOT
622-5796-011	APC-65	COMPUTER AUTOPILOT
622-5796-012	APC-65	COMPUTER AUTOPILOT
622-5796-014	APC-65	COMPUTER AUTOPILOT
622-5796-016	APC-65	COMPUTER AUTOPILOT
622-5796-019	APC-65	COMPUTER AUTOPILOT
622-5796-020	APC-65	COMPUTER AUTOPILOT
622-5796-033	APC-65	COMPUTER AUTOPILOT
622-5796-107	APC-65	COMPUTER AUTOPILOT
622-5796-108	APC-65	COMPUTER AUTOPILOT
622-5796-109	APC-65	COMPUTER AUTOPILOT
622-5796-110	APC-65	COMPUTER AUTOPILOT
622-5796-113	APC-65	COMPUTER AUTOPILOT
622-5796-209	APC-65	COMPUTER AUTOPILOT
622-5796-409	APC-65	COMPUTER AUTOPILOT
622-5797-001	ADS-65	SENSOR, AIR DATA

622-5798-002	FCP-65	FLIGHT CONTROL PANEL
622-5798-004	FCP-65	FLIGHT CONTROL PANEL
622-5798-005	FCP-65	FLIGHT CONTROL PANEL
622-5798-008	FCP-65	FLIGHT CONTROL PANEL
622-5798-013	FCP-65	FLIGHT CONTROL PANEL
622-5798-014	FCP-65	FLIGHT CONTROL PANEL
622-5798-022	FCP-65	FLIGHT CONTROL PANEL
622-5799-001	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-002	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-003	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-004	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-104	MAP-65	PANEL, MODE ANNUNCIATOR
622-5812-001	FDU-70	FLUX DETECTOR UNIT
622-5812-002	FDU-70	FLUX DETECTOR UNIT
622-5812-004	FDU-70	FLUX DETECTOR UNIT
622-5812-006	FDU-70	FLUX DETECTOR UNIT
622-5940-001	IND-220	INDICATOR, WEATHER RADAR
622-5940-008	IND-220	INDICATOR, WEATHER RADAR
622-5941-001	IND-270	INDICATOR, WEATHER RADAR
622-5941-002	IND-270	INDICATOR, WEATHER RADAR
622-5942-001	RNC-300A	COMPUTER RADAR NAVIGATION
622-5952-001	FGC-65	FLIGHT GUIDANCE COMPUTER
622-5952-020	FGC-65	FLIGHT GUIDANCE COMPUTER
622-5962-001	628T-3A	TRANSCEIVER, HF
622-6019-001	SSS-65	SENSOR, SLIP SKID
622-6020-001	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-002	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-011	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-012	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-021	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-022	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6021-001	DCP-85B	DISPLAY CONTROL PANEL
622-6021-002	DCP-85B	DISPLAY CONTROL PANEL
622-6021-003	DCP-85B	DISPLAY CONTROL PANEL
622-6022-002	DPU-85	DISPLAY PROCESSOR UNIT
622-6022-012	DPU-85	DISPLAY PROCESSOR UNIT
622-6089-102	DSP-701A	DISPLAY SELECT PANEL
622-6090-001	MFD-85	MULTIFUNCTION DISPLAY
622-6090-002	MFD-85	MULTIFUNCTION DISPLAY
622-6091-002	MPU-85	PROCESSOR, MULTIFUNCTION
622-6091-012	MPU-85	PROCESSOR, MULTIFUNCTION
622-6092-001	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-002	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-011	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-012	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-021	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-032	WXP-85A	CONTROL PANEL, WEATHER RADAR

622-6093-001	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6093-011	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6093-012	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6093-032	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6105-023	MSI-80D	INDICATOR, MACH SPEED
622-6105-043	MSI-80D	INDICATOR, MACH SPEED
622-6135-001	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-003	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-011	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-012	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-013	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-014	CCU-65	UNIT, CONTROL COMPENSATION
622-6136-001	DGS-65	GYRO, DIRECTIONAL
622-6136-002	DGS-65	GYRO, DIRECTIONAL
622-6137-001	VIR-32	NAVIGATION RECEIVER
622-6137-201	VIR-32	NAVIGATION RECEIVER
622-6140-002	SMT-65B	SERVO, MOUNT
622-6152-001	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-002	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-011	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-023	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-031	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-033	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6153-001	VHF-22B	COMMUNICATIONS TRANSCEIVER, VHF
622-6153-002	VHF-22B	COMMUNICATIONS TRANSCEIVER, VHF
622-6174-001	RCP-65	REMOTE COMPENSATION PANEL
622-6189-001	ICU-85	INTERNAL COMPENSATION UNIT
622-6189-002	ICU-85	INTERNAL COMPENSATION UNIT
622-6190-113	AHC-85	ATTITUDE HEADING COMPUTER
622-6190-204	AHC-85	ATTITUDE HEADING COMPUTER
622-6195-007	FCC-86	FLIGHT CONTROL COMPUTER
622-6195-008	FCC-86	FLIGHT CONTROL COMPUTER
622-6195-205	FCC-86	FLIGHT CONTROL COMPUTER
622-6195-315	FCC-86	FLIGHT CONTROL COMPUTER
622-6197-001	EFD-74	ELECTRONIC FLIGHT DISPLAY
622-6197-002	EFD-74	ELECTRONIC FLIGHT DISPLAY
622-6198-001	HPU-74	HSI PROCESSOR UNIT
622-6198-002	HPU-74	HSI PROCESSOR UNIT
622-6198-003	HPU-74	HSI PROCESSOR UNIT
622-6198-012	HPU-74	HSI PROCESSOR UNIT
622-6198-013	HPU-74	HSI PROCESSOR UNIT
622-6198-102	HPU-74	HSI PROCESSOR UNIT
622-6198-103	HPU-74	HSI PROCESSOR UNIT
622-6198-112	HPU-74	HSI PROCESSOR UNIT
622-6199-001	HPU-74A	HSI PROCESSOR UNIT
622-6200-001	HCP-74	HSI CONTROL PANEL
622-6200-002	HCP-74	HSI CONTROL PANEL

622-6200-003	HCP-74	HSI CONTROL PANEL
622-6208-001	APP-85	AUTOPILOT PANEL
622-6208-003	APP-85	AUTOPILOT PANEL
622-6208-004	APP-85	AUTOPILOT PANEL
622-6208-005	APP-85	AUTOPILOT PANEL
622-6208-044	APP-85	AUTOPILOT PANEL
622-6208-103	APP-85	AUTOPILOT PANEL
622-6208-104	APP-85	AUTOPILOT PANEL
622-6208-204	APP-85	AUTOPILOT PANEL
622-6208-208	APP-85	AUTOPILOT PANEL
622-6208-223	APP-85	AUTOPILOT PANEL
622-6208-227	APP-85	AUTOPILOT PANEL
622-6208-303	APP-85	AUTOPILOT PANEL
622-6208-403	APP-85	AUTOPILOT PANEL
622-6209-001	MSP-85	MODE SELECT PANEL
622-6209-002	MSP-85	MODE SELECT PANEL
622-6209-007	MSP-85	MODE SELECT PANEL
622-6209-008	MSP-85	MODE SELECT PANEL
622-6209-010	MSP-85	MODE SELECT PANEL
622-6209-011	MSP-85	MODE SELECT PANEL
622-6209-019	MSP-85	MODE SELECT PANEL
622-6209-020	MSP-85	MODE SELECT PANEL
622-6209-105	MSP-85	MODE SELECT PANEL
622-6209-111	MSP-85	MODE SELECT PANEL
622-6209-205	MSP-85	MODE SELECT PANEL
622-6209-206	MSP-85	MODE SELECT PANEL
622-6209-305	MSP-85	MODE SELECT PANEL
622-6209-306	MSP-85	MODE SELECT PANEL
622-6232-001	ADP-80	PROCESSOR, AIR DATA
622-6233-099	ADC-80L	AIR DATA COMPUTER
622-6233-100	ADC-80L	AIR DATA COMPUTER
622-6234-015	PRE-80L	PRESELECT OR ALERTER
622-6238-001	ALI-80L	INDICATOR, ALTIMETER
622-6263-001	DME-42	DISTANCE MEASURING EQPT
622-6263-003	DME-42	DISTANCE MEASURING EQPT
622-6318-002	CHP-85A	COURSE HEADING PANEL
622-6319-001	CHP-85B	COURSE HEADING PANEL
622-6319-002	CHP-85B	COURSE HEADING PANEL
622-6320-002	DCP-85A	DISPLAY CONTROL PANEL
622-6332-001	ADS-65C	SENSOR, AIR DATA
622-6342-012	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-014	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-022	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-023	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-024	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6383-012	RSP-85A	REVERSIONARY SWITCHING PANEL
622-6383-102	RSP-85A	REVERSIONARY SWITCHING PANEL

622-6383-112	RSP-85A	REVERSIONARY SWITCHING PANEL
622-6389-001	VHF-21A	COMMUNICATIONS TRANSCEIVER, VHF
622-6389-002	VHF-21A	COMMUNICATIONS TRANSCEIVER, VHF
622-6389-011	VHF-21A	COMMUNICATIONS TRANSCEIVER, VHF
622-6390-001	VHF-21B	COMMUNICATIONS TRANSCEIVER, VHF
622-6390-002	VHF-21B	COMMUNICATIONS TRANSCEIVER, VHF
622-6392-001	CWC-80	COMPARATOR WARNING COMPUTER
622-6404-002	CHP-85C	COURSE HEADING PANEL
622-6405-004	DCP-85C	DISPLAY CONTROL PANEL
622-6408-001	CHP-86A	COURSE HEADING PANEL
622-6408-002	CHP-86A	COURSE HEADING PANEL
622-6411-001	SMT-65D	SERVO, MOUNT
622-6411-002	SMT-65D	SERVO, MOUNT
622-6415-015	MSI-80E	INDICATOR, MACH SPEED
622-6470-002	AAC-200P	ANTENNA COUPLER
622-6471-002	AAC-220P	ANTENNA COUPLER SHUNT
622-6472-001	DSA-220	ADAPTER, DUAL SYSTEM
622-6472-002	DSA-220	ADAPTER, DUAL SYSTEM
622-6475-005	ADC-82A	AIR DATA COMPUTER
622-6475-026	ADC-82A	AIR DATA COMPUTER
622-6475-099	ADC-82A	AIR DATA COMPUTER
622-6475-100	ADC-82A	AIR DATA COMPUTER
622-6475-627	ADC-82A	AIR DATA COMPUTER
622-6509-103	SMT-86B	SERVO, MOUNT
622-6513-001	ANT-312A	ANTENNA, WEATHER RADAR
622-6514-004	WXI-711	INDICATOR, WEATHER RADAR
622-6514-222	WXI-711	INDICATOR, WEATHER RADAR
622-6520-001	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-003	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-004	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-005	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-006	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-007	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-008	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-009	CTL-22	CONTROL, VHF COMMUNICATION
622-6521-001	CTL-32	CONTROL, NAVIGATION
622-6521-007	CTL-32	CONTROL, NAVIGATION
622-6521-008	CTL-32	CONTROL, NAVIGATION
622-6521-009	CTL-32	CONTROL, NAVIGATION
622-6521-011	CTL-32	CONTROL, NAVIGATION
622-6521-012	CTL-32	CONTROL, NAVIGATION
622-6521-013	CTL-32	CONTROL, NAVIGATION
622-6521-014	CTL-32	CONTROL, NAVIGATION
622-6521-015	CTL-32	CONTROL, NAVIGATION
622-6521-016	CTL-32	CONTROL, NAVIGATION
622-6521-025	CTL-32	CONTROL, NAVIGATION
622-6522-001	CTL-62	CONTROL, ADF

622-6522-002	CTL-62	CONTROL, ADF
622-6522-003	CTL-62	CONTROL, ADF
622-6522-004	CTL-62	CONTROL, ADF
622-6522-005	CTL-62	CONTROL, ADF
622-6522-006	CTL-62	CONTROL, ADF
622-6522-007	CTL-62	CONTROL, ADF
622-6522-008	CTL-62	CONTROL, ADF
622-6522-009	CTL-62	CONTROL, ADF
622-6522-010	CTL-62	CONTROL, ADF
622-6522-011	CTL-62	CONTROL, ADF
622-6522-012	CTL-62	CONTROL, ADF
622-6522-013	CTL-62	CONTROL, ADF
622-6522-015	CTL-62	CONTROL, ADF
622-6522-016	CTL-62	CONTROL, ADF
622-6522-017	CTL-62	CONTROL, ADF
622-6523-001	CTL-92	CONTROL, TRANSPONDER
622-6523-002	CTL-92	CONTROL, TRANSPONDER
622-6523-003	CTL-92	CONTROL, TRANSPONDER
622-6523-004	CTL-92	CONTROL, TRANSPONDER
622-6523-005	CTL-92	CONTROL, TRANSPONDER
622-6523-006	CTL-92	CONTROL, TRANSPONDER
622-6523-007	CTL-92	CONTROL, TRANSPONDER
622-6523-008	CTL-92	CONTROL, TRANSPONDER
622-6523-013	CTL-92	CONTROL, TRANSPONDER
622-6523-201	CTL-92	CONTROL, TRANSPONDER
622-6523-203	CTL-92	CONTROL, TRANSPONDER
622-6523-204	CTL-92	CONTROL, TRANSPONDER
622-6523-205	CTL-92	CONTROL, TRANSPONDER
622-6523-206	CTL-92	CONTROL, TRANSPONDER
622-6523-207	CTL-92	CONTROL, TRANSPONDER
622-6523-208	CTL-92	CONTROL, TRANSPONDER
622-6523-213	CTL-92	CONTROL, TRANSPONDER
622-6524-001	IND-42A	INDICATOR, DME
622-6524-002	IND-42A	INDICATOR, DME
622-6524-003	IND-42A	INDICATOR, DME
622-6524-004	IND-42A	INDICATOR, DME
622-6535-012	EFD-86A	ELECTRONIC FLIGHT DISPLAY
622-6535-022	EFD-86A	ELECTRONIC FLIGHT DISPLAY
622-6557-001	TCR-230	RECEIVER-XMTR, RADIO
622-6557-011	TCR-230	RECEIVER-XMTR, RADIO
622-6557-013	TCR-230	RECEIVER-XMTR, RADIO
622-6567-001	CWC-65	COMPARATOR WARNING COMPUTER
622-6590-001	CAD-62	ADAPTER, CONTROL
622-6590-002	CAD-62	ADAPTER, CONTROL
622-6591-001	ANT-42	ANTENNA DME
622-6607-006	DCP-270	DISPLAY CONTROL PANEL
622-6608-006	DCP-325	DISPLAY CONTROL PANEL

622-6608-009	DCP-325	DISPLAY CONTROL PANEL
622-6614-001	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-002	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-003	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-021	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-022	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-023	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-024	CTL-230	CONTROL, VHF COMMUNICATION
622-6667-001	PWR-230	POWER AMPLIFIER
622-6684-001	APP-65A	AUTOPILOT PANEL
622-6684-002	APP-65A	AUTOPILOT PANEL
622-6684-003	APP-65A	AUTOPILOT PANEL
622-6684-004	APP-65A	AUTOPILOT PANEL
622-6684-005	APP-65A	AUTOPILOT PANEL
622-6684-006	APP-65A	AUTOPILOT PANEL
622-6684-106	APP-65A	AUTOPILOT PANEL
622-6717-004	SVO-85C	SERVO
622-6717-104	SVO-85C	SERVO
622-6718-001	SMT-85C	SERVO, MOUNT
622-6718-101	SMT-85C	SERVO, MOUNT
622-6718-102	SMT-85C	SERVO, MOUNT
622-6719-103	SMT-86C	SERVO, MOUNT
622-6728-011	ASI-80F	INDICATOR, AIRSPEED
622-6785-011	MSI-80F	INDICATOR, MACH SPEED
622-6785-015	MSI-80F	INDICATOR, MACH SPEED
622-6785-017	MSI-80F	INDICATOR, MACH SPEED
622-6785-021	MSI-80F	INDICATOR, MACH SPEED
622-6785-131	MSI-80F	INDICATOR, MACH SPEED
622-6793-001	ANT-52	ANTENNA, RADIO ALTIMETER
622-6794-001	DCP-85E	DISPLAY CONTROL PANEL
622-6794-002	DCP-85E	DISPLAY CONTROL PANEL
622-6795-003	DSP-85	DISPLAY SELECT PANEL
622-6827-021	HFP-712	RECEIVER/TRANSMITTER
622-6827-022	HFP-712	RECEIVER/TRANSMITTER
622-6829-001	DFP-712	DIRECTION FINDER PANEL
622-6829-022	DFP-712	DIRECTION FINDER PANEL
622-6830-001	DFP-713	DIRECTION FINDER PANEL
622-6830-022	DFP-713	DIRECTION FINDER PANEL
622-6831-002	VFP-712	PANEL, VHF FREQUENCY
622-6831-022	VFP-712	PANEL, VHF FREQUENCY
622-6898-001	CHP-85D	COURSE HEADING PANEL
622-6898-002	CHP-85D	COURSE HEADING PANEL
622-6899-001	CHP-86B	COURSE HEADING PANEL
622-6899-002	CHP-86B	COURSE HEADING PANEL
622-6900-007	APP-85A	AUTOPILOT PANEL
622-7154-001	FMM-85	FAN MONITOR MODULE
622-7154-002	FMM-85	FAN MONITOR MODULE

622-7194-001	VIR-432	NAVIGATION RECEIVER
622-7194-101	VIR-432	NAVIGATION RECEIVER
622-7194-201	VIR-432	NAVIGATION RECEIVER
622-7207-002	SDD-640	SENSOR DISPLAY DRIVER
622-7208-001	ADC-850	AIR DATA COMPUTER
622-7208-002	ADC-850	AIR DATA COMPUTER
622-7209-001	RAC-870	CONVERTER, RADIO ALTIMETER
622-7209-002	RAC-870	CONVERTER, RADIO ALTIMETER
622-7209-003	RAC-870	CONVERTER, RADIO ALTIMETER
622-7209-004	RAC-870	CONVERTER, RADIO ALTIMETER
622-7236-001	MFD-85A	MULTI-FUNCTIONAL DISPLAY
622-7236-002	MFD-85A	MULTI-FUNCTIONAL DISPLAY
622-7236-011	MFD-85A	MULTI-FUNCTIONAL DISPLAY
622-7236-012	MFD-85A	MULTI-FUNCTIONAL DISPLAY
622-7244-001	DPU-85A	DISPLAY PROCESSOR UNIT
622-7244-002	DPU-85A	DISPLAY PROCESSOR UNIT
622-7245-001	DPU-85B	DISPLAY PROCESSOR UNIT
622-7247-001	DPU-86A	DISPLAY PROCESSOR UNIT
622-7248-001	DPU-86C	DISPLAY PROCESSOR UNIT
622-7248-002	DPU-86C	DISPLAY PROCESSOR UNIT
622-7248-003	DPU-86C	DISPLAY PROCESSOR UNIT
622-7250-001	MPU-85A	MULTIFUNCTIONAL PROCESSOR UNIT
622-7250-002	MPU-85A	MULTIFUNCTIONAL PROCESSOR UNIT
622-7251-001	MPU-85B	MULTIFUNCTIONAL PROCESSOR UNIT
622-7253-001	MPU-86A	MULTIFUNCTIONAL PROCESSOR UNIT
622-7254-002	MPU-86C	MULTIFUNCTIONAL PROCESSOR UNIT
622-7254-003	MPU-86C	MULTIFUNCTIONAL PROCESSOR UNIT
622-7292-001	VHF-422A	COMMUNICATIONS TRANSCEIVER, VHF
622-7292-101	VHF-422A	COMMUNICATIONS TRANSCEIVER, VHF
622-7292-123	VHF-422A	COMMUNICATIONS TRANSCEIVER, VHF
622-7293-101	VHF-422B	COMMUNICATIONS TRANSCEIVER, VHF
622-7293-121	VHF-422B	COMMUNICATIONS TRANSCEIVER, VHF
622-7309-001	DME-442	DISTANCE MEASURING EQPT
622-7309-101	DME-442	DISTANCE MEASURING EQPT
622-7318-001	IND-42C	INDICATOR, DME
622-7318-003	IND-42C	INDICATOR, DME
622-7318-004	IND-42C	INDICATOR, DME
622-7337-001	WXT-250B	RECEIVER-TRANSMITTER, RADIO
622-7338-001	WXP-85A	WEATHER RADAR CONTROL PANEL
622-7338-002	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-021	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-022	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-041	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-042	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7346-001	CAD-870	ADAPTER, CONTROL
622-7346-002	CAD-870	ADAPTER, CONTROL
622-7375-002	490S-4	ANTENNA COUPLER (Export License required)

622-7375-003	490S4	ANTENNA COUPLER
622-7382-001	ADF-462	RECEIVER,RADIO
622-7382-101	ADF-462	RECEIVER,RADIO
622-7383-001	ANT-462A	ANTENNA, AUTOMATIC DIRECTION FINDER
622-7384-001	ANT-462B	ANTENNA, ADF
622-7386-001	AHC-85D	ATTITUDE HEADING COMPUTER
622-7397-002	CHP-850	COURSE HEADING PANEL
622-7397-004	CHP-850	COURSE HEADING PANEL
622-7397-006	CHP-850	COURSE HEADING PANEL
622-7398-002	AAP-850	ALTITUDE AWARENESS PANEL
622-7400-004	DBU-850	DATA BASE UNIT
622-7405-004	IOC-851	IN/OUT CONCENTRATOR
622-7410-102	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-201	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-202	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-302	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-402	FCC-850	FLIGHT CONTROL COMPUTER
622-7411-204	APP-85D	AUTOPILOT PANEL
622-7414-002	DAU-850	DATA ACQUISITION UNIT
622-7448-001	DPU-85G	DISPLAY PROCESSOR UNIT
622-7448-002	DPU-85G	DISPLAY PROCESSOR UNIT
622-7448-003	DPU-85G	DISPLAY PROCESSOR UNIT
622-7454-001	MPU-85G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7454-002	MPU-85G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7454-003	MPU-85G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7476-411	FCC-1000	FLIGHT CONTROL COMPUTER
622-7476-501	FCC-1000	FLIGHT CONTROL COMPUTER
622-7477-502	FMP-1000	FLIGHT MODE PANEL
622-7478-411	FAC-1000	FLIGHT AUGMENTATION COMPUTER
622-7478-501	FAC-1000	FLIGHT AUGMENTATION COMPUTER
622-7479-411	MCC-1000	MAINTENANCE CONTROL COMPUTER
622-7480-301	RMP-1000	REMOTE MAINTENANCE PANEL
622-7484-401	DU-1000	DISPLAY UNIT
622-7484-422	DU-1000	DISPLAY UNIT
622-7485-401	DCP-1000	DISPLAY CONTROL PANEL
622-7485-421	DCP-1000	DISPLAY CONTROL PANEL
622-7486-301	ASP-1000	ALTIMETER SET PANEL
622-7491-010	FCC-85B	FLIGHT CONTROL COMPUTER
622-7491-210	FCC-85B	FLIGHT CONTROL COMPUTER
622-7492-010	FCC-86B	FLIGHT CONTROL COMPUTER
622-7492-210	FCC-86B	FLIGHT CONTROL COMPUTER
622-7493-018	FCC-86C	FLIGHT CONTROL COMPUTER
622-7493-212	FCC-86C	FLIGHT CONTROL COMPUTER
622-7562-034	APA-80G	AMPLIFIER, AUTOPILOT
622-7576-099	ADC-80N	AIR DATA COMPUTER
622-7576-554	ADC-80N	AIR DATA COMPUTER
622-7577-099	ADC-80Q	AIR DATA COMPUTER

622-7577-100	ADC-80Q	AIR DATA COMPUTER
622-7580-002	WXP-85D	WEATHER RADAR CONTROL PANEL
622-7580-022	WXP-85D	WEATHER RADAR CONTROL PANEL
622-7580-041	WXP-85D	WEATHER RADAR CONTROL PANEL
622-7648-004	PRE-80B	PRESELECT OR ALERTER
622-7648-006	PRE-80B	PRESELECT OR ALERTER
622-7648-035	PRE-80B	PRESELECT OR ALERTER
622-7667-001	DDA-42	DIGITAL DISTRIBUTION ADAPTER
622-7689-002	VNI80C	INDICATOR, VERTICAL NAVIGATION
622-7689-003	VNI80C	INDICATOR, VERTICAL NAVIGATION
622-7689-004	VNI80C	INDICATOR, VERTICAL NAVIGATION
622-7689-005	VNI-80C	INDICATOR, VERTICAL NAVIGATION
622-7690-001	VNI-80D	INDICATOR, VERTICAL NAVIGATION
622-7690-003	VNI-80D	INDICATOR, VERTICAL NAVIGATION
622-7690-005	VNI-80D	INDICATOR, VERTICAL NAVIGATION
622-7695-001	CAD-870G	ADAPTER
622-7695-002	CAD-870G	ADAPTER
622-7710-001	DPU-86G	DISPLAY PROCESSOR UNIT
622-7710-002	DPU-86G	DISPLAY PROCESSOR UNIT
622-7711-002	DPU-86H	DISPLAY PROCESSOR UNIT
622-7711-003	DPU-86H	DISPLAY PROCESSOR UNIT
622-7713-001	DPU-86K	DISPLAY PROCESSOR UNIT
622-7713-003	DPU-86K	DISPLAY PROCESSOR UNIT
622-7713-004	DPU-86K	DISPLAY PROCESSOR UNIT
622-7715-001	MPU-86G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7715-002	MPU-86G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7716-002	MPU-86H	MULTIFUNCTIONAL PROCESSOR UNIT
622-7716-003	MPU-86H	MULTIFUNCTIONAL PROCESSOR UNIT
622-7718-002	MPU-86K	MULTIFUNCTIONAL PROCESSOR UNIT
622-7718-003	MPU-86K	MULTIFUNCTIONAL PROCESSOR UNIT
622-7718-004	MPU-86K	MULTIFUNCTIONAL PROCESSOR UNIT
622-7728-002	DSP-85A	DISPLAY SELECT PANEL
622-7728-003	DSP-85A	DISPLAY SELECT PANEL
622-7728-004	DSP-85A	DISPLAY SELECT PANEL
622-7737-001	ADM-850	AIRCRAFT DATA MODULE
622-7737-006	ADM-850	AIRCRAFT DATA MODULE
622-7737-007	ADM-850	AIRCRAFT DATA MODULE
622-7875-001	CHP-86C	COURSE HEADING PANEL
622-7875-002	CHP-86C	COURSE HEADING PANEL
622-7876-011	MFD-85B	MULTI-FUNCTIONAL DISPLAY
622-7876-012	MFD-85B	MULTI-FUNCTIONAL DISPLAY
622-7877-001	CEU-85	CHECKLIST ENTRY UNIT
622-7878-201	TPR-720	TRANSPONDER
622-7878-301	TPR-720	TRANSPONDER
622-7890-018	APC-65A	COMPUTER AUTOPILOT
622-7890-118	APC-65A	COMPUTER AUTOPILOT
622-7910-301	SVT-1000A	TRIM SERVO

622-7925-303	SVO-1000	SERVO, PRIMARY
622-7927-302	SMT-1001	SERVO, MOUNT
622-7957-302	MFCP-1000A	MULTIFUNCTION CONTROL PANEL
622-7957-311	MFCP-1000A	MULTIFUNCTION CONTROL PANEL
622-7978-219	FCC-86D	FLIGHT CONTROL COMPUTER
622-7978-321	FCC-86D	FLIGHT CONTROL COMPUTER
622-7998-003	EDU-766D	ELECTRONIC DISPLAY UNIT
622-7998-013	EDU-766D	ELECTRONIC DISPLAY UNIT
622-7999-003	EDU-776D	ELECTRONIC DISPLAY UNIT
622-7999-013	EDU-776D	ELECTRONIC DISPLAY UNIT
622-8000-006	EFIP-701D	ELECTRONIC FLIGHT INSTRUMENT PROCESSOR
622-8001-350	EFIC-701D	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-8001-351	EFIC-701D	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-8001-352	EFIC-701D	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-8047-501	DU-1000A	DISPLAY UNIT
622-8051-001	ADC-85	AIR DATA COMPUTER
622-8051-002	ADC-85	AIR DATA COMPUTER
622-8051-003	ADC-85	AIR DATA COMPUTER
622-8051-004	ADC-85	AIR DATA COMPUTER
622-8051-005	ADC-85	AIR DATA COMPUTER
622-8069-302	SMT-1000A	SERVO, MOUNT
622-8069-304	SMT-1000A	SERVO, MOUNT
622-8070-099	ADC-80R	AIR DATA COMPUTER
622-8070-100	ADC-80R	AIR DATA COMPUTER
622-8071-302	SVL-1000	LINEAR ACTUATOR
622-8105-013	ADC-82L	AIR DATA COMPUTER
622-8105-099	ADC-82L	AIR DATA COMPUTER
622-8111-002	HF-9010	REMOTE CONTROL
622-8111-005	HF-9010	REMOTE CONTROL
622-8111-006	HF-9010	REMOTE CONTROL
622-8112-001	HF-9030	RECEIVER TRANSMITTER
622-8112-002	HF-9030	RECEIVER TRANSMITTER
622-8112-003	HF-9030	RECEIVER TRANSMITTER
622-8114-002	HF-9041	RECEIVER TRANSMITTER
622-8116-001	MT-9030A	MOUNTING BASE, ELECT EQUIP
622-8122-001	MT-9041A	MOUNTING BASE, ELECT EQUIP
622-8125-002	HF-9031	RECEIVER TRANSMITTER
622-8128-002	HF-9032	RECEIVER TRANSMITTER
622-8128-003	HF-9032	RECEIVER TRANSMITTER
622-8148-002	DCP-85F	DISPLAY CONTROL PANEL
622-8154-001	FDU-70A	FLUX DETECTOR UNIT
622-8154-003	FDU-70A	FLUX DETECTOR UNIT
622-8158-001	ADA-85	AIR DATA ADAPTER
622-8196-013	FCC-86E	FLIGHT CONTROL COMPUTER
622-8196-014	FCC-86E	FLIGHT CONTROL COMPUTER
622-8196-204	FCC-86E	FLIGHT CONTROL COMPUTER
622-8315-102	APC-65B	COMPUTER AUTOPILOT

622-8315-202	APC-65B	COMPUTER AUTOPILOT
622-8315-302	APC-65B	COMPUTER AUTOPILOT
622-8315-402	APC-65B	COMPUTER AUTOPILOT
622-8329-100	ADC-82C	AIR DATA COMPUTER
622-8330-003	MSP-850A	MODE SELECT PANEL
622-8330-004	MSP-850A	MODE SELECT PANEL
622-8330-005	MSP-850A	MODE SELECT PANEL
622-8332-002	CAD-31	ADAPTER, CONTROL
622-8334-002	ALI-850A	INDICATOR, ALTIMETER
622-8335-031	ASI-850A	INDICATOR, AIRSPEED
622-8336-011	SDU-640A	SENSOR DISPLAY UNIT
622-8363-002	CDU-850A	CONTROL DISPLAY UNIT
622-8364-001	ICC-850A	INTEGRATED CARD CAGE
622-8364-002	ICC-850A	INTEGRATED CARD CAGE
622-8365-001	PWR-851A	POWER SUPPLY
622-8365-002	PWR-851A	POWER SUPPLY
622-8365-003	PWR-851A	POWER SUPPLY
622-8393-001	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-002	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-003	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-004	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-012	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-013	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-014	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8394-011	WXP-850B	CONTROL PANEL, WEATHER RADAR
622-8394-012	WXP-850B	CONTROL PANEL, WEATHER RADAR
622-8394-013	WXP-850B	CONTROL PANEL, WEATHER RADAR
622-8434-003	APC-65C	COMPUTER AUTOPILOT
622-8439-003	RTA-852	RECEIVER/TRANSMITTER/ANTENNA
622-8439-004	RTA-852	RECEIVER/TRANSMITTER/ANTENNA
622-8439-011	RTA-852	RECEIVER/TRANSMITTER/ANTENNA
622-8440-003	RTA-854	RECEIVER/TRANSMITTER/ANTENNA
622-8440-004	RTA-854	RECEIVER/TRANSMITTER/ANTENNA
622-8440-011	RTA-854	RECEIVER/TRANSMITTER/ANTENNA
622-8441-003	RTA-858	RECEIVER/TRANSMITTER/ANTENNA
622-8441-004	RTA-858	RECEIVER/TRANSMITTER/ANTENNA
622-8441-011	RTA-858	RECEIVER/TRANSMITTER/ANTENNA
622-8444-001	DPU-85M	DISPLAY PROCESSOR UNIT
622-8444-002	DPU-85M	DISPLAY PROCESSOR UNIT
622-8445-001	MPU-85M	MULTIFUNCTIONAL PROCESSOR UNIT
622-8445-002	MPU-85M	MULTIFUNCTIONAL PROCESSOR UNIT
622-8526-003	PFD-870	PRIMARY FLIGHT DISPLAY
622-8526-017	PFD-870	PRIMARY FLIGHT DISPLAY
622-8527-003	ND-870	DISPLAY, NAVIGATION
622-8527-017	ND-870	DISPLAY, NAVIGATION
622-8528-015	MFD-870	MULTI-FUNCTIONAL DISPLAY
622-8528-017	MFD-870	MULTI-FUNCTIONAL DISPLAY

622-8529-015	ECD-870	ENGINE / CAUTION DISPLAY
622-8588-105	DU-7000	DISPLAY UNIT
622-8589-105	EIU-7000	EFIS/EICAS INTERFACE UNIT
622-8590-108	DCP-7000	DISPLAY CONTROL PANEL
622-8590-112	DCP-7000	DISPLAY CONTROL PANEL
622-8591-100	DSP-7000	DISPLAY SELECT PANEL
622-8592-105	CMC-7000	CENTRAL MAINTEN CMPTR
622-8594-001	DTP-722	TRANSPONDER PANEL
622-8594-021	DTP-722	TRANSPONDER PANEL
622-8613-002	BIA-32	BEARING INTERFACE ADAPTOR
622-8630-002	FGC-80G	FLIGHT GUIDANCE COMPUTER
622-8678-002	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-004	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-005	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-007	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-008	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-012	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-014	DPU-85N	DISPLAY PROCESSOR UNIT
622-8679-004	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-005	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-007	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-008	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-012	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-014	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8680-001	DCP-85G	DISPLAY CONTROL PANEL
622-8680-002	DCP-85G	DISPLAY CONTROL PANEL
622-8681-003	CDC-850A	CONTROL DISPLAY COUPLER
622-8682-003	FMC-851A	FLIGHT MANAGEMENT COMPUTER
622-8683-003	FMC-852A	FLIGHT MANAGEMENT COMPUTER
622-8692-004	ADM-85	MODULE, AIR DATA
622-8692-005	ADM-85	MODULE, AIR DATA
622-8692-008	ADM-85	MODULE, AIR DATA
622-8692-014	ADM-85	MODULE, AIR DATA
622-8692-015	ADM-85	MODULE, AIR DATA
622-8701-002	RAA-700	RADIO ALTIMETER ANTENNA
622-8701-003	RAA-700	RADIO ALTIMETER ANTENNA
622-8757-106	FCC-702	FLIGHT CONTROL COMPUTER
622-8780-102	MCP-704	MODE CONTROL PANEL
622-8780-103	MCP-704	MODE CONTROL PANEL
622-8849-100	RFU-900	RADIO FREQUENCY UNIT
622-8971-020	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-022	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-120	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-122	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-320	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-322	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-420	TTR-920	RECEIVER TRANSMITTER, TCAS

622-8971-422	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-500	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-522	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8973-001	TRE-920	TCAS RADIATING ELEMENT
622-8973-104	TRE-920	TCAS RADIATING ELEMENT
622-8974-001	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-003	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-010	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-118	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-304	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-314	TTC-920	TRANSPONDER, TCAS CONTROL
622-9007-001	DPU-85R	DISPLAY PROCESSOR UNIT
622-9007-002	DPU-85R	DISPLAY PROCESSOR UNIT
622-9007-003	DPU-85R	DISPLAY PROCESSOR UNIT
622-9007-004	DPU-85R	DISPLAY PROCESSOR UNIT
622-9008-001	MPU-85R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9008-003	MPU-85R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9008-004	MPU-85R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9009-001	DPU-86R	DISPLAY PROCESSOR UNIT
622-9009-002	DPU-86R	DISPLAY PROCESSOR UNIT
622-9009-003	DPU-86R	DISPLAY PROCESSOR UNIT
622-9009-004	DPU-86R	DISPLAY PROCESSOR UNIT
622-9010-001	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9010-002	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9010-003	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9010-004	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9046-026	APC-65E	COMPUTER AUTOPILOT
622-9080-004	RTA-852L	RECEIVER/TRANSMITTER/ANTENNA
622-9116-014	DSP-85B	DISPLAY SELECT PANEL
622-9116-102	DSP-85B	DISPLAY SELECT PANEL
622-9117-001	DSP-85C	DISPLAY SELECT PANEL
622-9117-002	DSP-85C	DISPLAY SELECT PANEL
622-9117-003	DSP-85C	DISPLAY SELECT PANEL
622-9117-004	DSP-85C	DISPLAY SELECT PANEL
622-9165-001	DCP-85H	DISPLAY CONTROL PANEL
622-9165-002	DCP-85H	DISPLAY CONTROL PANEL
622-9210-003	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-004	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-005	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-006	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-007	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-008	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-108	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-207	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-308	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-309	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-408	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL

622-9210-409	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-410	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9221-001	HPU-74B	HSI PROCESSOR UNIT
622-9221-002	HPU-74B	HSI PROCESSOR UNIT
622-9222-001	HCP-74B	HSI CONTROL PANEL
622-9227-001	ARP-86	AIR DATA REF PANEL
622-9227-002	ARP-86	AIR DATA REF PANEL
622-9237-002	ADC-86	AIR DATA COMPUTER
622-9238-001	ALI-850B	INDICATOR, ALTIMETER
622-9238-011	ALI-850B	INDICATOR, ALTIMETER
622-9238-021	ALI-850B	INDICATOR, ALTIMETER
622-9238-022	ALI-850B	INDICATOR, ALTIMETER
622-9238-041	ALI-850B	INDICATOR, ALTIMETER
622-9238-042	ALI-850B	INDICATOR, ALTIMETER
622-9250-001	PAI-850	PRESELECTED ALTITUDE INDICATOR
622-9252-101	HPA-901	AMPLIFIER, HIGH POWER
622-9267-027	APC-65F	COMPUTER AUTOPILOT
622-9282-005	ADM-86	AIR DATA MODULE
622-9285-005	DPU-86S	DISPLAY PROCESSOR UNIT
622-9285-013	DPU-86S	DISPLAY PROCESSOR UNIT
622-9285-014	DPU-86S	DISPLAY PROCESSOR UNIT
622-9286-005	MPU-86S	MULTIFUNCTIONAL PROCESSOR UNIT
622-9286-013	MPU-86S	MULTIFUNCTIONAL PROCESSOR UNIT
622-9286-014	MPU-86S	MULTIFUNCTIONAL PROCESSOR UNIT
622-9288-006	TTC-920A	TRANSPONDER, TCAS CONTROL
622-9288-007	TTC-920A	TRANSPONDER, TCAS CONTROL
622-9292-001	ARP-850	AIR DATA REF PANEL
622-9301-003	RTA-842	RECEIVER/TRANSMITTER/ANTENNA
622-9301-004	RTA-842	RECEIVER/TRANSMITTER/ANTENNA
622-9301-011	RTA-842	RECEIVER/TRANSMITTER/ANTENNA
622-9302-003	RTA-844	RECEIVER/TRANSMITTER/ANTENNA
622-9302-004	RTA-844	RECEIVER/TRANSMITTER/ANTENNA
622-9302-011	RTA-844	RECEIVER/TRANSMITTER/ANTENNA
622-9303-003	RTA-848	RECEIVER/TRANSMITTER/ANTENNA
622-9304-003	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9304-004	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9304-013	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9304-014	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9305-013	WXP-840B	WEATHER RADAR CONTROL PANEL
622-9336-001	AHC-85E	ATTITUDE HEADING COMPUTER
622-9336-002	AHC-85E	ATTITUDE HEADING COMPUTER
622-9336-003	AHC-85E	ATTITUDE HEADING COMPUTER
622-9336-400	AHC-85E	ATTITUDE HEADING COMPUTER
622-9337-001	CDC-850B	CONTROL DISPLAY COUPLER
622-9338-001	FMC-851B	FLIGHT MANAGEMENT COMPUTER
622-9339-001	FMC-852B	FLIGHT MANAGEMENT COMPUTER
622-9342-002	ICC-851	INTEGRATED CARD CAGE

622-9343-102	IOC-851A	IN/OUT CONCENTRATOR
622-9343-104	IOC-851A	IN/OUT CONCENTRATOR
622-9343-105	IOC-851A	IN/OUT CONCENTRATOR
622-9343-106	IOC-851A	IN/OUT CONCENTRATOR
622-9343-116	IOC-851A	IN/OUT CONCENTRATOR
622-9343-204	IOC-851A	IN/OUT CONCENTRATOR
622-9343-205	IOC-851A	IN/OUT CONCENTRATOR
622-9343-206	IOC-851A	IN/OUT CONCENTRATOR
622-9343-220	IOC-851A	IN/OUT CONCENTRATOR
622-9343-221	IOC-851A	IN/OUT CONCENTRATOR
622-9343-222	IOC-851A	IN/OUT CONCENTRATOR
622-9343-223	IOC-851A	IN/OUT CONCENTRATOR
622-9343-234	IOC-851A	IN/OUT CONCENTRATOR
622-9343-401	IOC-851A	IN/OUT CONCENTRATOR
622-9344-001	DAU-650	DATA ACQUISITION UNIT
622-9345-021	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-024	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-025	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-026	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-027	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-201	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-203	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9346-012	RTU-870A	RADIO TUNING UNIT
622-9346-013	RTU-870A	RADIO TUNING UNIT
622-9346-022	RTU-870A	RADIO TUNING UNIT
622-9346-023	RTU-870A	RADIO TUNING UNIT
622-9347-001	SDD-640A	SENSOR DISPLAY DRIVER
622-9352-003	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-004	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-005	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-006	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-007	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-008	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-409	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9353-011	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-021	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-023	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-113	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-121	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-125	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-213	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-223	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-225	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-413	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-423	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-425	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-623	TVI-920	TCAS VERTICAL SPEED INDICATOR

622-9377-001	ATC-850	AUTOMATIC TRIM COUPLER
622-9434-024	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-026	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-035	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-037	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-211	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-213	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9435-001	CHP-850A	COURSE HEADING PANEL
622-9436-101	EFIP-701E	ELECTRONIC FLIGHT INSTRUMENT PROCESSOR
622-9462-004	PRE-80C	PRESELECT OR ALERTER
622-9462-005	PRE-80C	PRESELECT OR ALERTER
622-9462-016	PRE-80C	PRESELECT OR ALERTER
622-9462-024	PRE-80C	PRESELECT OR ALERTER
622-9462-025	PRE-80C	PRESELECT OR ALERTER
622-9462-035	PRE-80C	PRESELECT OR ALERTER
622-9462-036	PRE-80C	PRESELECT OR ALERTER
622-9500-002	ARP-851	AIR DATA REF PANEL
622-9500-011	ARP-851	AIR DATA REF PANEL
622-9575-001	ATC-81	AUTOMATIC TRIM COUPLER
622-9576-002	CDU-860	CONTROL DISPLAY UNIT
622-9576-011	CDU-860	CONTROL DISPLAY UNIT
622-9578-001	CDU-851	CONTROL DISPLAY UNIT
622-9614-001	CTL-92T	CONTROL, TCAS
622-9614-003	CTL-92T	CONTROL, TCAS
622-9614-005	CTL-92T	CONTROL, TCAS
622-9614-007	CTL-92T	CONTROL, TCAS
622-9614-009	CTL-92T	CONTROL, TCAS
622-9614-011	CTL-92T	CONTROL, TCAS
622-9614-013	CTL-92T	CONTROL, TCAS
622-9614-101	CTL-92T	CONTROL, TCAS
622-9614-109	CTL-92T	CONTROL, TCAS
622-9614-110	CTL-92T	CONTROL, TCAS
622-9614-111	CTL-92T	CONTROL, TCAS
622-9614-112	CTL-92T	CONTROL, TCAS
622-9614-113	CTL-92T	CONTROL, TCAS
622-9614-115	CTL-92T	CONTROL, TCAS
622-9614-116	CTL-92T	CONTROL, TCAS
622-9627-005	FYD-65	FLIGHT DIRECTOR YAW DAMPER
622-9627-017	FYD-65	FLIGHT DIRECTOR YAW DAMPER
622-9627-105	FYD-65	FLIGHT DIRECTOR YAW DAMPER
622-9679-001	DBU-4001	DATA BASE UNIT
622-9681-001	EFD-84	ELECTRONIC FLIGHT DISPLAY
622-9681-101	EFD-84	ELECTRONIC FLIGHT DISPLAY
622-9682-002	DPU-84	DISPLAY PROCESSOR UNIT
622-9682-004	DPU-84	DISPLAY PROCESSOR UNIT
622-9683-001	DSP-84	DISPLAY SELECT PANEL
622-9683-011	DSP-84	DISPLAY SELECT PANEL

622-9683-111	DSP-84	DISPLAY SELECT PANEL
622-9683-113	DSP-84	DISPLAY SELECT PANEL
622-9684-002	MPU-84	MULTIFUNCTION PROCESSOR UNIT
622-9684-004	MPU-84	MULTIFUNCTION PROCESSOR UNIT
622-9722-005	PRE-80D	PRESELECT OR ALERTER
622-9722-035	PRE-80D	PRESELECT OR ALERTER
622-9724-005	APC-65H	COMPUTER AUTOPILOT
622-9724-015	APC-65H	COMPUTER AUTOPILOT
622-9724-017	APC-65H	COMPUTER AUTOPILOT
622-9724-028	APC-65H	COMPUTER AUTOPILOT
622-9724-030	APC-65H	COMPUTER AUTOPILOT
622-9724-105	APC-65H	COMPUTER AUTOPILOT
622-9724-119	APC-65H	COMPUTER AUTOPILOT
622-9724-130	APC-65H	COMPUTER AUTOPILOT
622-9724-143	APC-65H	COMPUTER AUTOPILOT
622-9724-205	APC-65H	COMPUTER AUTOPILOT
622-9724-215	APC-65H	COMPUTER AUTOPILOT
622-9724-217	APC-65H	COMPUTER AUTOPILOT
622-9724-228	APC-65H	COMPUTER AUTOPILOT
622-9724-241	APC-65H	COMPUTER AUTOPILOT
622-9728-122	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-124	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-125	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-214	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-215	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-223	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-224	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-312	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-313	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-314	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-315	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-316	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-322	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-323	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-324	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-325	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-326	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-413	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-416	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-423	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-424	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-425	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-426	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9732-001	SIA-850	SIGNAL INTERFACE ADAPTER
622-9732-002	SIA-850	SIGNAL INTERFACE ADAPTER
622-9732-003	SIA-850	SIGNAL INTERFACE ADAPTER
622-9735-001	SDU-640B	SENSOR DISPLAY UNIT

622-9735-002	SDU-640B	SENSOR DISPLAY UNIT
622-9738-020	ILS-720	NAVIGATION RECEIVER
622-9738-041	ILS-720	NAVIGATION RECEIVER
622-9738-220	ILS-720	NAVIGATION RECEIVER
622-9785-032	APC-65J	COMPUTER AUTOPILOT
622-9785-232	APC-65J	COMPUTER AUTOPILOT
622-9785-432	APC-65J	COMPUTER AUTOPILOT
622-9785-436	APC-65J	COMPUTER AUTOPILOT
622-9810-008	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-010	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-012	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-016	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-202	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-204	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-300	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-302	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-304	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9812-002	DCP-4000	DISPLAY CONTROL PANEL
622-9812-006	DCP-4000	DISPLAY CONTROL PANEL
622-9812-008	DCP-4000	DISPLAY CONTROL PANEL
622-9812-010	DCP-4000	DISPLAY CONTROL PANEL
622-9812-012	DCP-4000	DISPLAY CONTROL PANEL
622-9812-102	DCP-4000	DISPLAY CONTROL PANEL
622-9812-104	DCP-4000	DISPLAY CONTROL PANEL
622-9812-204	DCP-4000	DISPLAY CONTROL PANEL
622-9812-206	DCP-4000	DISPLAY CONTROL PANEL
622-9814-004	IOC-4000	IN/OUT CONCENTRATOR
622-9814-005	IOC-4000	IN/OUT CONCENTRATOR
622-9814-008	IOC-4000	IN/OUT CONCENTRATOR
622-9814-009	IOC-4000	IN/OUT CONCENTRATOR
622-9814-010	IOC-4000	IN/OUT CONCENTRATOR
622-9814-106	IOC-4000	IN/OUT CONCENTRATOR
622-9814-107	IOC-4000	IN/OUT CONCENTRATOR
622-9814-108	IOC-4000	IN/OUT CONCENTRATOR
622-9814-301	IOC-4000	IN/OUT CONCENTRATOR
622-9814-302	IOC-4000	IN/OUT CONCENTRATOR
622-9814-303	IOC-4000	IN/OUT CONCENTRATOR
622-9814-312	IOC-4000	IN/OUT CONCENTRATOR
622-9814-313	IOC-4000	IN/OUT CONCENTRATOR
622-9814-322	IOC-4000	IN/OUT CONCENTRATOR
622-9814-511	IOC-4000	IN/OUT CONCENTRATOR
622-9814-513	IOC-4000	IN/OUT CONCENTRATOR
622-9814-514	IOC-4000	IN/OUT CONCENTRATOR
622-9814-515	IOC-4000	IN/OUT CONCENTRATOR
622-9814-603	IOC-4000	IN/OUT CONCENTRATOR
622-9814-604	IOC-4000	IN/OUT CONCENTRATOR
622-9814-605	IOC-4000	IN/OUT CONCENTRATOR

622-9814-607	IOC-4000	IN/OUT CONCENTRATOR
622-9814-631	IOC-4000	IN/OUT CONCENTRATOR
622-9814-632	IOC-4000	IN/OUT CONCENTRATOR
622-9814-634	IOC-4100	IN/OUT CONCENTRATOR
622-9814-635	IOC-4100	IN/OUT CONCENTRATOR
622-9814-651	IOC-4000	IN/OUT CONCENTRATOR
622-9814-652	IOC-4000	IN/OUT CONCENTRATOR
622-9814-702	IOC-4000	IN/OUT CONCENTRATOR
622-9814-704	IOC-4000	IN/OUT CONCENTRATOR
622-9814-705	IOC-4000	IN/OUT CONCENTRATOR
622-9814-715	IOC-4000	IN/OUT CONCENTRATOR
622-9814-716	IOC-4000	IN/OUT CONCENTRATOR
622-9814-717	IOC-4000	IN/OUT CONCENTRATOR
622-9814-730	IOC-4000	IN/OUT CONCENTRATOR
622-9814-802	IOC-4000	IN/OUT CONCENTRATOR
622-9814-803	IOC-4000	IN/OUT CONCENTRATOR
622-9814-804	IOC-4000	IN/OUT CONCENTRATOR
622-9815-037	FCC-4000	FLIGHT CONTROL COMPUTER
622-9815-604	FCC-4000	FLIGHT CONTROL COMPUTER
622-9815-704	FCC-4000	FLIGHT CONTROL COMPUTER
622-9815-904	FCC-4000	FLIGHT CONTROL COMPUTER
622-9817-001	ATC-4000	AUTOMATIC TRIM COUPLER
622-9818-005	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-006	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-020	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-120	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-122	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-211	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-212	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-213	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-403	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-404	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-405	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-610	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-652	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-653	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-751	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9819-006	ARP-4000	AIR DATA REF PANEL
622-9819-104	ARP-4000	AIR DATA REF PANEL
622-9819-106	ARP-4000	AIR DATA REF PANEL
622-9819-204	ARP-4000	AIR DATA REF PANEL
622-9820-004	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-005	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-006	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-008	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-009	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-010	DCU-4000	DATA CONCENTRATOR UNIT

622-9821-002	ECP-4000	EICAS CONTROL PANEL
622-9822-001	LDU-4000	LAMP DRIVER UNIT
622-9849-011	MFD-85C	MULTI-FUNCTIONAL DISPLAY
622-9849-012	MFD-85C	MULTI-FUNCTIONAL DISPLAY
622-9851-001	CTL-23	CONTROL, VHF COMMUNICATION
622-9851-002	CTL-23	CONTROL, VHF COMMUNICATION
622-9851-003	CTL-23	CONTROL, VHF COMMUNICATION
622-9852-106	RTU-4000	RADIO TUNING UNIT
622-9852-108	RTU-4000	RADIO TUNING UNIT
622-9852-122	RTU-4000	RADIO TUNING UNIT
622-9852-124	RTU-4000	RADIO TUNING UNIT
622-9852-208	RTU-4000	RADIO TUNING UNIT
622-9852-224	RTU-4000	RADIO TUNING UNIT
622-9856-102	RTU-870T	RADIO TUNING UNIT
622-9856-111	RTU-870T	RADIO TUNING UNIT
622-9856-122	RTU-870T	RADIO TUNING UNIT
622-9856-142	RTU-870T	RADIO TUNING UNIT
622-9856-151	RTU-870T	RADIO TUNING UNIT
622-9865-001	DBU-4000	DATA BASE UNIT
622-9865-002	DBU-4000	DATA BASE UNIT
622-9884-001	SIU-80	SIGNAL INTERFACE ADAPTER
622-9884-002	SIU-80	SIGNAL INTERFACE ADAPTER
622-9890-001	CEU-85A	CHECKLIST ENTRY UNIT
622-9924-002	CDC-850C	CONTROL DISPLAY COUPLER
622-9924-101	CDC-850C	CONTROL DISPLAY COUPLER
622-9925-002	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-202	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-205	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-220	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-221	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-250	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9926-002	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-101	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-202	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-205	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-207	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-220	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-221	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-250	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9929-002	WXP-4120	CONTROL, WEATHER RADAR PANEL
622-9932-002	WXP-4220	CONTROL, WEATHER RADAR PANEL
622-9945-001	PWR-4000	POWER SUPPLY
622-9945-003	PWR-4000	POWER SUPPLY
622-9945-020	PWR-4000	POWER SUPPLY
622-9945-021	PWR-4000	POWER SUPPLY
622-9945-022	PWR-4000	POWER SUPPLY
622-9957-002	CDU-860A	CONTROL DISPLAY UNIT

622-9968-001	SVL-4000	LINEAR ACTUATOR
622-9968-002	SVL-4000	LINEAR ACTUATOR
622-9968-003	SVL-4000	LINEAR ACTUATOR
622-9968-101	SVL-4000	LINEAR ACTUATOR
622-9968-102	SVL-4000	LINEAR ACTUATOR
622-9978-024	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-026	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-104	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-106	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-110	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-114	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-118	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-120	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-122	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-126	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-130	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-304	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-306	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-308	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-310	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-312	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-314	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-402	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-406	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-408	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9983-002	ARP-4001	AIR DATA REF PANEL
622-9987-002	DCP-4001	DISPLAY CONTROL PANEL
622-9988-004	DCU-4001	DATA CONCENTRATOR UNIT
622-9989-002	ECP-4001	EICAS CONTROL PANEL
622-9992-002	FCP-4001	FLIGHT CONTROL PANEL
622-9992-004	FCP-4001	FLIGHT CONTROL PANEL
622-9995-001	ICC-4001	INTEGRATED CARD CAGE
622-9996-002	INC-4000	INCLINOMETER
629-8654-001	ARTHUR MONITOR	ARTHUR MONITOR
65-49970-10	GENACT	ACTUATOR ASSY, STAB TRIM
65-49970-15	GENACT	ACTUATOR ASSY, STAB TRIM
65-49970-25	GENACT	ACTUATOR ASSY, STAB TRIM
65-49970-27	GENACT	ACTUATOR ASSY, STAB TRIM
65-49970-28	GENACT	STAB TRIM ACTUATOR
656-1-1	APA656	25 W AUDIO POWER AMPLIFIER
65C34751-11	GENACT	STAB TRIM ACTUATOR ASSEMBLY
65C34751-2	GENACT	ACTUATOR ASSY, STAB TRIM
65C34751-7	GENACT	ACTUATOR ASSY, STAB TRIM
65C36486-13	GENACT	ACTUATOR ASSY, STAB TRIM
685-0350-002	HF-9041	COUP PRESSURIZED HF
685-0350-020	HF-9041	ANTENNA COUPLER
744000-10-10	LH744	SIGMA-7 LIGHTED HANDSET LONG CRADLE

772-5005-005	329B-8J	FLIGHT DIRECTOR INDICATOR
772-5025-001	331A-8A	INDICATOR, HORIZONTAL SITUATION
772-5130-001	562A-5M	FLIGHT COMPUTER
772-5130-003	562A-5M	FLIGHT COMPUTER
772-5130-004	562A-5M	FLIGHT COMPUTER
772-5130-008	562A-5M	FLIGHT COMPUTER
772-5130-009	562A-5M	FLIGHT COMPUTER
772-5130-015	562A-5M	FLIGHT COMPUTER
772-5131-003	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-004	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-008	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-011	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-013	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-017	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-018	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-019	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5132-001	161E-2	COUPLER
772-5140-001	345A-7	RATE GYRO
772-5140-002	345A-7	RATE GYRO
772-5370-001	331A8G	HORIZONTAL SITUATION INDICATOR
772-5370-003	331A8G	HORIZONTAL SITUATION INDICATOR
772-5374-001	334C-3B	SERVO
772-5472-001	334C-3C	SERVO
777-1061-001	334C6	SERVO
777-1062-001	351B-6	CAPSTAN
777-1083-002	331A-8D	HORIZONTAL SITUATION INDICATOR
777-1083-007	331A-8D	HORIZONTAL SITUATION INDICATOR
777-1224-001	329B-8G	FLIGHT DIRECTOR INDICATOR
777-1328-001	180R-17	ANTENNA COUPLER
777-1329-001	309A-17	CONTROL, ANTENNA COUPLER
777-1397-004	331A-8K	INDICATOR, HSI
777-1406-099	562C-8A	YAW DAMPER COMPUTER
777-1492-001	51Y-7	RECEIVER, ADF
777-1492-003	51Y-7	RECEIVER, ADF
777-1492-004	51Y-7	RECEIVER, ADF
777-1492-005	51Y-7	RECEIVER, ADF
777-1555-001	332E-5	GYRO, DIRECTIONAL
777-1556-001	328A-5	AMPLIFIER, COMPASS
777-1825-001	331A-8L	INDICATOR, HSI
777-1825-002	331A-8L	INDICATOR, HSI
787-6173-016	ADI-84	ATTITUDE DIRECTOR INDICATOR
787-6173-217	ADI-84	ATTITUDE DIRECTOR INDICATOR
787-6211-001	621A-6	TRANSPONDER ATC
787-6211-002	621A6	TRANSPONDER ATC
787-6211-003	621A-6	TRANSPONDER ATC
787-6371-001	490R4A	ANTENNA COUPLER
787-6385-002	331A-6P	INDICATOR, COURSE

787-6385-005	331A-6P	INDICATOR, COURSE
787-6781-001	548S-3	AMPLIFIER COUPLER
787-6781-004	548S-3	AMPLIFIER COUPLER
787-6934-002	671U-4A	HF RECEIVER-EXCITER
787-6934-004	671U-4A	HF RECEIVER-EXCITER
787-6934-007	671U-4A	HF RECEIVER-EXCITER
792-6091-001	331A-9G	COURSE INDICATOR
792-6091-005	331A-9G	COURSE INDICATOR
792-6091-009	331A-9G	COURSE INDICATOR
792-6091-011	331A-9G	COURSE INDICATOR
792-6091-012	331A-9G	COURSE INDICATOR
792-6091-013	331A-9G	COURSE INDICATOR
792-6091-015	331A-9G	COURSE INDICATOR
792-6091-016	331A-9G	COURSE INDICATOR
792-6091-019	331A-9G	COURSE INDICATOR
792-6122-004	514A-4	CONTROL RADIO SET
792-6134-001	323A-3G-1	COMPENSATOR
792-6140-001	490S-1	ANTENNA COUPLER
792-6216-001	51Y-7A	RECEIVER, ADF
792-6216-002	51Y-7A	RECEIVER, ADF
792-6216-003	51Y-7A	RECEIVER, ADF
792-6216-004	51Y-7A	RECEIVER, ADF
792-6221-001	614E-22B	REMOTE SINGLE CRS, 5V
792-6221-004	614E-22B	REMOTE SINGLE CRS, 5V, GRAY
792-6255-001	161E-2A	MODE COUPLER
792-6275-002	614L-13	CONTROL ADF
792-6275-005	614L-13	CONTROL ADF
792-6275-007	614L-13	CONTROL ADF
792-6348-001	614E-5A	AUTOPILOT CONTROLLER
792-6348-002	614E-5A	AUTOPILOT CONTROLLER
792-6348-003	614E-5A	AUTOPILOT CONTROLLER
792-6348-004	614E-5A	AUTOPILOT CONTROLLER
792-6355-001	329B-7R	3-D FLIGHT DIRECTOR INDICATOR
792-6355-003	329B-7R	3-D FLIGHT DIRECTOR INDICATOR
792-6356-002	331A-6R	INDICATOR, COURSE
792-6356-003	331A-6R	INDICATOR, COURSE
792-6357-002	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-006	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-007	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-008	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-011	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6484-001	614E-4B	CONTROLLER AUTO
792-6657-001	VHF-20	COMMUNICATIONS TRANSCEIVER, VHF
792-6657-003	VHF-20	COMMUNICATIONS TRANSCEIVER, VHF
792-6657-004	VHF-20	COMMUNICATIONS TRANSCEIVER, VHF
792-6672-001	590A-3H	CONTROL, AIR DATA
792-6672-008	590A-3H	CONTROL, AIR DATA

792-6694-001	332D-11A	VERTICAL GY
792-6703-001	562A-5M5	FLIGHT COMPUTER
792-6703-002	562A-5M5	FLIGHT COMPUTER
792-6780-001	334C-6A	PRIMARY SERVO
792-6781-001	334C-6B	PRIMARY SERVO
792-6783-001	351B-7B	SERVO MOUNT
792-6784-001	351B-6A	SERVO MOUNT
792-6785-001	351B-6B	SERVO MOUNT
792-6972-001	334C-6C	PRIMARY SERVO
792-6974-001	351B-7C	SERVO MOUNT
807-1-3	AI-807	HORIZONTAL STABILIZER DE-ICER
822-0002-003	RTU-4010	RADIO TUNING UNIT
822-0002-006	RTU-4010	RADIO TUNING UNIT
822-0002-110	RTU-4010	RADIO TUNING UNIT
822-0002-120	RTU-4010	RADIO TUNING UNIT
822-0002-122	RTU-4010	RADIO TUNING UNIT
822-0002-128	RTU-4010	RADIO TUNING UNIT
822-0002-210	RTU-4010	RADIO TUNING UNIT
822-0002-222	RTU-4010	RADIO TUNING UNIT
822-0006-103	AFDC-770	ADAPTIVE FLIGHT DISPLAY
822-0006-104	AFDC-770	ADAPTIVE FLIGHT DISPLAY
822-0014-004	DBU-4100	DATA BASE UNIT
822-0014-008	DBU-4100	DATA BASE UNIT
822-0014-102	DBU-4100	DATA BASE UNIT, GRAY
822-0014-103	DBU-4100	DATA BASE UNIT, BK
822-0014-104	DBU-4100	DATA BASE UNIT
822-0021-102	CDU-4100	CONTROL DISPLAY UNIT
822-0021-104	CDU-4100	CONTROL DISPLAY UNIT
822-0021-202	CDU-4100	CONTROL DISPLAY UNIT
822-0021-204	CDU-4100	CONTROL DISPLAY UNIT
822-0022-004	FMC-4100	FLIGHT MANAGEMENT COMPUTER
822-0022-006	FMC-4100	FLIGHT MANAGEMENT COMPUTER
822-0044-001	FCP-4002	FLIGHT CONTROL PANEL
822-0049-002	CSU-4000	CONFIGURATION STRAPPING UNIT
822-0074-006	RTU-4020	RADIO TUNING UNIT
822-0074-008	RTU-4020	RADIO TUNING UNIT
822-0074-010	RTU-4020	RADIO TUNING UNIT
822-0074-102	RTU-4020	RADIO TUNING UNIT
822-0074-104	RTU-4020	RADIO TUNING UNIT
822-0074-204	RTU-4020	RADIO TUNING UNIT
822-0074-210	RTU-4020	RADIO TUNING UNIT
822-0078-003	TTC-920G	TRANSPONDER, TCAS CONTROL
822-0078-005	TTC-920G	TRANSPONDER, TCAS CONTROL
822-0089-001	FL-9002	ADAPTER, ANTENNA
822-0101-001	HF-9031A	RECEIVER/TRANSMITTER
822-0101-002	HF-9031A	RECEIVER/TRANSMITTER
822-0102-001	HF-9034A	RECEIVER/TRANSMITTER

822-0175-002	FCC-86G	FLIGHT CONTROL COMPUTER
822-0175-019	FCC-86G	FLIGHT CONTROL COMPUTER
822-0179-002	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-003	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-013	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-014	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-201	DCU-4002	DATA CONCENTRATOR UNIT
822-0180-002	ECP-4003	EICAS CONTROL PANEL
822-0180-102	ECP-4003	EICAS CONTROL PANEL
822-0182-001	FCP-4003	FLIGHT CONTROL PANEL
822-0182-101	FCP-4003	FLIGHT CONTROL PANEL
822-0195-102	MCP-770	MODE CONTROL PANEL
822-0198-001	ICC-4004	INTEGRATED CARD CAGE
822-0201-001	ICC-4005	INTEGRATED CARD CAGE
822-0201-002	ICC-4005	INTEGRATED CARD CAGE
822-0259-001	SMT-87A	SERVO, MOUNT
822-0260-001	SMT-87B	SERVO, MOUNT
822-0269-001	ICC-851A	INTEGRATED CARD CAGE
822-0271-001	AIU-4000	AUDIO INTERFACE UNIT
822-0273-002	RSP-4000	REVERSIONARY SWITCHING PANEL
822-0273-004	RSP-4000	REVERSIONARY SWITCHING PANEL
822-0273-006	RSP-4000	REVERSIONARY SWITCHING PANEL
822-0282-002	ILS-700A	RECEIVER, ILS
822-0282-102	ILS-700A	RECEIVER, ILS
822-0282-120	ILS-700A	RECEIVER, ILS
822-0287-101	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-201	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-401	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-501	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-502	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-701	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-702	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-801	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-802	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0288-001	IEC-4000	IAPS ENVIRONMENTAL CONTROLLER
822-0288-002	IEC-4000	IAPS ENVIRONMENTAL CONTROLLER
822-0297-001	VOR-900	RECEIVER, NAVIGATION
822-0297-020	VOR-900	RECEIVER, NAVIGATION
822-0298-001	ILS-900	NAVIGATION RECEIVER
822-0298-020	ILS-900	NAVIGATION RECEIVER
822-0299-001	ADF-900	RECEIVER, ADF
822-0299-020	ADF-900	RECEIVER, ADF
822-0312-101	SDU-906-4	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-101	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-102	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-150	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-151	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT

822-0314-303	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-350	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0319-001	WXA-85	WEATHER RADAR ADAPTER
822-0320-001	DAU-4000	DATA ACQUISITION UNIT
822-0320-002	DAU-4000	DATA ACQUISITION UNIT
822-0320-003	DAU-4000	DATA ACQUISITION UNIT
822-0320-011	DAU-4000	DATA ACQUISITION UNIT
822-0321-002	DCP-4002	DISPLAY CONTROL PANEL
822-0321-006	DCP-4002	DISPLAY CONTROL PANEL
822-0321-008	DCP-4002	DISPLAY CONTROL PANEL
822-0323-002	VHF-900	COMMUNICATIONS TRANSCEIVER, VHF
822-0323-020	VHF-900	COMMUNICATIONS TRANSCEIVER, VHF
822-0326-002	ARP-4002	AIR DATA REF PANEL
822-0326-102	ARP-4002	AIR DATA REF PANEL
822-0327-024	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-034	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-134	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-208	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-408	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-508	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-608	FCC-4002	FLIGHT CONTROL COMPUTER
822-0328-002	AAP-851	ALTITUDE AWARENESS PANEL
822-0328-004	AAP-851	ALTITUDE AWARENESS PANEL
822-0328-011	AAP-851	ALTITUDE AWARENESS PANEL
822-0329-001	DME-900	DISTANCE MEASURING EQPT
822-0329-020	DME-900	DISTANCE MEASURING EQPT
822-0329-021	DME-900	DISTANCE MEASURING EQPT
822-0330-001	HFS-900	RECEIVER/TRANSMITTER
822-0330-020	HFS-900	RECEIVER/TRANSMITTER
822-0332-101	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-201	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-401	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-501	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-701	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-702	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-801	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-802	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0333-001	IEC-4001	IAPS ENVIRONMENTAL CONTROLLER
822-0334-002	LRA-900	RADIO ALTIMETER
822-0334-003	LRA-900	RADIO ALTIMETER
822-0334-020	LRA-900	RADIO ALTIMETER
822-0336-001	TPR-900	TRANSPONDER
822-0336-020	TPR-900	TRANSPONDER
822-0370-123	ADC-85A	AIR DATA COMPUTER
822-0370-404	ADC-85A	AIR DATA COMPUTER
822-0370-408	ADC-85A	AIR DATA COMPUTER
822-0370-425	ADC-85A	AIR DATA COMPUTER

822-0370-426	ADC-85A	AIR DATA COMPUTER
822-0370-451	ADC-85A	AIR DATA COMPUTER
822-0370-460	ADC-85A	AIR DATA COMPUTER
822-0370-461	ADC-85A	AIR DATA COMPUTER
822-0370-462	ADC-85A	AIR DATA COMPUTER
822-0370-472	ADC-85A	AIR DATA COMPUTER
822-0371-165	ADC-86A	AIR DATA COMPUTER
822-0371-403	ADC-86A	AIR DATA COMPUTER
822-0371-405	ADC-86A	AIR DATA COMPUTER
822-0372-140	ADC-850A	AIR DATA COMPUTER
822-0372-143	ADC-850A	AIR DATA COMPUTER
822-0372-145	ADC-850A	AIR DATA COMPUTER
822-0372-154	ADC-850A	AIR DATA COMPUTER
822-0372-162	ADC-850A	AIR DATA COMPUTER
822-0372-351	ADC-850A	AIR DATA COMPUTER
822-0372-354	ADC-850A	AIR DATA COMPUTER
822-0372-362	ADC-850A	AIR DATA COMPUTER
822-0372-416	ADC-850A	AIR DATA COMPUTER
822-0372-436	ADC-850A	AIR DATA COMPUTER
822-0372-445	ADC-850A	AIR DATA COMPUTER
822-0372-497	ADC-850A	AIR DATA COMPUTER
822-0372-636	ADC-850A	AIR DATA COMPUTER
822-0372-645	ADC-850A	AIR DATA COMPUTER
822-0372-697	ADC-850A	AIR DATA COMPUTER
822-0373-520	ADC-850B	AIR DATA COMPUTER
822-0374-134	ADC-850C	AIR DATA COMPUTER
822-0374-410	ADC-850C	AIR DATA COMPUTER
822-0374-412	ADC-850C	AIR DATA COMPUTER
822-0374-419	ADC-850C	AIR DATA COMPUTER
822-0374-437	ADC-850C	AIR DATA COMPUTER
822-0374-439	ADC-850C	AIR DATA COMPUTER
822-0374-440	ADC-850C	AIR DATA COMPUTER
822-0374-447	ADC-850C	AIR DATA COMPUTER
822-0374-454	ADC-850C	AIR DATA COMPUTER
822-0374-457	ADC-850C	AIR DATA COMPUTER
822-0374-463	ADC-850C	AIR DATA COMPUTER
822-0374-640	ADC-850C	AIR DATA COMPUTER
822-0374-647	ADC-850C	AIR DATA COMPUTER
822-0374-657	ADC-850C	AIR DATA COMPUTER
822-0385-002	FCP-4004	FLIGHT CONTROL PANEL
822-0386-002	FMC-4050	FLIGHT MANAGEMENT COMPUTER
822-0389-109	ADC-850D	AIR DATA COMPUTER
822-0389-118	ADC-850D	AIR DATA COMPUTER
822-0389-129	ADC-850D	AIR DATA COMPUTER
822-0389-133	ADC-850D	AIR DATA COMPUTER
822-0389-429	ADC-850D	AIR DATA COMPUTER
822-0389-433	ADC-850D	AIR DATA COMPUTER

822-0389-450	ADC-850D	AIR DATA COMPUTER
822-0389-629	ADC-850D	AIR DATA COMPUTER
822-0389-633	ADC-850D	AIR DATA COMPUTER
822-0389-634	ADC-850D	AIR DATA COMPUTER
822-0393-001	VIR-433	NAVIGATION RECEIVER
822-0407-101	BCA-770	ACTUATOR, BACKDRIVE
822-0408-201	FPI-9330	INDICATOR, STANDBY
822-0409-201	FPI-9331	INDICATOR, STANDBY
822-0416-001	IND-270A	INDICATOR, WEATHER RADAR
822-0450-001	ICC-4006	INTEGRATED CARD CAGE
822-0592-407	FCC-850A	FLIGHT CONTROL COMPUTER
822-0612-111	FCC-4003	FLIGHT CONTROL COMPUTER
822-0615-001	ALT-4000	ALTIMETER
822-0615-002	ALT-4000	ALTIMETER
822-0615-003	ALT-4000	ALTIMETER
822-0615-101	ALT-4000	ALTIMETER
822-0615-102	ALT-4000	ALTIMETER
822-0615-111	ALT-4000	ALTIMETER
822-0615-125	ALT-4000	ALTIMETER
822-0615-202	ALT-4000	ALTIMETER
822-0615-205	ALT-4000	ALTIMETER
822-0615-206	ALT-4000	ALTIMETER
822-0615-207	ALT-4000	ALTIMETER
822-0615-226	ALT-4000	ALTIMETER
822-0615-305	ALT-4000	ALTIMETER
822-0615-306	ALT-4000	ALTIMETER
822-0615-312	ALT-4000	ALTIMETER
822-0615-315	ALT-4000	ALTIMETER
822-0615-316	ALT-4000	ALTIMETER
822-0666-003	DLM-900	DATA LINK MANAGEMENT UNIT
822-0668-001	RTU-4200	RADIO TUNING UNIT
822-0668-011	RTU-4200	RADIO TUNING UNIT
822-0668-012	RTU-4200	RADIO TUNING UNIT
822-0668-031	RTU-4200	RADIO TUNING UNIT
822-0668-101	RTU-4200	RADIO TUNING UNIT
822-0668-111	RTU-4200	RADIO TUNING UNIT
822-0668-131	RTU-4200	RADIO TUNING UNIT
822-0668-251	RTU-4200	RADIO TUNING UNIT
822-0668-261	RTU-4200	RADIO TUNING UNIT
822-0668-262	RTU-4200	RADIO TUNING UNIT
822-0693-003	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0693-004	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0693-020	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0693-120	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0726-002	VOR-700A	RECEIVER, VOR
822-0726-020	VOR-700A	RECEIVER, VOR
822-0726-103	VOR-700A	RECEIVER, VOR

822-0726-120	VOR-700A	RECEIVER, VOR
822-0730-131	RTU-4220	RADIO TUNING UNIT
822-0730-132	RTU-4220	RADIO TUNING UNIT
822-0730-202	RTU-4220	RADIO TUNING UNIT
822-0730-214	RTU-4220	RADIO TUNING UNIT
822-0730-224	RTU-4220	RADIO TUNING UNIT
822-0730-234	RTU-4220	RADIO TUNING UNIT
822-0730-301	RTU-4220	RADIO TUNING UNIT
822-0730-311	RTU-4220	RADIO TUNING UNIT
822-0730-312	RTU-4220	RADIO TUNING UNIT
822-0730-314	RTU-4220	RADIO TUNING UNIT
822-0730-322	RTU-4220	RADIO TUNING UNIT
822-0730-331	RTU-4220	RADIO TUNING UNIT
822-0730-332	RTU-4220	RADIO TUNING UNIT
822-0730-333	RTU-4220	RADIO TUNING UNIT
822-0730-334	RTU-4220	RADIO TUNING UNIT
822-0730-336	RTU-4220	RADIO TUNING UNIT
822-0730-338	RTU-4220	RADIO TUNING UNIT
822-0730-434	RTU-4220	RADIO TUNING UNIT
822-0730-436	RTU-4220	RADIO TUNING UNIT
822-0730-438	RTU-4220	RADIO TUNING UNIT
822-0730-442	RTU-4220	RADIO TUNING UNIT
822-0730-461	RTU-4220	RADIO TUNING UNIT
822-0730-462	RTU-4220	RADIO TUNING UNIT
822-0730-464	RTU-4220	RADIO TUNING UNIT
822-0730-466	RTU-4220	RADIO TUNING UNIT
822-0732-101	618M-4A	TRANSCEIVER, VHF
822-0761-001	51RV-5B	RECEIVER, VOR/ILS
822-0781-001	ICC-4007	INTEGRATED CARD CAGE
822-0782-001	SSM-4000	SERVO, SWITCHING MODULE
822-0783-011	FMC-4200	FLIGHT MANAGEMENT COMPUTER
822-0783-013	FMC-4200	FLIGHT MANAGEMENT COMPUTER
822-0783-014	FMC-4200	FLIGHT MANAGEMENT COMPUTER
822-0783-015	FMC-4200	FLIGHT MANAGEMENT COMPUTER
822-0807-029	FCC-4005	FLIGHT CONTROL COMPUTER
822-0807-112	FCC-4005	FLIGHT CONTROL COMPUTER
822-0807-129	FCC-4005	FLIGHT CONTROL COMPUTER
822-0807-203	FCC-4005	FLIGHT CONTROL COMPUTER
822-0809-030	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-210	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-310	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-410	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-510	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-710	FCC-4006	FLIGHT CONTROL COMPUTER
822-0825-001	DAU-4002	DATA ACQUISITION UNIT
822-0826-001	IMT-4077D	TRAY, MOUNT
822-0836-005	RTU-4210	RADIO TUNING UNIT

822-0836-006	RTU-4210	RADIO TUNING UNIT
822-0836-015	RTU-4210	RADIO TUNING UNIT
822-0836-016	RTU-4210	RADIO TUNING UNIT
822-0836-035	RTU-4210	RADIO TUNING UNIT
822-0836-036	RTU-4210	RADIO TUNING UNIT
822-0836-113	RTU-4210	RADIO TUNING UNIT
822-0836-114	RTU-4210	RADIO TUNING UNIT
822-0836-124	RTU-4210	RADIO TUNING UNIT
822-0836-133	RTU-4210	RADIO TUNING UNIT
822-0836-134	RTU-4210	RADIO TUNING UNIT
822-0836-203	RTU-4210	RADIO TUNING UNIT
822-0836-213	RTU-4210	RADIO TUNING UNIT
822-0836-214	RTU-4210	RADIO TUNING UNIT
822-0836-233	RTU-4210	RADIO TUNING UNIT
822-0836-234	RTU-4210	RADIO TUNING UNIT
822-0836-313	RTU-4210	RADIO TUNING UNIT
822-0836-333	RTU-4210	RADIO TUNING UNIT
822-0836-334	RTU-4210	RADIO TUNING UNIT
822-0836-434	RTU-4210	RADIO TUNING UNIT
822-0838-002	DCU-4010	DATA CONCENTRATOR UNIT
822-0838-003	DCU-4010	DATA CONCENTRATOR UNIT
822-0842-142	ADC-850E	AIR DATA COMPUTER
822-0842-421	ADC-850E	AIR DATA COMPUTER
822-0842-621	ADC-850E	AIR DATA COMPUTER
822-0842-656	ADC-850E	AIR DATA COMPUTER
822-0845-001	ERU-4000	EICAS ROUTING UNIT
822-0845-002	ERU-4000	EICAS ROUTING UNIT
822-0867-006	CDU-6000	CONTROL DISPLAY UNIT
822-0867-008	CDU-6000	CONTROL DISPLAY UNIT
822-0868-021	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-026	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-028	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-029	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-030	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-031	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-039	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-040	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-041	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-044	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-046	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-047	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-051	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-055	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-057	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-060	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-069	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-071	FMC-6000	FLIGHT MANAGEMENT COMPUTER

822-0868-073	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-081	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-083	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-085	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-087	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-089	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-090	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-091	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-094	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-095	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-109	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-111	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-112	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-113	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-114	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0872-001	MTC-4000	MACH TRIM COMPUTER
822-0883-005	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-015	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-020	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-021	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-023	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-024	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-025	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-027	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-031	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-036	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-038	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-039	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-040	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-042	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-043	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-048	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-049	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-054	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-056	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-058	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-701	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-703	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-704	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0884-112	CDU-3000	CONTROL DISPLAY UNIT
822-0884-116	CDU-3000	CONTROL DISPLAY UNIT
822-0884-118	CDU-3000	CONTROL DISPLAY UNIT
822-0884-161	CDU-3000	CONTROL DISPLAY UNIT
822-0884-163	CDU-3000	CONTROL DISPLAY UNIT
822-0884-172	CDU-3000	CONTROL DISPLAY UNIT
822-0884-191	CDU-3000	CONTROL DISPLAY UNIT
822-0884-193	CDU-3000	CONTROL DISPLAY UNIT

822-0884-362	CDU-3000	CONTROL DISPLAY UNIT
822-0884-364	CDU-3000	CONTROL DISPLAY UNIT
822-0884-414	CDU-3000	CONTROL DISPLAY UNIT
822-0884-416	CDU-3000	CONTROL DISPLAY UNIT
822-0884-420	CDU-3000	CONTROL DISPLAY UNIT
822-0884-463	CDU-3000	CONTROL DISPLAY UNIT
822-0884-472	CDU-3000	CONTROL DISPLAY UNIT
822-0884-491	CDU-3000	CONTROL DISPLAY UNIT
822-0884-492	CDU-3000	CONTROL DISPLAY UNIT
822-0884-493	CDU-3000	CONTROL DISPLAY UNIT
822-0884-512	CDU-3000	CONTROL DISPLAY UNIT
822-0884-602	CDU-3000	CONTROL DISPLAY UNIT
822-0884-604	CDU-3000	CONTROL DISPLAY UNIT
822-0884-662	CDU-3000	CONTROL DISPLAY UNIT
822-0891-001	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-005	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-008	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-012	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-014	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-017	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-018	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-027	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-028	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-029	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-030	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0892-002	CDU-5000	CONTROL DISPLAY UNIT
822-0892-011	CDU-5000	CONTROL DISPLAY UNIT
822-0892-015	CDU-5000	CONTROL DISPLAY UNIT
822-0892-019	CDU-5000	CONTROL DISPLAY UNIT
822-0916-001	IMT-4077B	TRAY, MOUNT
822-0917-001	IMT-4077C	TRAY, MOUNT
822-0923-012	RTU-4280	RADIO TUNING UNIT
822-0923-032	RTU-4280	RADIO TUNING UNIT
822-0927-001	SDD-640C	SENSOR DISPLAY DRIVER
822-0927-003	SDD-640C	SENSOR DISPLAY DRIVER
822-0931-003	GPS-4000	GPS SENSOR
822-0938-001	MCDU-901	MULTIFUNCTIONAL CONTROL DISPLAY
822-0938-011	MCDU-901	MULTIFUNCTIONAL CONTROL DISPLAY
822-0953-001	HPA-901A	AMPLIFIER, HIGH POWER
822-0953-002	HPA-901A	AMPLIFIER, HIGH POWER
822-0987-003	CPL-920D	HF ANTENNA COUPLER
822-0987-004	CPL-920D	HF ANTENNA COUPLER
822-0987-020	CPL-920D	HF ANTENNA COUPLER
822-0990-001	HFS-900D	RECEIVER/TRANSMITTER
822-0990-002	HFS-900D	RECEIVER/TRANSMITTER
822-0990-003	HFS-900D	RECEIVER/TRANSMITTER
822-0990-004	HFS-900D	RECEIVER/TRANSMITTER

822-0990-020	HFS-900D	RECEIVER/TRANSMITTER
822-0998-102	MAT-980	MAINTENANCE ACCESS TERMINAL
822-1019-013	FCC-4007	FLIGHT CONTROL COMPUTER
822-1019-113	FCC-4007	FLIGHT CONTROL COMPUTER
822-1019-213	FCC-4007	FLIGHT CONTROL COMPUTER
822-1019-313	FCC-4007	FLIGHT CONTROL COMPUTER
822-1028-002	DCP-5000	DISPLAY CONTROL PANEL
822-1028-011	DCP-5000	DISPLAY CONTROL PANEL
822-1029-001	ICC-4008	INTEGRATED CARD CAGE
822-1029-101	ICC-4008	INTEGRATED CARD CAGE
822-1033-100	EAP-703	ENGINE & ALERT PROCESSOR
822-1036-141	ADC-850F	AIR DATA COMPUTER
822-1036-411	ADC-850F	AIR DATA COMPUTER
822-1036-423	ADC-850F	AIR DATA COMPUTER
822-1036-424	ADC-850F	AIR DATA COMPUTER
822-1036-438	ADC-850F	AIR DATA COMPUTER
822-1036-441	ADC-850F	AIR DATA COMPUTER
822-1036-442	ADC-850F	AIR DATA COMPUTER
822-1036-466	ADC-850F	AIR DATA COMPUTER
822-1036-467	ADC-850F	AIR DATA COMPUTER
822-1036-611	ADC-850F	AIR DATA COMPUTER
822-1036-641	ADC-850F	AIR DATA COMPUTER
822-1036-642	ADC-850F	AIR DATA COMPUTER
822-1036-666	ADC-850F	AIR DATA COMPUTER
822-1036-667	ADC-850F	AIR DATA COMPUTER
822-1039-001	TCU-906	TELEPHONE CONV UNIT
822-1044-004	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1044-020	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1044-120	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1044-121	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1045-001	618M-5	RECEIVER-TRANSMITTER, RADIO
822-1045-401	618M-5	RECEIVER-TRANSMITTER, RADIO
822-1047-003	VHF-900B	COMMUNICATIONS TRANSCEIVER, VHF
822-1047-020	VHF-900B	COMMUNICATIONS TRANSCEIVER, VHF
822-1047-030	VHF-900B	COMMUNICATIONS TRANSCEIVER, VHF
822-1050-001	RTA-800	RECEIVER/TRANSMITTER/ANTENNA
822-1050-004	RTA-800	RECEIVER/TRANSMITTER/ANTENNA
822-1058-002	CCP-4000	CURSOR CONTROL PANEL
822-1065-006	CIU-906	CABIN INTERFACE UNIT
822-1075-001	DAU-4003	DATA ACQUISITION UNIT
822-1075-002	DAU-4003	DATA ACQUISITION UNIT
822-1084-014	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-016	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-017	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-020	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-051	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-055	AFD-3010	ADAPTIVE FLIGHT DISPLAY

822-1084-056	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-104	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-108	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-110	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-122	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-123	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-124	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-202	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-206	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-208	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-306	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-308	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-310	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-351	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-352	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-353	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-354	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-358	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-404	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-406	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-408	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-410	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-412	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-460	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-480	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-488	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-502	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-506	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-510	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-602	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-603	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1107-012	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-102	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-103	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-104	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-106	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-108	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-110	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-112	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-116	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-136	FGP-3000	FLIGHT GUIDANCE PANEL
822-1108-018	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-022	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-023	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-031	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-032	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-033	FGC-3000	FLIGHT GUIDANCE COMPUTER

822-1108-035	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-040	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-041	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-043	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-047	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-118	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-122	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-131	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-132	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-135	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-140	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-143	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-217	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-218	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-222	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-235	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-317	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1109-001	ADC-3000	AIR DATA COMPUTER
822-1109-002	ADC-3000	AIR DATA COMPUTER
822-1109-003	ADC-3000	AIR DATA COMPUTER
822-1109-004	ADC-3000	AIR DATA COMPUTER
822-1109-005	ADC-3000	AIR DATA COMPUTER
822-1109-009	ADC-3000	AIR DATA COMPUTER
822-1109-010	ADC-3000	AIR DATA COMPUTER
822-1109-011	ADC-3000	AIR DATA COMPUTER
822-1109-013	ADC-3000	AIR DATA COMPUTER
822-1109-014	ADC-3000	AIR DATA COMPUTER
822-1109-015	ADC-3000	AIR DATA COMPUTER
822-1109-016	ADC-3000	AIR DATA COMPUTER
822-1109-018	ADC-3000	AIR DATA COMPUTER
822-1109-020	ADC-3000	AIR DATA COMPUTER
822-1109-022	ADC-3000	AIR DATA COMPUTER
822-1109-023	ADC-3000	AIR DATA COMPUTER
822-1109-123	ADC-3000	AIR DATA COMPUTER
822-1109-126	ADC-3000	AIR DATA COMPUTER
822-1109-128	ADC-3000	AIR DATA COMPUTER
822-1110-001	AHC-3000	ATTITUDE DIRECTOR INDICATOR
822-1110-002	AHC-3000	ATTITUDE DIRECTOR INDICATOR
822-1111-001	VHF-21C	COMMUNICATIONS TRANSCEIVER, VHF
822-1112-001	VHF-21D	COMMUNICATIONS TRANSCEIVER, VHF
822-1113-001	VHF-22C	COMMUNICATIONS TRANSCEIVER, VHF
822-1113-021	VHF-22C	COMMUNICATIONS TRANSCEIVER, VHF
822-1114-001	VHF-22D	COMMUNICATIONS TRANSCEIVER, VHF
822-1114-021	VHF-22D	COMMUNICATIONS TRANSCEIVER, VHF
822-1115-001	VHF-422C	COMMUNICATIONS TRANSCEIVER
822-1115-021	VHF-422C	COMMUNICATIONS TRANSCEIVER
822-1116-001	VHF-422D	COMMUNICATIONS TRANSCEIVER

822-1116-021	VHF-422D	COMMUNICATIONS TRANSCEIVER
822-1120-001	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-003	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-005	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-006	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-007	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-008	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-009	CTL-22C	CONTROL, VHF COMMUNICATION
822-1121-001	CTL-23C	CONTROL, VHF COMMUNICATION
822-1121-002	CTL-23C	CONTROL, VHF COMMUNICATION
822-1121-005	CTL-23C	CONTROL, VHF COMMUNICATION
822-1122-111	RTU-870B	RADIO TUNING UNIT
822-1122-112	RTU-870B	RADIO TUNING UNIT
822-1123-102	RTU-870C	RADIO TUNING UNIT
822-1123-111	RTU-870C	RADIO TUNING UNIT
822-1129-001	ICC-3000	INTEGRATED CARD CAGE
822-1130-101	IOC-3000	I/O CONCENTRATOR IAPS
822-1130-151	IOC-3000	I/O CONCENTRATOR IAPS
822-1131-001	IEC-3000	IAPS ENVIRONMENTAL CONTROLLER
822-1132-002	DCU-3000	DATA CONCENTRATOR UNIT
822-1134-002	DCP-3000	DISPLAY CONTROL PANEL
822-1134-012	DCP-3000	DISPLAY CONTROL PANEL
822-1134-061	DCP-3000	DISPLAY CONTROL PANEL
822-1134-102	DCP-3000	DISPLAY CONTROL PANEL
822-1134-112	DCP-3000	DISPLAY CONTROL PANEL
822-1134-202	DCP-3000	DISPLAY CONTROL PANEL
822-1134-302	DCP-3000	DISPLAY CONTROL PANEL
822-1137-001	PWR-3000	POWER SUPPLY
822-1139-021	MDC-3000	MAINTENANCE DIAGNOSTIC COMPUTER
822-1139-301	MDC-3000	MAINTENANCE DIAGNOSTIC COMPUTER
822-1139-401	MDC-3000	MAINTENANCE DIAGNOSTIC COMPUTER
822-1139-402	MDC-3000	MAINTENANCE DIAGNOSTIC COMPUTER
822-1148-116	FCC-4009	FLIGHT CONTROL COMPUTER
822-1148-128	FCC-4009	FLIGHT CONTROL COMPUTER
822-1148-216	FCC-4009	FLIGHT CONTROL COMPUTER
822-1152-001	GLU-920	GLOBAL LANDING UNIT
822-1152-002	GLU-920	GLOBAL LANDING UNIT
822-1152-122	GLU-920	GLOBAL LANDING UNIT
822-1155-100	GMLU-910	GLOBAL NAVIGATION AND LANDING UNIT
822-1155-121	GMLU-910	GLOBAL NAVIGATION AND LANDING UNIT
822-1158-001	GLU-910	GLOBAL LANDING UNIT
822-1167-001	IEC-3001	IAPS ENVIRONMENTAL CONTROLLER
822-1168-001	SVO-3000	SERVO
822-1168-002	SVO-3000	SERVO
822-1168-003	SVO-3000	SERVO
822-1168-021	SVO-3000	SERVO
822-1168-022	SVO-3000	SERVO

822-1168-023	SVO-3000	SERVO
822-1168-031	SVO-3000	SERVO (HIGH TORQUE)
822-1168-032	SVO-3000	SERVO (HIGH TORQUE)
822-1168-033	SVO-3000	SERVO (HIGH TORQUE)
822-1178-101	DU-9801	DISPLAY UNIT
822-1181-002	SDU-640C	SENSOR DISPLAY UNIT
822-1193-001	FDU-3000	FLUX DETECTOR UNIT
822-1197-101	HDD-980	HARD DISK DRIVE
822-1200-001	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-002	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-003	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-005	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-201	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-202	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-204	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-207	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-209	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-802	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-803	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-997	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-999	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1239-101	CMU-900	COMMUNICATION MANAGEMENT UNIT
822-1239-151	CMU-900	COMMUNICATION MANAGEMENT UNIT
822-1250-002	VHF-920	COMMUNICATIONS TRANSCEIVER, VHF
822-1250-020	VHF-920	COMMUNICATIONS TRANSCEIVER, VHF
822-1261-101	FCC703	FLIGHT CONTROL COMPUTER
822-1278-001	DCU-3010	DATA CONCENTRATOR UNIT
822-1278-002	DCU-3010	DATA CONCENTRATOR UNIT
822-1278-003	DCU-3010	DATA CONCENTRATOR UNIT
822-1278-004	DCU-3010	DATA CONCENTRATOR UNIT
822-1279-002	CHP-3000	COURSE HEADING PANEL
822-1280-002	CHP-3010	COURSE HEADING PANEL
822-1281-002	CKP-3000	COURSE KNOB PANEL
822-1293-002	TTR-921	RECEIVER TRANSMITTER, TCAS
822-1293-321	TTR-921	RECEIVER TRANSMITTER, TCAS
822-1293-322	TTR-921	RECEIVER TRANSMITTER, TCAS
822-1294-002	TTR-4000	RECEIVER TRANSMITTER, TCAS
822-1308-027	FCC-4010	FLIGHT CONTROL COMPUTER
822-1308-320	FCC-4010	FLIGHT CONTROL COMPUTER
822-1310-004	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-005	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-101	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-102	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-103	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-104	DCU-4004	DATA CONCENTRATOR UNIT
822-1330-001	GNA-910	ANTENNA, GLOBAL POSITIONING SATELLITE
822-1338-002	TPR-901	TRANSPONDER

822-1338-003	TPR-901	TRANSPONDER
822-1338-020	TPR-901	TRANSPONDER
822-1338-021	TPR-901	TRANSPONDER
822-1343-002	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-003	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-022	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-023	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-102	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-201	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-221	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1348-001	SRT-2000-4	SATELLITE RECEIVER-TRANSMITTER
822-1348-401	SRT-2000-4	SATELLITE RECEIVER-TRANSMITTER
822-1349-001	SRT-2000-6	SATELLITE RECEIVER-TRANSMITTER
822-1349-002	SRT-2000-6	SATELLITE RECEIVER-TRANSMITTER
822-1349-401	SRT-2000-6	SATELLITE RECEIVER-TRANSMITTER
822-1354-002	CDU-6100	CONTROL DISPLAY UNIT
822-1354-102	CDU-6100	CONTROL DISPLAY UNIT
822-1354-104	CDU-6100	CONTROL DISPLAY UNIT
822-1360-001	WXA-1000	WEATHER RADAR ADAPTER
822-1360-021	WXA-1000	WEATHER RADAR ADAPTER
822-1361-001	IOC-3100	IN/OUT CONCENTRATOR
822-1361-002	IOC-3100	IN/OUT CONCENTRATOR
822-1361-003	IOC-3100	IN/OUT CONCENTRATOR
822-1361-004	IOC-3100	IN/OUT CONCENTRATOR
822-1361-101	IOC-3100	IN/OUT CONCENTRATOR
822-1361-102	IOC-3100	IN/OUT CONCENTRATOR
822-1361-103	IOC-3100	IN/OUT CONCENTRATOR
822-1361-105	IOC-3100	IN/OUT CONCENTRATOR
822-1361-106	IOC-3100	IN/OUT CONCENTRATOR
822-1361-221	IOC-3100	IN/OUT CONCENTRATOR
822-1361-222	IOC-3100	IN/OUT CONCENTRATOR
822-1361-302	IOC-3100	IN/OUT CONCENTRATOR
822-1361-303	IOC-3100	IN/OUT CONCENTRATOR
822-1361-304	IOC-3100	IN/OUT CONCENTRATOR
822-1361-321	IOC-3100	IN/OUT CONCENTRATOR
822-1361-402	IOC-3100	IN/OUT CONCENTRATOR
822-1361-404	IOC-3100	IN/OUT CONCENTRATOR
822-1361-405	IOC-3100	IN/OUT CONCENTRATOR
822-1361-406	IOC-3100	IN/OUT CONCENTRATOR
822-1361-410	IOC-3100	IN/OUT CONCENTRATOR
822-1361-411	IOC-3100	IN/OUT CONCENTRATOR
822-1361-412	IOC-3100	IN/OUT CONCENTRATOR
822-1361-440	IOC-3100	IN/OUT CONCENTRATOR
822-1361-441	IOC-3100	IN/OUT CONCENTRATOR
822-1361-601	IOC-3100	IN/OUT CONCENTRATOR
822-1361-610	IOC-3100	IN/OUT CONCENTRATOR
822-1361-612	IOC-3100	IN/OUT CONCENTRATOR

822-1361-613	IOC-3100	IN/OUT CONCENTRATOR
822-1361-614	IOC-3100	IN/OUT CONCENTRATOR
822-1362-010	IOC-4100	IN/OUT CONCENTRATOR
822-1362-052	IOC-4100	IN/OUT CONCENTRATOR
822-1362-053	IOC-4100	IN/OUT CONCENTRATOR
822-1362-054	IOC-4100	IN/OUT CONCENTRATOR
822-1362-060	IOC-4100	IN/OUT CONCENTRATOR
822-1362-065	IOC-4100	IN/OUT CONCENTRATOR
822-1362-066	IOC-4100	IN/OUT CONCENTRATOR
822-1362-080	IOC-4100	IN/OUT CONCENTRATOR
822-1362-101	IOC-4100	IN/OUT CONCENTRATOR
822-1362-111	IOC-4100	IN/OUT CONCENTRATOR
822-1362-112	IOC-4100	IN/OUT CONCENTRATOR
822-1362-113	IOC-4100	IN/OUT CONCENTRATOR
822-1362-131	IOC-4100	IN/OUT CONCENTRATOR
822-1363-002	CSU-3100	CONFIGURATION STRAPPING UNIT
822-1364-002	CSU-4100	CONFIGURATION STRAPPING UNIT
822-1369-001	IGA-2000	INTERMEDIATE GAIN ANTENNA
822-1369-003	IGA-2000	INTERMEDIATE GAIN ANTENNA
822-1369-401	IGA-2000	INTERMEDIATE GAIN ANTENNA
822-1373-021	FCC-4011	FLIGHT CONTROL COMPUTER
822-1373-121	FCC-4011	FLIGHT CONTROL COMPUTER
822-1377-001	GPS-4000A	GPS SENSOR
822-1378-001	AHC-3000A	ATTITUDE DIRECTOR INDICATOR
822-1379-101	DSP-9800	DISPLAY SELECT PANEL
822-1382-101	DCC-9800	DISPLAY CONCENTRATOR COMPUTER
822-1398-452	ADC-87A	AIR DATA COMPUTER
822-1398-459	ADC-87A	AIR DATA COMPUTER
822-1398-471	ADC-87A	AIR DATA COMPUTER
822-1398-473	ADC-87A	AIR DATA COMPUTER
822-1398-474	ADC-87A	AIR DATA COMPUTER
822-1398-478	ADC-87A	AIR DATA COMPUTER
822-1398-480	ADC-87A	AIR DATA COMPUTER
822-1398-481	ADC-87A	AIR DATA COMPUTER
822-1398-482	ADC-87A	AIR DATA COMPUTER
822-1398-486	ADC-87A	AIR DATA COMPUTER
822-1398-490	ADC-87A	AIR DATA COMPUTER
822-1398-493	ADC-87A	AIR DATA COMPUTER
822-1398-504	ADC-87A	AIR DATA COMPUTER
822-1398-510	ADC-87A	AIR DATA COMPUTER
822-1398-521	ADC-87A	AIR DATA COMPUTER
822-1399-001	DSP-2000	DISPLAY SELECT PANEL
822-1399-002	DSP-2000	DISPLAY SELECT PANEL
822-1399-102	DSP-2000	DISPLAY SELECT PANEL
822-1405-001	SRT-2000-3	SATELLITE RECEIVER TRANSMITTER
822-1407-001	ICC-4009	INTEGRATED CARD CAGE
822-1424-001	APM-900	AIRCRAFT PERSONALITY MODULE

822-1444-012	AFD-2000	ADAPTIVE FLIGHT DISPLAY
822-1459-001	ICC-3001	INTEGRATED CARD CAGE
822-1459-002	ICC-3001	INTEGRATED CARD CAGE
822-1459-003	ICC-3001	INTEGRATED CARD CAGE
822-1463-200	OCM-4100	OPTIONS CONTROL MODULE
822-1463-201	OCM-4100	OPTIONS CONTROL MODULE
822-1463-208	OCM-4100	OPTIONS CONTROL MODULE
822-1463-209	OCM-4100	OPTIONS CONTROL MODULE
822-1463-210	OCM-4100	OPTIONS CONTROL MODULE
822-1463-212	OCM-4100	OPTIONS CONTROL MODULE
822-1463-214	OCM-4100	OPTIONS CONTROL MODULE
822-1463-216	OCM-4100	OPTIONS CONTROL MODULE
822-1463-224	OCM-4100	OPTIONS CONTROL MODULE
822-1465-001	NAV-4000	RCVR, VOR/LOC/GS/MB/ADF
822-1465-101	NAV-4000	RCVR, VOR/LOC/GS/MB/ADF
822-1466-001	DME-4000	DISTANCE MEASURING EQPT
822-1468-101	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1468-102	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1468-202	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1468-302	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1469-101	RIU-4000	RADIO INTERFACE UNIT
822-1469-102	RIU-4000	RADIO INTERFACE UNIT
822-1469-151	RIU-4000	RADIO INTERFACE UNIT
822-1469-152	RIU-4000	RADIO INTERFACE UNIT
822-1469-153	RIU-4000	RADIO INTERFACE UNIT
822-1476-002	DCP-3020	DISPLAY CONTROL PANEL
822-1476-012	DCP-3020	DISPLAY CONTROL PANEL
822-1483-002	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-010	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-101	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-102	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-201	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-250	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-270	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-301	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-350	DCU-3001	DATA CONCENTRATOR UNIT
822-1484-200	OCM-3100	OPTIONS CONTROL MODULE
822-1484-201	OCM-3100	OPTIONS CONTROL MODULE
822-1484-205	OCM-3100	OPTIONS CONTROL MODULE
822-1484-209	OCM-3100	OPTIONS CONTROL MODULE
822-1484-217	OCM-3100	OPTIONS CONTROL MODULE
822-1484-219	OCM-3100	OPTIONS CONTROL MODULE
822-1484-222	OCM-3100	OPTIONS CONTROL MODULE
822-1484-223	OCM-3100	OPTIONS CONTROL MODULE
822-1484-228	OCM-3100	OPTIONS CONTROL MODULE
822-1484-241	OCM-3100	OPTIONS CONTROL MODULE
822-1484-252	OCM-3100	OPTIONS CONTROL MODULE

822-1485-008	CDU-6200	CONTROL DISPLAY UNIT
822-1485-010	CDU-6200	CONTROL DISPLAY UNIT
822-1485-032	CDU-6200	CONTROL DISPLAY UNIT
822-1485-038	CDU-6200	CONTROL DISPLAY UNIT
822-1485-062	CDU-6200	CONTROL DISPLAY UNIT
822-1485-066	CDU-6200	CONTROL DISPLAY UNIT
822-1485-070	CDU-6200	CONTROL DISPLAY UNIT
822-1485-108	CDU-6200	CONTROL DISPLAY UNIT
822-1485-166	CDU-6200	CONTROL DISPLAY UNIT
822-1485-202	CDU-6200	CONTROL DISPLAY UNIT
822-1485-204	CDU-6200	CONTROL DISPLAY UNIT
822-1485-402	CDU-6200	CONTROL DISPLAY UNIT
822-1485-562	CDU-6200	CONTROL DISPLAY UNIT
822-1517-001	DCU-2000	DATA CONCENTRATOR UNIT
822-1517-002	DCU-2000	DATA CONCENTRATOR UNIT
822-1531-001	MAA-2000	TWLU ANTENNA
822-1532-001	PMAA-2000	CWLU ANTENNA
822-1533-001	RDC-4002	REMOTE DATA CONCENTRATOR
822-1533-201	RDC-4002	REMOTE DATA CONCENTRATOR
822-1538-002	DCU-5010	DATA CONCENTRATOR UNIT
822-1538-003	DCU-5010	DATA CONCENTRATOR UNIT
822-1538-004	DCU-5010	DATA CONCENTRATOR UNIT
822-1538-103	DCU-5010	DATA CONCENTRATOR UNIT
822-1538-201	DCU-5010	DATA CONCENTRATOR UNIT
822-1543-101	FSU-5010	FILE SERVER UNIT
822-1543-201	FSU-5010	FILE SERVER UNIT ASSEMBLY
822-1558-010	ACP-4100	AUDIO CONTROL PANEL
822-1558-020	ACP-4100	AUDIO CONTROL PANEL
822-1558-060	ACP-4100	AUDIO CONTROL PANEL
822-1558-070	ACP-4100	AUDIO CONTROL PANEL
822-1558-080	ACP-4100	AUDIO CONTROL PANEL
822-1558-090	ACP-4100	AUDIO CONTROL PANEL
822-1560-003	CDU-5200	CONTROL DISPLAY UNIT
822-1560-006	CDU-5200	CONTROL DISPLAY UNIT
822-1560-106	CDU-5200	CONTROL DISPLAY UNIT
822-1561-001	DCP-5020	DISPLAY CONTROL PANEL
822-1567-101	MCP-730	MODE CONTROL PANEL
822-1567-102	MCP-730	MODE CONTROL PANEL
822-1569-003	RSP-5020	REVERSIONARY SWITCHING PANEL
822-1569-103	RSP-5020	REVERSIONARY SWITCHING PANEL
822-1573-003	CCP-5020	CNTRL PNL, SLVR GRY METALLIC
822-1573-013	CCP-5020	CNTRL PNL, SLVR GRY METALLIC
822-1574-001	FGP-5020	FLIGHT GUIDANCE PANEL
822-1575-001	TAS-5000	TERRAIN AWARENESS SYSTEM
822-1577-012	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-102	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-104	AFD-5220	ADAPTIVE FLIGHT DISPLAY

822-1577-105	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-202	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-204	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-205	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-303	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1578-002	DCU-5000	DATA CONCENTRATOR UNIT
822-1578-003	DCU-5000	DATA CONCENTRATOR UNIT
822-1579-001	NAV-4500	RCVR, VOR/LOC/GS/MB/ADF
822-1579-101	NAV-4500	RCVR, VOR/LOC/GS/MB/ADF
822-1581-001	RDC-5000	REMOTE DATA CONCENTRATOR
822-1583-001	CPE-4100	CONTROL PANEL ELECTRONICS
822-1588-101	SVO-730	SERVO DRIVE UNIT
822-1590-101	RIU-4100	RADIO INTERFACE UNIT
822-1590-102	RIU-4100	RADIO INTERFACE UNIT
822-1590-151	RIU-4100	RADIO INTERFACE UNIT
822-1590-152	RIU-4100	RADIO INTERFACE UNIT
822-1592-126	FGC-3002	FLIGHT GUIDANCE COMPUTER
822-1592-226	FGC-3002	FLIGHT GUIDANCE COMPUTER
822-1592-426	FGC-3002	FLIGHT GUIDANCE COMPUTER
822-1604-101	FCC-730	FLIGHT CONTROL COMPUTER
822-1604-151	FCC-730	FLIGHT CONTROL COMPUTER
822-1646-001	WLU-2001	WIRELESS L.A.N. UNIT
822-1692-001	ANT-5020	ANTENNA, AERO
822-1693-001	AIC-5020	ANTENNA CONTROL UNIT
822-1710-001	WRT-2100	RECEIVER/TRANSMITTER
822-1710-203	WRT-2100	RECEIVER/TRANSMITTER
822-1716-101	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-111	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-112	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-121	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-122	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1719-001	DCP-2000	DISPLAY CONTROL PANEL
822-1719-002	DCP-2000	DISPLAY CONTROL PANEL
822-1719-003	DCP-2000	DISPLAY CONTROL PANEL
822-1719-004	DCP-2000	DISPLAY CONTROL PANEL
822-1719-501	DCP-2000	DISPLAY CONTROL PANEL
822-1719-502	DCP-2000	DISPLAY CONTROL PANEL
822-1724-458	ADC-85L	AIR DATA COMPUTER
822-1739-002	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1739-003	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1739-501	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1739-511	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1746-001	CCP-3000	CURSOR CONTROL PANEL
822-1746-002	CCP-3000	CURSOR CONTROL PANEL
822-1746-012	CCP-3000	CURSOR CONTROL PANEL
822-1746-102	CCP-3000	CURSOR CONTROL PANEL
822-1753-016	AFD-3010E	ADAPTIVE FLIGHT DISPLAY

822-1753-017	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-020	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-120	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-122	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-123	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-124	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-220	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-308	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-310	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-351	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-352	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-353	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-354	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-358	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-408	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-410	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-412	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-480	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-483	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-488	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-506	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-510	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-602	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-603	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1764-001	NSU-2100	NETWORK SERVER UNIT
822-1771-001	EGU-2100	ETHERNET GATEWAY UNIT
822-1772-003	HST-900	HIGH-SPEED SATCOM TRANSCEIVER
822-1785-001	SRT-2100B	SATELLITE RECEIVER TRANSMITTER
822-1791-001	TAC-5000	TAWS CONFIGURATION MODULE
822-1792-001	SPC-5000	STALL PROTECTION COMPUTER
822-1792-002	SPC-5000	STALL PROTECTION COMPUTER
822-1793-001	SVL-85A	SERIES ACTUATOR
822-1794-001	SVL-86A	SERIES ACTUATOR
822-1795-001	SVL-87A	SERIES ACTUATOR
822-1800-001	AHC-3000S	ATTITUDE DIRECTOR INDICATOR
822-1807-001	CTL-92E	CONTROL UNIT
822-1807-002	CTL-92E	CONTROL UNIT
822-1807-003	CTL-92E	CONTROL UNIT
822-1807-004	CTL-92E	CONTROL UNIT
822-1807-006	CTL-92E	CONTROL UNIT
822-1811-003	MMT-5000	MOUNT
822-1811-004	MMT-5000	MOUNT
822-1821-001	GLU-925	RECEIVER
822-1821-330	GLU-925	RECEIVER
822-1821-430	GLU-925	RECEIVER
822-1825-101	RTU-870F	RADIO TUNING UNIT
822-1825-102	RTU-870F	RADIO TUNING UNIT

822-1825-111	RTU-870F	RADIO TUNING UNIT
822-1825-112	RTU-870F	RADIO TUNING UNIT
822-1828-002	DCP-3030	DISPLAY CONTROL PANEL
822-1828-003	DCP-3030	DISPLAY CONTROL PANEL
822-1828-012	DCP-3030	DISPLAY CONTROL PANEL
822-1828-061	DCP-3030	DISPLAY CONTROL PANEL
822-1828-062	DCP-3030	DISPLAY CONTROL PANEL
822-1828-102	DCP-3030	DISPLAY CONTROL PANEL
822-1828-112	DCP-3030	DISPLAY CONTROL PANEL
822-1828-161	DCP-3030	DISPLAY CONTROL PANEL
822-1828-162	DCP-3030	DISPLAY CONTROL PANEL
822-1861-010	ACP-4110	AUDIO CONTROL PANEL
822-1861-015	ACP-4110	AUDIO CONTROL PANEL
822-1861-030	ACP-4110	AUDIO CONTROL PANEL
822-1861-035	ACP-4110	AUDIO CONTROL PANEL
822-1863-002	RIU-4010	RADIO INTERFACE UNIT
822-1863-012	RIU-4010	RADIO INTERFACE UNIT
822-1863-022	RIU-4010	RADIO INTERFACE UNIT
822-1863-024	RIU-4010	RADIO INTERFACE UNIT
822-1863-052	RIU-4010	RADIO INTERFACE UNIT
822-1863-062	RIU-4010	RADIO INTERFACE UNIT
822-1863-072	RIU-4010	RADIO INTERFACE UNIT
822-1863-074	RIU-4010	RADIO INTERFACE UNIT
822-1863-151	RIU-4010	RADIO INTERFACE UNIT
822-1864-001	RIU-4110	RADIO INTERFACE UNIT
822-1864-002	RIU-4110	RADIO INTERFACE UNIT
822-1864-012	RIU-4110	RADIO INTERFACE UNIT
822-1864-022	RIU-4110	RADIO INTERFACE UNIT
822-1864-024	RIU-4110	RADIO INTERFACE UNIT
822-1864-051	RIU-4110	RADIO INTERFACE UNIT
822-1864-052	RIU-4110	RADIO INTERFACE UNIT
822-1864-062	RIU-4110	RADIO INTERFACE UNIT
822-1864-072	RIU-4110	RADIO INTERFACE UNIT
822-1864-074	RIU-4110	RADIO INTERFACE UNIT
822-1864-151	RIU-4110	RADIO INTERFACE UNIT
822-1868-201	AHC-1000S	ATTITUDE DIRECTOR INDICATOR
822-1871-201	AHC-1000A	ATTITUDE HEADING COMPUTER
822-1872-101	VHF-4000E	COMMUNICATIONS TRANSCEIVER, VHF
822-1872-301	VHF-4000E	COMMUNICATIONS TRANSCEIVER, VHF
822-1877-001	MCE-6000	MODULAR CABINET EQPT
822-1879-001	PSE-6000	POWER SUPPLY EQUIP
822-1880-001	PME-6000	PROCESSOR/MASS STORAGE EQPT
822-1881-001	MME-6000	MME-6000 MOVING MAP EQUIP
822-1881-002	MME-6000	MOVING MAP EQPT
822-1881-101	MME-6000	MOVING MAP EQPT
822-1915-001	MME-6100	MOVING MAP EQPT
822-1915-002	MME-6100	MOVING MAP EQPT

822-1915-101	MME-6100	MOVING MAP EQUIPMENT
822-1916-001	MFE-6000	MODULAR FAN EQPT
822-1917-104	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-105	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-202	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-204	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-205	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-303	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1939-001	ALT-1000	ALTIMETER
822-1939-005	ALT-1000	ALTIMETER
822-1939-006	ALT-1000	ALTIMETER
822-1943-001	ESE-6100	ETHERNET SWITCH EQPT
822-1943-002	ESE-6100	ETHERNET SWITCH EQPT
822-1947-010	AOP-4120	AUDIO OPTIONS PANEL
822-1950-010	ACP-4120	AUDIO CONTROL PANEL
822-1950-030	ACP-4120	AUDIO CONTROL PANEL
822-1950-050	ACP-4120	AUDIO CONTROL PANEL
822-1950-060	ACP-4120	AUDIO CONTROL PANEL
822-1950-070	ACP-4120	AUDIO CONTROL PANEL
822-1950-090	ACP-4120	AUDIO CONTROL PANEL
822-1950-110	ACP-4120	AUDIO CONTROL PANEL
822-1950-130	ACP-4120	AUDIO CONTROL PANEL
822-1950-160	ACP-4120	AUDIO CONTROL PANEL
822-1950-503	ACP-4120	AUDIO CONTROL PANEL
822-1964-004	RSP-5040	REVERSIONARY SWITCHING PANEL
822-1965-102	CCP-5040	CURSOR CONTROL PANEL
822-1966-002	DCP-5040	DISPLAY CONTROL PANEL
822-1984-002	DDP-5040	DIMMER DISPLAY PANEL
822-1987-001	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-003	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-004	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-005	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-006	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-007	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-008	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-004	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-024	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-028	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-104	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1993-100	AFD-3310	ADAPTIVE FLIGHT DISPLAY
822-2012-036	FGC-3003	FLIGHT GUIDANCE COMPUTER
822-2018-001	ICC-3010	INTEGRATED CARD CAGE
822-2020-001	HST-2100	HIGH-SPEED SATCOM TRANSCEIVER
822-2023-001	SRT-2100-3	SATELLITE RECEIVER TRANSMITTER
822-2023-002	SRT-2100-3	SATELLITE RECEIVER TRANSMITTER
822-2030-001	XMA-1000	XM WEATHER ANTENNA
822-2031-001	XMWR-1000	XM WEATHER RECEIVER

822-2031-002	XMWR-1000	XM WEATHER RECEIVER
822-2033-001	GNA-925	ANTENNA, GLOBAL POSITIONING SATELLITE
822-2063-002	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-101	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-102	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-103	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-104	DIU-3010	DIGITAL INTERFACE UNIT
822-2064-001	IOC-3110	IN/OUT CONCENTRATOR
822-2065-001	IOC-4110	IN/OUT CONCENTRATOR
822-2083-001	ADC-3010	AIR DATA COMPUTER
822-2083-002	ADC-3010	AIR DATA COMPUTER
822-2100-001	AFDX-2100	AFDX SWITCH UNIT
822-2100-101	AFDX-2100	AFDX SWITCH UNIT
822-2102-001	AFDX-2120	AFDX SWITCH UNIT
822-2102-101	AFDX-2120	AFDX SWITCH UNIT
822-2117-002	DCP-3040	DISPLAY CONTROL PANEL
822-2117-202	DCP-3040	DISPLAY CONTROL PANEL
822-2119-001	ICC-3011	INTEGRATED CARD CAGE
822-2132-001	TSS-4100	TRAFFIC SURVEILLANCE SYSTEM PROCESSING
822-2164-002	CCP-5060	CURSOR CONTROL PANEL
822-2165-002	DCP-5060	DISPLAY CONTROL PANEL
822-2171-020	ACP-5200	AUDIO CONTROL PANEL
822-2171-040	ACP-5200	AUDIO CONTROL PANEL
822-2171-060	ACP-5200	AUDIO CONTROL PANEL
822-2171-070	ACP-5200	AUDIO CONTROL PANEL
822-2171-080	ACP-5200	AUDIO CONTROL PANEL
822-2171-090	ACP-5200	AUDIO CONTROL PANEL
822-2172-010	CPE-5200	CONTROL PANEL ELECTRONICS
822-2175-001	CTL-22D	CONTROL, VHF COMMUNICATION
822-2175-003	CTL-22D	CONTROL, VHF COMMUNICATION
822-2175-005	CTL-22D	CONTROL, VHF COMMUNICATION
822-2175-007	CTL-22D	CONTROL, VHF COMMUNICATION
822-2176-001	CTL-22G	CONTROL, VHF COMMUNICATION
822-2176-003	CTL-22G	CONTROL, VHF COMMUNICATION
822-2176-005	CTL-22G	CONTROL, VHF COMMUNICATION
822-2176-007	CTL-22G	CONTROL, VHF COMMUNICATION
822-2177-001	CTL-23D	CONTROL, VHF COMMUNICATION
822-2177-003	CTL-23D	CONTROL, VHF COMMUNICATION
822-2178-001	CTL-23G	CONTROL, VHF COMMUNICATION
822-2179-001	CTL-32G	CONTROL, NAVIGATION
822-2179-007	CTL-32G	CONTROL, NAVIGATION
822-2179-011	CTL-32G	CONTROL, NAVIGATION
822-2179-013	CTL-32G	CONTROL, NAVIGATION
822-2179-015	CTL-32G	CONTROL, NAVIGATION
822-2180-001	CTL-62G	CONTROL, ADF
822-2180-003	CTL-62G	CONTROL, ADF
822-2180-005	CTL-62G	CONTROL, ADF

822-2180-007	CTL-62G	CONTROL, ADF
822-2180-013	CTL-62G	CONTROL, ADF
822-2180-015	CTL-62G	CONTROL, ADF
822-2181-201	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-203	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-205	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-207	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-213	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2182-101	CTL-93T	CONTROL, TCAS
822-2182-103	CTL-93T	CONTROL, TCAS
822-2182-109	CTL-93T	CONTROL, TCAS
822-2182-111	CTL-93T	CONTROL, TCAS
822-2182-113	CTL-93T	CONTROL, TCAS
822-2182-115	CTL-93T	CONTROL, TCAS
822-2189-001	GPS-4000S	GPS SENSOR
822-2189-002	GPS-4000S	GLOBAL POSITIONING SYSTEM
822-2191-001	ICC-3111	INTEGRATED CARD CAGE
822-2210-001	WLU-2100	MULTI-MODE WIRELESS LAN UNIT
822-2213-003	CCP-5220	CONTROL PANEL
822-2213-004	CCP-5220	CONTROL PANEL
822-2215-001	DBU-5000	DATA BASE UNIT
822-2215-002	DBU-5000	DATA BASE UNIT
822-2215-101	DBU-5000	DATA BASE UNIT
822-2215-102	DBU-5000	DATA BASE UNIT
822-2215-201	DBU-5000	DATA BASE UNIT
822-2215-202	DBU-5000	DATA BASE UNIT
822-2215-203	DBU-5000	DATA BASE UNIT
822-2215-302	DBU-5000	DATA BASE UNIT
822-2215-601	DBU-5000	DATA BASE UNIT
822-2215-602	DBU-5000	DATA BASE UNIT
822-2231-020	HST-2110	HIGH-SPEED SATCOM TRANSCEIVER
822-2232-020	HST-2110B	HIGH-SPEED SATCOM TRANSCEIVER
822-2233-010	HST-2120	HIGH-SPEED SATCOM TRANSCEIVER
822-2248-001	HCM-2100B	TRANSMITTER MODULE
822-2254-001	RTA-4112	TOP LEVEL ASSY
822-2256-001	RTA-4118	RECEIVER / TRANSMITTER ANTENNA ASSEMBLY
822-2295-001	JEE-6000	JUMPER ETHERNET EQPT
822-2349-100	AFD-3320	MULTIFUNCTIONAL DISPLAY
822-2362-002	DCU-3001C	DATA CONCENTRATOR UNIT
822-2362-102	DCU-3001C	DATA CONCENTRATOR UNIT
822-2381-010	ACP-4130	AUDIO CONTROL PANEL
822-2381-015	ACP-4130	AUDIO CONTROL PANEL
822-2381-030	ACP-4130	AUDIO CONTROL PANEL
822-2381-035	ACP-4130	AUDIO CONTROL PANEL
822-2381-210	ACP-4130	AUDIO CONTROL PANEL
822-2381-215	ACP-4130	AUDIO CONTROL PANEL
822-2381-230	ACP-4130	AUDIO CONTROL PANEL

822-2381-235	ACP-4130	AUDIO CONTROL PANEL
822-2381-601	ACP-4130	AUDIO CONTROL PANEL
822-2388-001	DCP-3310	DISPLAY CONTROL PANEL
822-2389-001	CCP-3310	CURSOR CONTROL PANEL
822-2433-100	DCP-3320	DISPLAY CONTROL PANEL
822-2434-100	CCP-3320	CURSOR CONTROL PANEL
822-2437-010	ANT-4010	ANTENNA, GLOBAL POSITIONING SATELLITE
822-2468-001	FCP-5120	FLIGHT CONTROL PANEL
822-5404-001	DFA-901	ANTENNA, ADF
822-5404-003	DFA-901	ANTENNA, ADF
848-1-1	CA-848	ANNUNCIATOR PANEL
856-0072-010	WX-1000E	DRIVER, DISK
856-0072-020	WX-1000	LIGHTNING DETECTION SYS
856-0073-010	AIS	AUDIO INTEGRATION SYSTEM
856-0073-020	AIS	AUDIO INTEGRATION SYSTEM
856-0073-030	AIS	AUDIO INTEGRATION SYSTEM
856-0073-050	AIS	AUDIO INTEGRATION SYSTEM
856-0073-060	AIS	AUDIO INTEGRATION SYSTEM
856-0075-010	LTN-101	IRS MODE SELECT (Export License required)
856-0075-020	LTN-101	DUAL IRS MODE SELECT
856-0075-050	LTN-101	SINGLE IRS MODE SELECT
856-0075-110	LTN-101	IRS MODE SELECT
856-0077-010	AOA	ANGLE OF ATTACK XMTR
856-1-1	WT-856	WINDSHIELD TEMPERATURE CONTROL
856-1-3	WT-856	WINDSHIELD TEMP CONTROL
866-0016-101	TSA-4100	ANTENNA
866-0018-010	ACP-3110	AUDIO CONTROL PANEL
866-0018-015	ACP-3110	AUDIO CONTROL PANEL
866-0018-030	ACP-3110	AUDIO CONTROL PANEL
866-0018-035	ACP-3110	AUDIO CONTROL PANEL
866-0022-001	ABDU-6210E	ACS 21.3 ETHERNET LCD VIDEO DISPLAY
866-0022-002	ABDU-6210E	ACS 21.3 ETHERNET LCD VIDEO DISPLAY
866-0022-003	ABDU-6210E	ACS 21.3 ETHERNET LCD VIDEO DISPLAY MONI
866-0023-002	ABDU-6240E	ACS 24 ETHERNET LCD VIDEO DISPLAY
866-0024-001	ABDU-6180E	ACS 18.1 ETHERNET LCD VIDEO DISPLAY
866-0024-002	ABDU-6180E	ACS 18.1" ETHERNET LCD VIDEO DISPLAY
866-0025-001	ADVD-6220E	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-001	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-002	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-004	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-005	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-006	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-1-1	PS-866	FINAL ASSEMBLY: DUAL POWER SUPPLY
866-5010-010	XMA-1000G	ANTENNA, GPS/XM
900304-1	WLU900	WIRELESS LAN UNIT
900973-1	WLU-6000	WIRELESS ACCESS SVC PNT(WASP)
902-1-2	MT-902	MACH TRIM INTERFACE

911010-1	TTDC-400	OUTLINE, TIME TO DESTINATION CONTROLLER
911010-2	TTDC-400	OUTLINE, TIME TO DESTINATION CONTROLLER
912000	TRVS-100	TERMINATED REMOTE VIDEO SWITCH OUTLINE
914091-1	MT932	MOUNT,3/8 ATR,RDU
914095-100	OD914	OUTLINE DRAWING
920040	DIU-4004	AIRSHOW 4XXX, FLANGE MOUNT, DIU
920050	DIU-4005	OUTLINE, 1/2 ATR MOUNT DIU
920052	DIU-4005	AIRSHOW 400,ATR,RGB
920055	DIU-4005	OUTLINE, 1/2 ATR MOUNT DIU
920060	DIU-4006	OUTLINE, GENESYS SYSTEM DCU
920062	DIU-4006	GENESYS DCU,NTSC/RGB
920072	DIU-4007	COMPACT DCU,NTSC/RGB
920080	DIU-4008	CD-ROM UNIT,REMOTE,CDCU
920090	FDCU-400	FLANGE DCU,NTSC
920092	FDCU-400	FLANGE DCU,RGB
921000	AS420	AIRSHOW 420
921005	AS420	AIRSHOW 420
921006	AS420	AIRSHOW 420
922000-1	FDC-400	OUTLINE, FLIGHT DECK CONTROLLER
922000-2	FDC-400	OUTLINE, FLIGHT DECK CONTROLLER
922000-3	FDC-400	FLIGHT DECK CONT,ROCKWELL GRAY
92450-52	MLR	MONITOR, 10.4" LCD RUGGEDIZED
925000-100	DMS4000	DIGITAL MEDIA SERVER
925010-100	DIU-4200	AIRSHOW 4200
925010-110	AS4200	FINAL ASSEMBLY, AIRSHOW 4200D
925410-100-1	AS4000	MOUNT KIT,4 MCU,DMS
930002-02	MRDU-TV	MRDU,2-RCVR,2100,ASTV
930002-14	MRDU-TV	MRDU,4-RCVR,2400,ASTV
930010-02	IFUTV	IF MULTIPLEXER,ASTV,GEN3
930011-02	IFUTV	OUTLINE,IF MULTI-SWITCH,(IMU 2), 4-INPUT
931000-101	RDUTV	RDU,DUAL CONUS,DIRECTV,ASTV
931000-105	RDUTV	RDU,DUAL EUROPE,TPS,ASTV
931000-120	RDUTV	RDU,CONUS/DTV,EUROPE/TPS
931000-200	RDUCI	OUTLINE, COMMON INTERFACE (CI) RDU TAILW
931000-201	RDUTVUS	RDU, CONUS DIRECTV, TAILWIND AIRBORNE TV
931000-202	RDUCIUS	OUTLINE, US/COMMON INTERFACE RDU TAILWIN
931000-205	RDUTVEU	RDU, DUAL EUROPE, TPS, TAILWIND AIRBORNE
931000-207	RDUTVME	RDU, DUAL MIDDLE EAST, SHOWTIME, TAILWIND
931000-212	RDUTVME	RDU, DUAL MIDDLE EAST, (ARABSAT), TAILWIND
931000-220	RDU1000	RDU, CONUS DIRECTV/EUROPE TPS, TAILWIND
931000-227	RDUTVEUME	RDU, EUROPE TPS/MIDDLE EAST, SHOWTIME
932000-100	ANT2000	OUTLINE, FUSELAGE MOUNTED UNIT
932000-200	FMU2000	OUTLINE, FUSELAGE MOUNT UNIT
932000-201	ANT2000	OUTLINE, FUSELAGE MOUNTED UNIT
932000-202	ANT2000	OUTLINE, FUSELAGE MOUNTED UNIT
932000-203	ANT2000	OUTLINE, FUSELAGE MOUNTED UNIT
932001-100	ANT2001	OUTLINE, TAIL MOUNT UNIT, DBS ANTENNA

932001-102	ANT2001	OUTLINE, TAIL MOUNT UNIT, DBS ANTENNA
932002-100	ANT2002	OUTLINE, SYSTEM SIGNAL PROCESSOR (SSP)
932003-100	ANT2003	OUTLINE, CONFIGURATION DATA MODULE
932006-100	OT2003	OUTLINE, GIMBAL ELECTRONICS MODULE (GEM)
932007-101	MU20007	IF MULTIPLEXER UNIT, 16 CHANNEL OUTPUT
932007-102	MU20007	IF MULTIPLEXER UNIT, 16 CHANNEL OUTPUT
933001-100	CPI933	OUTLINE, CONTROLLER POWER INTERMEDIATE
933002-100	RDU933	OUTLINE, RECEIVER DECODER UNIT 8
933003-301	RDM933	INTEGRATED RECEIVER DECODER MODULE
933003-305	RDM933	INTEGRATED RECEIVER DECODER MODULE
933003-309	AC-309	FINAL ASSEMBLY, CONFIGURATION (IRDM)
934102-100	GCM934	GIMBAL CONTROL MODULE
934104-100	PAU934	POWER AMPLIFIER UNIT
936001-100	TMU936	TAIL MOUNT UNIT
936002-100	ACU936	ANTENNA CONTROL UNIT
937-1-1	AI-937	DE-ICE TIMER
938-1-1	CA-938	ANNUNCIATOR
938500-200	AER3000	AEROCOM 3000 TRAY (INT'L COMM GROUP)
938810A-B	JPB938	JET PHONE (BLACK) (INT'L COMM GROUP)
962000-101	ADB	AREA DISTRIBUTION BOX,CMS2
962001-101	ADB	AREA DISTRIBUTION BOX,CMS2
963000-103	EDIB	EDIB, ENCODER BOX CMS2
963001-103	EDIB	OUTLINE, ENCODER DIGITAL INTERFACE BOX
964000-103	DIB	DIB, DECODER BOX CMS2
964001-103	DIB	OUTLINE, DECODER DIGITAL INTERFACE BOX
981-1-1	AVC981	AUDIO/VIDEO CONTROLLER
990-4132-005	SAE-6300	3 CHANNEL HONEYWELL/BAKER AMP (BAKER)
ALD-1801D	BDE-6180	18.1 IN BULKHEAD DISPLAY EQPT (ACS)
ALD-2131D	BDE-6210	BULKHEAD DISPLAY EQPT 21.3 IN (ACS)
AT208-1	AT208	INDICATOR, FUEL TOTALIZER
DT-A4RC	SRE-6000	MID RANGE TWEETER
DT-AUS-4MRC	SWURMRC	SUBWOOFER (UNDER SEAT) (DTSYSTEMS)
DT-AWMR-4MBA	SWMR4MBA	SUBWOOFER (MAG RACK) (DTSYSTEMS)
DT-AWMR-4MBA-8	SWMR4MBA8	SUBWOOFER 8OHM MAG RACK
DT-PA2N	PA2N	4 OHM CABIN PA SPEAKERS
DT-PA2N-8	PA2N8	8 OHM SPEAKER
FG-8000RC-001	EFB-6000	ELECT FLGHT BAG
HX2790C	PCU-6100	WIRELESS PCU
HX4700	PCU-6100	WIRELESS PCU
J7942G	LPT-6110	PRINTER SERVER (HP)
PC900-3A2000PH1-1	FFI	FUEL FLOW INDICATOR
Q1679A	PSFQ	PRINTER/SCANNER/FAX
Q5801A	PSFQ	PRINTER/SCANNER/FAX
RV617-6231-001	RETRAC-22	8.6" LCD
RV617-6231-002	RETRAC-23	8.6" LCD
RV617-6231-011	RETRAC-86	8.4" LCD

RV617-6231-012	RETRAC-26	8.4" LCD
RV617-6265-001	RETRAC-32	8.6" LCD
RV617-6265-002	RETRAC-33	8.6" LCD
RV700-2061-001	LCD-07	8.6" LCD
RV700-2086-001	MKVI-PROJ	MK VII LCD PROJECTOR
RV700-2184-001	VDU-09	SVDU
RV700-2200-001	VDU-10	SVDU
RV743-0238-001	VTR-21	H18 VTR
RV743-0288-001	AMUX	MUX AUDIO
RV743-0293-001	VRU	H18 VTR
RV743-0304-001	VRU	H18 VTR
RV743-0315-002	SCU-80	PSCU
RV743-0315-003	SCU-81	PSCU
RV743-0315-004	SCU-82	PSCU
RV980-9900-001	ARU	AUDIO-140
XMR200-01	XMR200	HUT XM RADIO 2 CHANNEL RECEIVER
XMR400-01	XMR400	XM RADIO