

Services Information

Ordering Procedure and Pool Locations	1
---	---

Exchange Services

General Terms and Conditions	3
Exchange Billing Procedures	3
High Price Repair To Exchange Policy	4
Credit Cards	4
Exchange Core Returns Policy	5
Return Instructions	7
Unused Exchange Returns	8
Exchange Shipping Procedures	10
Expedited Exchange Service	10
FAA 8130-3 Reprint Requests	10
Export Compliance	10
Warranty Policy	11
Service Center Repair Warranty	11

Rental Services

General Terms and Conditions	13
Rental Billing Procedures	13
Credit Cards	13
Rental Returns	14
Unused Rental Returns	16
Rental Shipping Procedures	16
Expedited Rental Service	17
FAA 8130-3 Reprint Requests	17
Export Compliance	17

Services for Government or Military Corporate / Business Aircraft

Available Services	19
--------------------------	----

Price Lists

Avionics and Controls Product Part Numbers	21
Ametek Systems Product Part Numbers	100
Cabin Systems and Airshow Product Part Numbers	101
Rockwell Collins — United Kingdom 'P@ves' Pool	116

International and Service Solutions

.....	117
-------	-----

Intertrade — Aftermarket Solutions

.....	121
-------	-----

General Conditions of Sale

Repair, Overhaul and Modification	125
---	-----

Acronyms

.....	131
-------	-----

Table of Contents

Intentionally Blank

ORDERING PROCEDURE AND POOL LOCATIONS

Service requests can be placed directly through Rockwell Collins Rental-Exchange Administration or through any Rockwell Collins Dealer. When placing an order, the following information will be requested:

Registered Aircraft Owner's Name	Service Ordered (Rental or Exchange)
Aircraft Type	Purchase Order Number
Aircraft Serial Number	Equipment Type
Aircraft Registration Number	Part Number
Warranty Information	Serial Number of Defective Unit*
Billing Address	Reported Complaint of Defective Unit
Shipping Address	Preferred Shipping Method
Name and Address of the Ultimate Consignee is Required	

* In order for warranty or contract (CASP) coverage to be triggered, the serial number of the failed unit must be entered at the time of order processing.

COUNTRY	PHONE	FAX
United States (U.S. origination)	1.800.713.7693	
United States	1.319.295.4361	1.319.295.6646
England*	44.1189.262977	
Australia*	61.3.8318.8010	
France*	33.5.61.71.77.97	
Brazil	55.12.3908.5003	
Singapore*	65.6542.2078	

*Redirects to 24-hour worldwide customer response center in United States

Intentionally Blank

IT SHALL BE THE CUSTOMER'S ULTIMATE RESPONSIBILITY, PRIOR TO INSTALLATION, TO ENSURE THAT THE UNIT RECEIVED FROM ROCKWELL COLLINS COMPLIES WITH APPLICABLE REQUIREMENTS UNDER WHICH THE AIRCRAFT IS LICENSED AND OPERATED.

GENERAL TERMS AND CONDITIONS

Exchange Services are available for either warranty consideration or at the prices contained in this publication. Exchanges are limited to those part numbers included in this publication and subject to prior rental or exchange on a first come, first served basis. Items identified as N/A in the respective pricing column of this publication are not available for exchange. Prices are exclusive of any federal, state or local sales tax and excise or end use taxes. Prices are subject to change without notice. The Customer is responsible for any customs charges, import duties, brokerage fees or other related international shipping charges. The exchange unit will be certified in accordance with CFR Title 14, Part 43, JAR 145 (EASA accepted repair stations); or in accordance with certifications held from other aviation authority, and will be tagged either inspected, modified, overhauled, or repaired. The Rental-Exchange Pool does not guarantee any parts in new condition. The exchange unit becomes Customer's property with the faulty exchange core returned becoming Rockwell Collins' property.

Requests to exchange cores of the same equipment type, but with a different Rockwell Collins part number (different status), will be considered at the sole discretion of Rockwell Collins. Prior approval is required from the Rental-Exchange Pool. Different part number exchanges shall be subject to additional charges that will vary dependent on core return and condition.

Due to age and availability of repair parts, some part numbers listed in this publication may not be available for exchange.

EXCHANGE BILLING PROCEDURES

Exchange prices are based upon the requirement that Rockwell Collins receives an acceptable core unit in return, within the established transaction period. To be considered "Acceptable" the core unit must have a valid Rockwell Collins nameplate and be in repairable condition.

Rockwell Collins cannot accept units that are received without a nameplate, with an altered nameplate, with suspected counterfeit nameplate/internal assemblies. Any units received with these conditions will be returned.

If the Customer core requires the installation of major customer-charged service bulletins in order to bring the core up to the same quality and functionality of the exchange, Rockwell Collins reserves the right to bill the Customer for the installation of those bulletins or reject the core.

The transaction period will not be closed until an acceptable core is received and the Extended Use Fee Policy will apply.

Billing discrepancies must be reported within 90 days of invoice date. If any delay in returning the core is anticipated, please contact Rental Exchange Administration.

HIGH PRICE REPAIR TO EXCHANGE POLICY

IF THE CUSTOMER RECEIVES A REPAIR ESTIMATE FROM A ROCKWELL COLLINS SERVICE CENTER THAT EXCEEDS THE RENTAL EXCHANGE CATALOG PRICE AND THEN REQUESTS AN EXCHANGE IN LIEU OF THE REPAIR, ROCKWELL COLLINS RESERVES THE RIGHT TO CHARGE 1.5 TIMES THE CATALOG EXCHANGE PRICE OR THE REPAIR ESTIMATE WHICHEVER IS HIGHER. THIS POLICY APPLIES TO THE CONVERSION OF THE RENTAL TO EXCHANGE IF THE CUSTOMER HAS A RENTAL UNIT WITH THE QUOTED REPAIR ESTIMATE. THE RENTAL WILL BE CREDITED 100 %, AND THE CHARGE BECOMES 1.5 TIMES THE EXCHANGE PRICE OR THE REPAIR ESTIMATE WHICHEVER IS HIGHER.

CREDIT CARDS

Rockwell Collins accepts and encourages the use of VISA, MasterCard, or American Express credit cards for payment of the exchange transactions. Authorization can be completed on the phone with the Rental-Exchange Pool Order Administrator and the shipment immediately processed.

EXCHANGE CORE RETURNS POLICY

Cores sent in for exchange must have the same part number as the exchange unit shipped by Rockwell Collins unless prior approval has been obtained from the Rental-Exchange Pool. Exchange core needs to have the Unit Return Data Sheet included with each return.

Shipment Zone	Return Period (2)	Return Grace Period	Extended Use Fees		Core Replacement	
			Charge (3)	Billing Date	Charge (4)	Billing Date
Within US or Within European Union (including Switzerland & Norway) (1)	15 days	5 days	5% of Rental Fee per day	Upon core return, or automatically on day 76 (60 days overdue), whichever occurs first, retroactive to day 16	Current Rockwell Collins list price plus accumulated Extended Use Fees and any Exchange Fee	Automatically on day 106 (90 days overdue)
To Brazil, India, China, Russia, Azerbaijan, or Pakistan	30 days	15 days	5% of Rental Fee per day	Upon core return, or automatically on day 91 (60 days overdue), whichever occurs first, retroactive to day 30	Current Rockwell Collins list price plus accumulated Extended Use Fees and any Exchange Fee	Automatically on day 121 (90 days overdue)
All other	15 days	15 days	5% of Rental Fee per day	Upon core return, or automatically on day 76 (60 days overdue), whichever occurs first, retroactive to day 16	Current Rockwell Collins list price plus accumulated Extended Use Fees and any Exchange Fee	Automatically on day 106 (90 days overdue)

Notes:

1. European Union member countries as defined by the European Parliament.
2. From date of shipment by Rockwell Collins.
3. If Rental Fee does not exist, Exchange Fee shall be used. Extended Use Fees invoiced to Rockwell Collins by the Northrop Grumman Corporation for LTN-101-() Equipment Types shall be invoiced to the Customer by Rockwell Collins. An administrative fee of \$200 USD will be added to the invoice.
4. Failure to return an exchange core voids warranty. Exchange cores arriving after the core replacement has been invoiced shall be returned and assumed purchased by the Customer.

Exchange Services

Rockwell Collins reserves the right to refuse acceptance of a Customer core returned for exchange that has been damaged by contamination, lightning, fire, submersion, crash, misapplication, inappropriate repair actions, improper packing or abnormal wear. Rockwell Collins shall invoice the Customer for the repair of any Customer core received with induced damage such as, but not limited to, contamination, cracked glass, broken faceplates and connectors, and/or physical damage caused by improper packing, improper installation, and/or incorrect aircraft wiring.

RETURN INSTRUCTIONS

Please complete and enclose the Return Instructions form located on the last page of the packing list that accompanies the outgoing unit. The Return Instructions form includes the address of the service center where the exchange core or rental unit is to be returned as well as important sales order information that will ensure your transaction is closed out successfully.

UNIT RETURN DATA SHEET

Thank you for using the Rockwell Collins Rental-Exchange Service. To help us maintain high reliability and customer service, please take a moment to describe the condition of the Rental-Exchange unit that you are returning to this Rockwell Collins Service Center. Enclose a completed copy of this form with your shipment.

Warm regards,

Customer Service Representative
Rockwell Collins Service Center

THIS UNIT IS: ☐ RENTAL ☐ EXCHANGE ☐ YOUR UNIT FOR REPAIR

REQUIRED COMPLETION DATE: _____ / _____ / _____
Month Day Year

From

Customer PO# : _____
Collins Order # : _____
Company Name: _____
Part Number: _____
Serial Number: _____
Aircraft Type: _____
Aircraft Tail Number: _____
Failure Reported: _____

Troubleshooting Data

- ☐ Condition confirmed on other side of A/C
- ☐ Replacement unit solves problem
- ☐ Could not verify problem on ground
- ☐ Same condition previously seen on this A/C
- ☐ Contacted Field Service Engineer

Failure Indication

Warning Flags: _____
Diagnostic Code(s): _____

Other: _____

Frequency

- ☐ Continuous
- ☐ Intermittent
- ☐ Frequently ☐ Rarely ☐ Once

Environment

☐ Wet ☐ Hot ☐ Cold
Other: _____

Condition at Time of Failure

In Flight: (Time: _____ hrs)
☐ Take off ☐ Climb ☐ Land
☐ Descent ☐ On Ground
☐ Cruise: (Altitude: _____ hrs)

UNUSED EXCHANGE RETURNS

Prior authorization is required from the Rental-Exchange Pool for unused exchange returns. For unused exchange returns, the Customer is responsible for all returned freight charges; any charges for units shipped to Customer in accordance with Customer-specified instructions. These fees include, but are not limited to, freight, customs charges, import duties, or any other international charges whether the unit is in or out of warranty will be billed to the customer from Rockwell Collins.

SAME SERIAL NUMBER RETURNED WITHIN 10 DAYS IS CHARGED A RESTOCKING FEE OF \$900 USD. IF THE EXCHANGE PRICE IS LESS THAN \$900 USD, THE EXCHANGE PRICE WILL BE CHARGED.

SAME SERIAL NUMBER RETURNED AFTER 10 DAYS IS CHARGED A RENTAL FEE. IF A RENTAL PRICE IS NOT AVAILABLE, THE RENTAL FEE WILL BE 80 % OF THE ORIGINAL EXCHANGE FEE. ADDITIONALLY, EXTENDED USE FEES WILL ALSO APPLY IF THE UNIT IS OUT OVER 30 DAYS.

THE FOLLOWING PART NUMBERS OR EQUIPMENT TYPES MAY NOT BE RETURNED FOR RESTOCKING AND RECERTIFICATION IF THE PACKAGING HAS BEEN OPENED. IF THE PACKAGE HAS BEEN OPENED, AN EXCHANGE FEE SHALL APPLY.

2033-1-1	441-0006-100	622-6793-001	822-1330-001	822-1794-001
2457-1-1	441-0024-100	622-7154-001	822-1363-002	822-1795-001
2517-1-1	441-0024-101	622-7154-002	822-1364-002	822-2030-001
2600-2-1	441-0025-100	622-7346-002	822-1424-001	822-2033-001
2600-2-2	441-0025-101	622-7383-001	822-1463-200	822-2436-010
2600-2-4	441-0038-100	622-7384-001	822-1463-201	822-2437-010
2600-2-7	441-0087-100	622-8116-001	822-1463-208	822-2545-101
2600-2-8	441-0144-100	622-8154-001	822-1463-209	822-2775-010
2600-2-10	497-1-3	622-8154-003	822-1463-210	822-2776-010
2600-3-1	522-0700-023	622-8692-008	822-1463-212	822-2777-010
500644	522-0854-003	622-8692-014	822-1463-214	822-2777-020
3500-1-1	522-0854-069	622-8701-002	822-1463-216	822-2778-010
3700-1-1	522-1837-000	622-8701-003	822-1463-224	822-2779-010
013-1985-010	522-2632-000	622-8973-001	822-1463-228	822-2779-030
10720B01E00	522-4140-001	622-8973-104	822-1463-231	822-5404-001
10722B01E00	522-4255-001	822-0089-001	822-1463-235	822-5404-003
229-0324-010	522-4945-001	822-1193-001	822-1463-314	866-5002-010
229-0324-020	622-0954-002	822-1200-001	822-1484-200	866-5002-020
2501-4-034	622-2363-001	822-1200-002	822-1484-201	866-5010-010
2501-4-035	622-3710-001	822-1200-003	822-1484-205	866-5029-010
2501-4-036	622-5404-001	822-1200-005	822-1484-209	902-1-2
2501-4-037	622-5404-002	822-1200-201	822-1484-217	932003-100
2501-4-038	622-5404-003	822-1200-202	822-1484-219	DT-PA2N
2501-4-039	622-5735-021	822-1200-204	822-1484-222	DT-PA2N-8
2507-1-003	622-5735-022	822-1200-207	822-1484-223	FA979AA
2526-1-001	622-5812-001	822-1200-209	822-1484-228	Q5801A
2526-1-002	622-5812-002	822-1200-802	822-1484-241	
2526-1-003	622-5812-004	822-1200-803	822-1484-252	
270-2196-030	622-5812-006	822-1200-997	822-1531-001	
307-1	622-6591-001	822-1200-999	822-1793-001	

EXCHANGE SHIPPING PROCEDURES

FOLLOW INSTRUCTIONS PER ENCLOSED DOCUMENTS. PLEASE DO NOT INSURE shipments when Rockwell Collins is responsible for freight on all US orders. Rockwell Collins shipping containers are designed to meet or exceed ATA-300 specification Category III for most units. AFD-3010, AFD 5220, AHC-85(), DGS-65, 332D-11(), EFD-407X, LTN-101-() and RTA-8XX require special shipping containers.

Unit Return Data Sheet is provided in this publication for quality reporting and aid in component repair. Please provide the information requested with each exchange core and unserviceable unit forwarded to a Service Center.

Exchanges Within US - Rockwell Collins pays shipping fees both ways via normal air freight for US orders. Units will be shipped prepaid and returned collect by designated carrier as referenced in the shipping paperwork. **If the Customer ships the unit prepaid, the Customer will not be reimbursed by Rockwell Collins.**

International Exchanges - All international shipping fees will be the responsibility of the Customer. These fees include, but are not limited to, any brokerage fees incurred, freight, customs charges, import duties, or any other international charges whether the unit is in or out of warranty. **The Customer is responsible for any delays encountered by the Customer's selection of carrier and/or customs issues. The Customer is responsible for both inbound and outbound customs delays.**

Courier Services - Selecting and coordinating the use of a courier service is the responsibility of the buyer and not Rockwell Collins. Buyer will be notified by Rockwell Collins once the shipment is available for pickup, and the buyer will then notify and arrange actual pickup directly with the courier service.

EXPEDITED EXCHANGE SERVICE

Any expedited service such as airline "counter-to-counter" shall incur a fee of \$300 USD per shipment which includes the airline freight charge. FEDEX P1 Early AM delivery or similar service shall incur a fee of \$150 USD per shipment. International expediting fees will vary by location and will be quoted separately when the Customer requests expedited service.

FAA 8130-3 REPRINT REQUESTS

Rockwell Collins reserves the right to charge \$50 USD for each FAA 8130-3 reprint request. The customer will be required to provide a purchase order at the time of the request.

EXPORT COMPLIANCE

Rockwell Collins products that are designed for a military application are controlled by the International Traffic in Arms Regulations (ITAR) and will require an export license issued by the Department of State, Directorate of Defense Trade Controls for all export transactions. Approval of such licenses may take 2 weeks to 120 days depending on the transaction. Delivery of those products are subject to receipt of an approved export license.

Rockwell Collins products that are designed for a commercial or dual-use application are controlled by the Export Administration Regulations (EAR) and generally do not require an export license from the Department of Commerce, Bureau of Industry and Security. There are a few products, however, that Rockwell Collins may have in our inventory that, depending on the end user and country of ultimate destination, will require an export authorization, such as but not limited to the LTN-101 Inertial Reference Unit, the CMA-2600 IR Sensor, and the LaserfV Inertial Unit. Delivery of those products are subject to receipt of an approved export license.

Rockwell Collins is the US Principal Party in Interest related to our export transactions and as such requires that specific End Use and End User be identified on all Purchase Orders. All orders from any company in China will also require a China End Use Certificate which will be provided upon receipt of the order for signature and return. In addition, Rockwell Collins is responsible for all export licensing with the Departments of State and Commerce and for all export documentation presented to US Customs.

WARRANTY POLICY

Purchase of an exchange unit from Rockwell Collins will carry a one-year warranty in accordance with Article 5 of Rockwell Collins Inc. General Conditions of Sale. This exchange warranty entitles the Customer, at Rockwell Collins' discretion, to:

No Charge Exchange

or

No Charge Repair and the use of a **Billable Rental**

SERVICE CENTER REPAIR WARRANTY

If a Customer's unit has been returned to a Rockwell Collins Service Center for a qualified warranty repair and Customer paid for a billable rental during the original repair by the Service Center, subsequent rental shall be at no charge.

If a Customer's unit has been returned to a Rockwell Collins Service Center for a qualified warranty repair and Customer did not have a billable rental during the original repair and the Customer requests a rental, the **rental shall be billable**.

Intentionally Blank

IT SHALL BE THE CUSTOMER'S ULTIMATE RESPONSIBILITY, PRIOR TO INSTALLATION, TO ENSURE THAT THE UNIT RECEIVED FROM ROCKWELL COLLINS COMPLIES WITH APPLICABLE REQUIREMENTS UNDER WHICH THE AIRCRAFT IS LICENSED AND OPERATED.

GENERAL TERMS AND CONDITIONS

Rental units are available for either warranty considerations or at the prices contained in this publication. All units are subject to prior rental or exchange on a first come, first served basis. Equipment Types identified as N/A in the respective pricing column of this publication are not available for rental. Prices are exclusive of any federal, state or local sales tax and excise or end use taxes. Prices are subject to change without notice. The Customer is responsible for any customs charges, import duties, brokerage fees or other related international charges. The rental unit will be certified in accordance with CFR Title 14, Parts 43 and 145; EASA Implementation Rule Part 145 (EASA accepted repair stations). There is no change of ownership and the rental unit is to be returned to Rockwell Collins after the rental period.

Due to age and availability of repair parts, some part numbers listed in this publication may not be available for rental.

RENTAL BILLING PROCEDURES

The minimum rental fee is for a period of 30 calendar days from the date the unit is shipped by Rockwell Collins. Rental prices are based upon the requirement that Rockwell Collins receives the same serial number unit in return, within the established transaction period. The Rockwell Collins nameplate must be in place, intact and the unit must be in repairable condition.

Rockwell Collins reserves the right to charge the Customer for returning units to a serviceable condition that have been subjected to contamination damage, abnormal wear, improper packaging and unauthorized repairs.

Rockwell Collins reserves the right to charge the Customer the current catalog list price of a returned rental unit that has been damaged by lightning, fire, submersion, crash, or is otherwise deemed beyond economical repair.

The transaction period will not be closed until the return unit is received and the Extended Use Fee Policy will apply.

Billing discrepancies must be reported within 90 days of invoice date. If any delay in returning the unit is anticipated, please contact Rental Exchange Administration.

CREDIT CARDS

Rockwell Collins accepts and encourages the use of VISA, MasterCard, or American Express credit cards for payment of the rental transactions. Authorization can be completed on the phone with the Rental-Exchange Pool Order Administrator and the shipment immediately processed.

Rental Services

RENTAL RETURNS

Rental transactions require the unit returned to Rockwell Collins must be the same part number/serial number as the rental unit shipped by Rockwell Collins. Please include the Unit Return Data Sheet with the rental unit.

Rental units are to be returned according to the following guidelines:

Shipment Zone	Return Period (2)	Return Grace Period	Extended Use Fees		Core Replacement	
			Charge (3)	Billing Date	Charge	Billing Date
Within US or Within European Union (including Switzerland & Norway) (1)	30 days	5 days	5% of Rental Fee per day	Upon core return, or automatically on day 91 (60 days overdue), whichever occurs first, retroactive to day 30	Current Rockwell Collins list price plus accumulated Extended Use Fees and any Rental Fees	Automatically on day 106 (90 days overdue)
To Brazil, India, China, Russia, Azerbaijan, or Pakistan	45 days	15 days	5% of Rental Fee per day	Upon core return, or automatically on day 106 (60 days overdue), whichever occurs first, retroactive to day 45	Current Rockwell Collins list price plus accumulated Extended Use Fees and any Rental Fees	Automatically on day 121 (90 days overdue)
All other	30 days	15 days	5% of Rental Fee per day	Upon core return, or automatically on day 91 (60 days overdue), whichever occurs first, retroactive to day 30	Current Rockwell Collins list price plus accumulated Extended Use Fees and any Rental Fees	Automatically on day 106 (90 days overdue)

Notes:

1. European Union member countries as defined by the European Parliament.
2. From date of shipment by Rockwell Collins, Inc.
3. If Rental Fee does not exist, Exchange Fee shall be used.

If the Customer's unit arrives at a Rockwell Collins Service Center for repair within 10 days of shipment of the rental unit and the Customer's unit is still in repair at the end of the 30-day period, the following guidelines apply:

	Return Grace Period	Extended Use Fees (Notes 1 & 2)	Core Replacement (Note 3)
Shipments Within Domestic Borders	10 days after shipment of Customer's repaired unit	Daily Extended Use Fee equal to 5% per day of Rental Fee if not received by the 11th Day after shipment of Customer's repaired unit	Asset replacement will be invoiced on Day 106 if rental unit is not returned by Day 90. If Customer's unit is in repair at Day 90, Asset replacement will be invoiced at 45 days after shipment of Customer's repaired unit
Shipments Outside Domestic Borders	20 days after shipment of Customer's repaired unit	Daily Extended Use Fee equal to 5% per day of Rental Fee if not received by the 21st Day after shipment of Customer's repaired unit	Asset replacement will be invoiced on Day 106 if rental unit is not returned by Day 90. If unit is in repair at Day 90, Asset replacement will be invoiced at 45 days after shipment of Customer's repaired unit

Notes:

1. If a Customer's unit arrives at a Rockwell Collins Service Center for repair after 10 days of shipment of the rental unit, Extended Use Fees may apply if the rental unit is not returned to Rockwell Collins by Day 36, dependent upon when the Customer's repaired unit is shipped back to the Customer.
2. If a Customer does not approve the Rockwell Collins Service Center repair estimate within 5 days of receipt, Extended Use Fees may apply if the rental unit is not returned to Rockwell Collins by Day 36, dependent upon when the Customer's repaired unit is shipped back to the Customer.
3. Any rental unit that has not been returned shall be invoiced (asset replacement) at the current catalog list price. The asset replacement invoice shall be in addition to the rental fee and any Extended Use Fees incurred. Rental units arriving after the asset replacement has been invoiced shall be returned and assumed purchased by the Customer.

Rental Services

UNUSED RENTAL RETURNS

Prior authorization is required from the Rental-Exchange Pool for unused rental returns. For unused rental returns, the Customer is responsible for all returned freight charges; any charges for units shipped to Customer in accordance with Customer-specified instructions. These fees include, but are not limited to, freight, customs charges, import duties, or any other international charges whether the unit is in or out of warranty will be billed to the customer from Rockwell Collins.

RENTAL UNIT RETURNED WITHIN 10 DAYS IS \$900 USD. IF RENTAL PRICE IS LESS THAN \$900 USD, THE RENTAL PRICE WILL BE CHARGED.

RENTAL UNIT RETURNED AFTER 10 DAYS IS FULL MONTHLY RENTAL FEE. EXTENDED USE FEES WILL ALSO APPLY IF THE UNIT IS OUT OVER 30 DAYS.

RENTAL SHIPPING PROCEDURES

FOLLOW INSTRUCTIONS PER ENCLOSED DOCUMENTS. PLEASE DO NOT INSURE shipments when Rockwell Collins is responsible for freight. Rockwell Collins shipping containers are designed to meet or exceed ATA-300 specification Category III for most units. AFD-3010, AFD-5220, AHC-85(), DGS-65, 332D-11(), EFD-407X, LTN-101-() and RTA-8XX require special shipping containers.

If a rental unit has failed, a Unit Return Data Sheet is provided in this publication for quality reporting and aid in component repair. Please provide the information requested with each unserviceable rental return unit forwarded to a Service Center.

Rentals Within US - Rockwell Collins pays shipping fees both ways via normal air freight. Units will be shipped prepaid and returned collect by designated carrier as referenced in the shipping paperwork. **If the Customer ships the unit prepaid, the Customer will not be reimbursed by Rockwell Collins.**

International Rentals - All international shipping fees will be the responsibility of the Customer. These fees include, but are not limited to, any brokerage fees incurred, freight, customs charges, import duties, or any other international charges whether the unit is in or out of warranty. **The Customer is responsible for any delays encountered by the Customer's selection of carrier and/or customs issues. The Customer is responsible for both inbound and outbound customs delays.**

Courier Services - Selecting and coordinating the use of a courier service is the responsibility of the buyer and not Rockwell Collins. Buyer will be notified by Rockwell Collins once the shipment is available for pickup, and the buyer will then notify and arrange actual pickup directly with the courier service.

EXPEDITED RENTAL SERVICE

Any expedited service, such as airline “counter-to-counter,” shall incur a fee of \$300 USD per shipment which includes the airline freight charge. FEDEX P1 Early AM delivery or similar service shall incur a fee of \$150 USD per shipment. International expediting fees will vary by location and will be quoted separately when the Customer requests expedited service.

FAA 8130-3 REPRINT REQUESTS

Rockwell Collins reserves the right to charge \$50 USD for each FAA 8130-3 reprint request. The customer will be required to provide a purchase order at the time of the request.

EXPORT COMPLIANCE

Rockwell Collins products that are designed for a military application are controlled by the International Traffic in Arms Regulations (ITAR) and will require an export license issued by the Department of State, Directorate of Defense Trade Controls for all export transactions. Approval of such licenses may take 2 weeks to 120 days depending on the transaction. Delivery of those products are subject to receipt of an approved export license.

Rockwell Collins products that are designed for a commercial or dual-use application are controlled by the Export Administration Regulations (EAR) and generally do not require an export license from the Department of Commerce, Bureau of Industry and Security. There are a few products, however, that Rockwell Collins may have in our inventory that, depending on the end user and country of ultimate destination, will require an export authorization, such as but not limited to the LTN-101 Inertial Reference Unit, the CMA-2600 IR Sensor, and the LaserfV Inertial Unit. Delivery of those products are subject to receipt of an approved export license.

Rockwell Collins is the US Principal Party in Interest related to our export transactions and as such requires that specific End Use and End User be identified on all Purchase Orders. All orders from any company in China will also require a China End Use Certificate which will be provided upon receipt of the order for signature and return. In addition, Rockwell Collins is responsible for all export licensing with the Departments of State and Commerce and for all export documentation presented to US Customs.

Intentionally Blank

AVAILABLE SERVICES

Rental and exchange services through the Rockwell Collins Worldwide Rental-Exchange Services is available to certain government or military variants of corporate/business aircraft if the following conditions are met:

- Aircraft retains its commercial type certification
- Aircraft mission is limited to VIP transport only. The aircraft cannot be used directly or indirectly in any combat or combat support mission to include but not limited to reconnaissance, surveillance, training and troop transport
- Aircraft is operated in accordance with the civil aircraft flight manual
- Aircraft and installed equipment is maintained by FAA licensed mechanics (or other country equivalents)
- Aircraft and equipment maintenance is performed in FAA licensed facilities (or other country equivalents)

If a government or military variant of a corporate/business aircraft meets the above criteria, a letter signed by an authorized agent of the end operator of the aircraft must be faxed (with original to follow in the mail) to the Rockwell Collins Rental-Exchange Pool before an exchange or rental request can be shipped.

The letter must contain:

- Commercial Aircraft Type Designation
- Aircraft Serial Number
- Aircraft Tail Number
- The following statement is required: Aircraft is used exclusively for VIP transportation only. It has not been modified for and is not used directly or indirectly for any combat or combat support mission.
- The following statement is required: This aircraft is operated by (insert the agency that is operating the aircraft) in accordance with the (insert commercial aircraft type designation) civil Aircraft Flight Manual.
- The following statement is required: This aircraft is maintained by (insert name and address of company), certified and or licensed by the (insert the respective countries civil airworthiness agency name (FAA equivalent)), in accordance with (insert the respective countries civil airworthiness agency name (FAA equivalent)) civil airworthiness rules.
- Fax/letter should be addressed to:
Rockwell Collins, Inc.
Rental Exchange Administration
400 Collins Road NE
M/S 133-100
Cedar Rapids, IA 52498 USA

Services for Government or Military Corporate / Business Aircraft

If a Customer has multiple aircraft that meet the above criteria, an acceptable alternative is a single letter with all aircraft serial numbers and tail numbers listed by operating agency with the associated certification. **THE LETTER IS VALID FOR A 12 MONTH PERIOD; ONCE EXPIRED A NEW LETTER WILL NEED TO BE SUBMITTED.**

If a government/military aircraft cannot meet the above criteria, repair support is available through one of our Service Centers or contact Rockwell Collins Government Systems office toll free at 1.800.321.2223 within the U.S.A., or 1.319.295.5100, or Fax at 1.319.295.4777.

Part Number Lists

AVIONICS AND CONTROLS PRODUCT PART NUMBERS

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
0009-0073-18A	HSTA	HORIZONTAL STABILIZER TRIM ACTUATOR, CESSNA
0009-0073-24	HSTA	HORIZONTAL STABILIZER TRIM ACTUATOR, CESSNA
0009-0143-4	HSTA	HORIZONTAL STABILIZER TRIM ACTUATOR, DASSUALT
0009-0148-2	HSTA	HORIZONTAL STABILIZER TRIM ACTUATOR, EMBRAER
0009-0148-4	HSTA	HORIZONTAL STABILIZER TRIM ACTUATOR, EMBRAER
013-1985-010	GPS-ANT	ANTENNA, GPS
0240-0005-1	PEDESTAL	PEDESTAL ASSEMBLY, GULFSTREAM
0240-0006-1	PEDESTAL	PEDESTAL ASSEMBLY, GULFSTREAM
0270-0012-1	WCA	WHEEL, COLUMN, ASSY - CAPTAIN
0270-0014-1	WCA	WHEEL COLUMN ASSY - FIRST OFFICER
1500-0490-002	DEU-2350	DRIVE ELECTRONICS UNIT, HGS
1500-0500-002	HCP-4000	HGS CONTROL PANEL
1500-0520-001	OHU-2350	OVERHEAD UNIT
1500-1080-501	OHU-2100TC	OVERHEAD UNIT
1500-1090-502	CMB-2100	COMBINER
1500-1100-500	DEU-2100	DRIVE ELECTRONICS UNIT, HGS
1500-1360-002	HAP-2800	HGS ANNUNCIATOR PANEL
1500-1460-503	HC-2100TC	HGS COMPUTER
1500-1470-501	HCP-2100TC	HGS CONTROL PANEL
1500-1470-502	HCP-2100STC	HGS CONTROL PANEL
1500-1550-001	OHU-2860	OVERHEAD UNIT
1500-1550-003	OHU-4860	OVERHEAD UNIT
1500-1560-001	CMB-2860	COMBINER
1500-1620-002	HC-2850	HGS COMPUTER
1500-1620-003	HC-2850	HGS COMPUTER
1500-1620-004	HC-2850	HGS COMPUTER
1500-1620-103	HC-2850	HGS COMPUTER
1500-1640-001	HCP-2850	HGS CONTROL PANEL
1500-1650-001	HCP-2150	HGS CONTROL PANEL
1500-1720-001	CMB-2350	COMBINER
1500-1730-004	HC-2350	HGS COMPUTER
1500-1760-001	CMB-2150	COMBINER
1500-1880-003	HC-2860	HGS COMPUTER
1500-2000-001	OHU-3300	OVERHEAD UNIT
1500-2010-001	CMB-3300	COMBINER
1500-2050-003	HC-3300	HGS COMPUTER
1500-2090-001	HC-2150	HGS COMPUTER
1500-2090-002	HC-2150	HGS COMPUTER
1500-2140-001	OHU-4200	OVERHEAD UNIT
1500-2160-003	HC-4200	HGS COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
1500-2230-001	CMB-4200	COMBINER
1500-2240-001	HAP-4100	HGS ANNUNCIATOR PANEL
1500-2260-002	OHU-4100	OVERHEAD UNIT
1500-2270-002	CMB-4100	COMBINER
1500-2290-001	HCP-4100	HGS CONTROL PANEL
1500-2310-001	CMB-4000	COMBINER
1500-2360-001	OHU-4000	OVERHEAD UNIT
1500-2380-002	HC-4860	HGS COMPUTER
1500-2380-003	HC-4860	HGS COMPUTER
1500-2430-001	HAP-4000	HGS ANNUNCIATOR PANEL
1500-2460-002	HC-4000	HGS COMPUTER
1500-2460-003	HC-4000	HGS COMPUTER
1500-2550-001	HC-4100	HGS COMPUTER
1500-2550-007	HC-4100	HGS COMPUTER
1500-2620-003	OHU-5860	OVERHEAD UNIT
1500-2630-005	CMB-5860	COMBINER, EVS
1500-2640-001	HC-5860	HGS COMPUTER
1500-2640-002	HC-5860	HGS COMPUTER
1500-2840-003	HC-5600	HGS COMPUTER
1500-2850-003	OHU-5600	OVERHEAD UNIT
1500-2860-005	CMB-5600	COMBINER
1500-2860-006	CMB-5600	COMBINER
1500-2890-102	CMB	COMBINER ASSEMBLY
1500-2900-101	OHU-2200	ASSEMBLY, HPU
1500-2900-103	OHU-2200	ASSEMBLY, HPU
1500-2950-002	CMB-4860	COMBINER
1500-2950-003	CMB-4860	COMBINER
1500-2960-001	ISU-4860	IR SENSOR UNIT, EVS
1500-2960-002	ISU-5860	IR SENSOR UNIT, EVS
1500-2960-003	ISU-4000	IR SENSOR UNIT, EVS
1500-2970-001	IRW-5860	IR WINDOW, EVS
1500-3050-004	HC-4200	HGS COMPUTER
1500-3060-001	HC-6250	HGS COMPUTER
1500-3070-001	OHU-6250	OVERHEAD UNIT
1500-3080-501	CMB-6250	COMBINER
1500-3090-001	HC-4000	HGS COMPUTER
1500-3100-001	OHU-6605	OVERHEAD UNIT
1500-3110-001	CMB-6605	COMBINER
1500-3120-001	HC-6605	HGS COMPUTER
1500-3190-001	IRW-6605	IR WINDOW, EVS

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
229-0236-000	332G-2	GYRO, RATE
229-0310-000	332G-2	GYRO, RATE
229-0324-010	NAC-80	ACCELEROMETER
229-0324-020	LAC-80	LATERAL ACCELEROMETER
2651-278-21	BALL VALVE	BALL VALVE ASSY
270-0859-010	590A-6A	CONTROL, ALTITUDE
270-0891-080	SVL-80	LINEAR SERVO
270-0930-010	YRS-65	RATE SENSOR
270-1306-071	CMA-764()	ANTENNA COUPLER VLF
270-1306-090	CMA-764GV	GPS (CERTIFIED)/VLF
270-2196-030	590B-2	AIR SPEED SENSOR
270-2424-010	329T-1	TURN & SLIP INDICATOR
270-2426-070	329A-4	HORIZONTAL REFERENCE
270-2687-010	WX-1000E	LIGHTNING DETECTION SYSTEM PROCESSOR
270-2687-020	WX-1000MT	LIGHTNING DETECTION SYSTEM MOUNT
270-2687-030	WX-1000	LIGHTNING DETECTION SYS ANTENNA
4025-0038-1	RPA	HANDLE ASSY, RUDDER PEDAL ADJUSTMENT
4038-0075-2	RPC	COVER ASSY, RUDDER PEDAL
4111-0048-1	SPEEDBRAKE	SPEEDBRAKE ASSEMBLY, GULFSTREAM
4137-0153-1	RPC	SIDE PLATE ASSY, RUDDER PEDAL COVER
4137-0153-3	RPC	SIDE PLATE ASSY, RUDDER PEDAL COVER
4137-0153-4	RPC	SIDE PLATE ASSY, RUDDER PEDAL COVER
4147-0025-1	RAS	ROD ASSY, SUPPORT - RUDDER CONTROLS
4147-0043-1	PRA	PUSH ROD ASSY - BRAKE BUS
4147-0044-1	PRA	PUSH ROD ASSY, REACTION STRUT, YAW/BRAKE
415200-1003	HSTA	HORIZONTAL STABILIZER ACTUATOR ASSY, EMBRAER
415200-1017	HSTA	HORIZONTAL STABILIZER ACTUATOR ASSY, EMBRAER
4214-0031-6	HSEC	HORIZONTAL STABILIZER ELECTRONIC CONTROL
4214-0034-6	HSEB	HORZ STAB ELECTRONIC BACK-UP UNIT, DASSAULT
4260-0018-4	TQA	THROTTLE QUADRANT ASSEMBLY, EMBRAER
4260-0018-5	TQA	THROTTLE QUADRANT ASSEMBLY, EMBRAER
4260-0029-2	TCMA	THRUST CONTROL MODULE ASSY
4260-0029-3	TCMA	THRUST CONTROL MODULE ASSY
4260-0029-6	TCMA	THRUST CONTROL MODULE ASSY
4260-0030-1	FMA	FLAP MODULE ASSY
4260-0030-2	FMA	FLAP MODULE ASSY
4260-0031-1	SBA	SPEEDBRAKE ASSY
4260-0031-2	SBA	SPEEDBRAKE ASSY
4260-0031-4	SBA	SPEEDBRAKE ASSY
4260-0034-1	TQA	THROTTLE QUADRANT ASSEMBLY, GULFSTREAM
4260-0036-2	AFCM	ALTERNATE FLAP CONTROL MODULE ASSY.

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
4260-0036-3	AFCM	ALTERNATE FLAP CONTROL MODULE ASSY
4260-0037-3	APPBA	PARKING BRAKE / ALT PITCH TRIM ASSY
4260-0039-2	TQA	THROTTLE QUADRANT ASSEMBLY, GULFSTREAM
4260-0039-3	TQA	THROTTLE QUADRANT ASSEMBLY, GULFSTREAM
4260-0045-1	FLAP MODULE	FLAP MODULE ASSEMBLY, GULFSTREAM
4260-0049-1	SECTOR ASSY	SECTOR ASSY, GULFSTREAM
4260-0052-1	SPEEDBRAKE	SPEEDBRAKE ASSEMBLY, GULFSTREAM
4260-0054-1	CET	CONTROL ELEVATOR TRIM R.H., GULFSTREAM
4260-0054-2	CET	CONTROL ELEVATOR TRIM R.H., GULFSTREAM
4265-05-2	LFLA	FORCE LIMITER, ASSEMBLY - LATERAL
4290-01-2	RCOMA	OVERRIDE MECHANISM ASSY RUDDER CONTROL
43068-035	TQA	THROTTLE QUADRANT ASSEMBLY, CHALLENGER
43083-405-6	CET	CONTROL ELEVATOR TRIM L.H, GULFSTREAM
43083-405-7	CET	CONTROL ELEVATOR TRIM L.H, GULFSTREAM
43083-406-6	CET	CONTROL ELEVATOR TRIM L.H, GULFSTREAM
43083-406-7	CET	CONTROL ELEVATOR TRIM L.H, GULFSTREAM
43102-004	TQA	THROTTLE QUADRANT ASSY, SAAB
522-0700-023	37P-5	GLIDESLOPE ANTENNA NAV
522-0854-003	37X-2	ANTENNA, MARKER BEACON
522-0854-069	37X-2	ANTENNA, MARKER BEACON
522-1171-005	328A2	COMPASS AMPLIFIER
522-1225-000	334C3	DIRECT DRIVE SERVO
522-1513-005	332E2	GYRO, DIRECTIONAL
522-1619-046	328A2A	COMPASS AMPLIFIER
522-1660-000	618T-3	AIRBORNE TRANSCEIVER
522-1836-000	51Y-4	ADF RECEIVER
522-1837-000	137A-5	ANTENNA, ADF LOOP
522-2450-015	51RV-1	RECEIVER, NAVIGATION
522-2587-000	51Y-4A	RECEIVER ADF
522-2599-504	313N-5	CONTROL, RADIO SET
522-2615-006	137A-6	ANTENNA, ADF LOOP
522-2632-000	237Z-1	L BAND AIRBORNE ANTENNA
522-2638-003	331A-3G	INDICATOR, COURSE
522-2638-006	331A-3G	INDICATOR, COURSE
522-2638-007	331A-3G	INDICATOR, COURSE
522-2638-009	331A-3G	INDICATOR, COURSE
522-2644-011	328A-3G	AMPLIFIER, COMPASS
522-2644-013	328A-3G	AMPLIFIER, COMPASS
522-2645-000	332E3G	GYRO, DIRECTIONAL
522-2702-014	860E-2	AIRBORNE DISTANCE MEASURING EQPT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
522-2703-011	621A-3	TRANSPONDER, ATC
522-2703-013	621A-3	TRANSPONDER, ATC
522-2782-004	331A-6A	INDICATOR, COURSE
522-2788-015	54W-1	MONITOR, WARNING
522-2852-001	562C4	AMPLIFIER, COMPUTER
522-2866-000	356C-4	AMPLIFIER, ISOLATION
522-2867-000	356F-3	AMPLIFIER, AUDIO
522-2900-026	562C-5	COMPUTER AMPLIFIER
522-2900-027	562C-5	COMPUTER AMPLIFIER
522-2900-099	562C-5	COMPUTER AMPLIFIER
522-2900-114	562C-5	COMPUTER AMPLIFIER
522-2901-002	APC-80	COMPUTER, AUTOPILOT
522-2901-003	APC-80	COMPUTER, AUTOPILOT
522-2901-007	APC-80	COMPUTER, AUTOPILOT
522-2901-009	APC-80	COMPUTER, AUTOPILOT
522-2901-010	APC-80	COMPUTER, AUTOPILOT
522-2901-011	APC-80	COMPUTER, AUTOPILOT
522-2901-015	APC-80	COMPUTER, AUTOPILOT
522-2901-016	APC-80	COMPUTER, AUTOPILOT
522-2901-017	APC-80	COMPUTER, AUTOPILOT
522-2901-018	APC-80	COMPUTER, AUTOPILOT
522-2901-020	APC-80	COMPUTER, AUTOPILOT
522-2901-021	APC-80	COMPUTER, AUTOPILOT
522-2901-023	APC-80	COMPUTER, AUTOPILOT
522-2901-024	APC-80	COMPUTER, AUTOPILOT
522-2901-025	APC-80	COMPUTER, AUTOPILOT
522-2901-031	APC-80	COMPUTER, AUTOPILOT
522-2901-033	APC-80	COMPUTER, AUTOPILOT
522-2901-034	APC-80	COMPUTER, AUTOPILOT
522-2901-035	APC-80	COMPUTER, AUTOPILOT
522-2901-036	APC-80	COMPUTER, AUTOPILOT
522-2996-011	51Z-4	RECEIVER MARKER BEACON
522-3073-000	331A-6D	INDICATOR, COURSE
522-3082-001	331A-3F	INDICATOR, COURSE
522-3082-002	331A-3F	INDICATOR, COURSE
522-3120-004	344C-1D	AMPLIFIER, INSTRUMENT
522-3130-000	590A3A	CONTROL, ALTITUDE
522-3178-004	582A-4N	ERROR CORRECTOR
522-3206-004	329B-7A	FLIGHT DIRECTOR & ATTITUDE INDICATOR
522-3206-006	329B-7A	FLIGHT DIRECTOR & ATTITUDE INDICATOR
522-3206-008	329B-7A	FLIGHT DIRECTOR & ATTITUDE INDICATOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
522-3207-003	562A5G	COMPUTER, FLIGHT
522-3226-001	344C1F	FLIGHT DIRECTOR INDICATOR AMPLIFIER
522-3241-000	332E-4	GYRO, DIRECTIONAL
522-3466-000	334D-2-33D	SERVO, TRIM TAB
522-3487-004	329B-7C	FLIGHT DIRECTOR & ATTITUDE INDICATOR
522-3505-000	334D-2-33E	SERVO, TRIM TAB
522-3551-001	614E4	CONTROL, PEDESTAL
522-3616-201	313N-4D	CONTROL UNIT
522-3698-002	860F-1	ALTIMETER, RADIO
522-3698-003	860F-1	ALTIMETER, RADIO
522-3743-000	51V5	GLIDESCOPE RECEIVER
522-3761-001	137A-6A	ANTENNA, ADF LOOP
522-3763-001	346B-3	CONTROL, AUDIO
522-3763-002	346B-3	CONTROL, AUDIO
522-3763-003	346B-3	CONTROL, AUDIO
522-3851-001	345A-4B	SENSING UNIT
522-3866-001	344C1G	AMPLIFIER, INSTRUMENT
522-3948-001	54W-1C	WARNING MONITOR
522-3948-002	54W-1C	WARNING MONITOR
522-3985-001	332D-11A	GYRO, HORIZONTAL
522-4017-002	614E2G	PEDESTAL CONTROL
522-4089-004	618M-2D	TRANSCEIVER, VHF
522-4089-204	618M-2D	TRANSCEIVER, VHF
522-4114-003	339H-1	INDICATOR, ALTITUDE
522-4140-001	437X-1	ANTENNA, ALTIMETER
522-4209-001	860E-3	AIRBORNE DISTANCE MEASURING EQPT
522-4255-001	437X-1A	ANTENNA, ALTIMETER
522-4280-001	51RV-2B	NAVIGATION RECEIVER
522-4280-101	51RV-2B	NAVIGATION RECEIVER
522-4329-001	345C-2A	SENSOR
522-4466-001	714E6	REMOTE CONTROL
522-4529-001	329B8G	FLIGHT DIRECTOR INDICATOR
522-4649-001	161A1B	COUPLER, TRIM
522-4649-004	161A1B	COUPLER, TRIM
522-4700-004	161F-1	COUPLER, AIR DATA
522-4700-015	161F1	COUPLER, AIR DATA
522-4700-019	161F1	COUPLER, AIR DATA
522-4945-001	323A-2G	MAGNETIC COMPASS
622-0080-001	699K1	TRIM ADAPTER
622-0141-001	APP-80	AUTOPILOT PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-0141-004	APP-80	AUTOPILOT PANEL
622-0141-006	APP-80	AUTOPILOT PANEL
622-0141-010	APP-80	AUTOPILOT PANEL
622-0141-011	APP-80	AUTOPILOT PANEL
622-0141-013	APP-80	AUTOPILOT PANEL
622-0141-015	APP-80	AUTOPILOT PANEL
622-0141-017	APP-80	AUTOPILOT PANEL
622-0141-022	APP-80	AUTOPILOT PANEL
622-0141-024	APP-80	AUTOPILOT PANEL
622-0141-025	APP-80	AUTOPILOT PANEL
622-0141-027	APP-80	AUTOPILOT PANEL
622-0142-002	614E-22D	SELECTOR, REMOTE
622-0181-001	345A-7B	TURN RATE SENSOR
622-0181-003	345A-7B	TURN RATE SENSOR
622-0192-001	548S-5	COUPLER, POWER AMPLIFIER
622-0192-004	548S-5	COUPLER, POWER AMPLIFIER
622-0193-001	641D-1	CAPACITOR, AUXILIARY
622-0213-001	FD112A	FLIGHT DIRECTOR
622-0224-006	ADI-85	ATTITUDE DIRECTOR INDICATOR
622-0410-001	860F2	RADIO ALTIMETER
622-0555-003	332C-10	MAGNETIC INDICATOR
622-0555-004	332C-10	MAGNETIC INDICATOR
622-0555-008	332C-10	MAGNETIC INDICATOR
622-0757-001	FD-112C	FLIGHT DIRECTOR
622-0836-001	329B-7R-2	FLIGHT DIRECTOR & ATTITUDE INDICATOR
622-0836-003	329B-7R-2	FLIGHT DIRECTOR & ATTITUDE INDICATOR
622-0876-001	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-002	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-003	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-011	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-012	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-014	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0876-201	VIR-30A	RECEIVER, VOR/LOC/GS/MB
622-0877-001	VIR-30M	RECEIVER, VOR/LOC/GS/MB
622-0877-002	VIR-30M	RECEIVER, VOR/LOC/GS/MB
622-0877-004	VIR-30M	RECEIVER, VOR/LOC/GS/MB
622-0944-003	614E-20R	MODE SELECTOR
622-0944-007	614E-20R	MODE SELECTOR
622-0945-003	614E-23R	MODE SELECTOR
622-0954-002	437X-1B	ANTENNA, ALTIMETER
622-0965-002	334D-6	TRIM SERVO

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-0965-003	334D-6	TRIM SERVO
622-0965-004	334D-6	TRIM SERVO
622-0965-008	334D-6	TRIM SERVO
622-0966-001	913K1	COMPUTER CONTROL
622-1032-001	699Z-1	ADAPTER, RADIO MAGNETIC INDICATOR
622-1036-001	161H-1	GAIN PROGRAMMER
622-1116-004	562C-5B	COMPUTER AMPLIFIER
622-1116-018	562C-5B	COMPUTER AMPLIFIER
622-1116-019	562C-5B	COMPUTER AMPLIFIER
622-1204-001	339H-4	INDICATOR, ALTITUDE
622-1204-002	339H-4	INDICATOR, ALTITUDE
622-1204-003	339H-4	INDICATOR, ALTITUDE
622-1204-004	339H-4	INDICATOR, ALTITUDE
622-1205-003	339H-4A	INDICATOR, ALTITUDE
622-1205-004	339H-4A	INDICATOR, ALTITUDE
622-1233-001	DME-40	DISTANCE MEASURING EQPT
622-1234-012	339F-12	DME INDICATOR
622-1234-013	339F-12	DME INDICATOR
622-1234-016	339F-12	DME INDICATOR
622-1234-113	339F-12	DME INDICATOR
622-1239-001	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-011	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-014	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-201	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1239-211	VIR-31A	RECEIVER, VOR/LOC/GS/MB
622-1270-001	TDR-90	TRANSPONDER, AIR TRAFFIC CONTROL
622-1281-001	562C-5C	COMPUTER AMPLIFIER
622-1281-007	562C-5C	COMPUTER AMPLIFIER
622-1334-001	VHF-20B	COMMUNICATIONS TRANSCEIVER, VHF
622-1334-002	VHF-20B	COMMUNICATIONS TRANSCEIVER, VHF
622-1352-001	FD-112V	FLIGHT DIRECTOR
622-1352-002	FD-112V	FLIGHT DIRECTOR
622-1522-001	562C-13	AUTOPILOT COMPUTER
622-1734-012	ANS31	CONTROL DISPLAY PROCESSOR UNIT
622-1736-012	NCS31	CONTROL DISPLAY PROCESSOR UNIT
622-1736-016	NCS31	CONTROL DISPLAY PROCESSOR UNIT
622-1737-001	899P-1	RADIO ADAPTER
622-1737-002	899P-1	RADIO ADAPTER
622-1738-002	913Y-1	MODE SELECTOR
622-1742-003	990C-3D	MOUNTING

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-1879-002	VHF-20A	COMMUNICATIONS TRANSCEIVER, VHF
622-1910-001	VSI-80	VERTICAL SPEED INDICATOR
622-1910-003	VSI-80	VERTICAL SPEED INDICATOR
622-1910-004	VSI-80	VERTICAL SPEED INDICATOR
622-1910-005	VSI-80	VERTICAL SPEED INDICATOR
622-1910-007	VSI-80	VERTICAL SPEED INDICATOR
622-1910-008	VSI-80	VERTICAL SPEED INDICATOR
622-1920-001	899S-1	DME ADAPTER
622-1939-011	339R1	REMOTE READOUT UNIT
622-1942-011	339R-4	REMOTE READOUT UNIT
622-1944-011	339R-6	REMOTE READOUT UNIT
622-1945-011	339R-7	REMOTE READOUT UNIT
622-1946-011	339R-8	REMOTE READOUT UNIT
622-1947-011	339R-9	REMOTE READOUT UNIT
622-1949-011	339R-11	REMOTE READOUT UNIT
622-1953-011	339R-15	REMOTE READOUT UNIT
622-1958-011	339R-1B	REMOTE READOUT UNIT
622-1959-011	339R-20	REMOTE READOUT UNIT
622-2012-011	339F-12A	DME INDICATOR
622-2012-012	339F-12A	DME INDICATOR
622-2012-013	339F-12A	DME INDICATOR
622-2012-201	339F-12A	DME INDICATOR
622-2175-001	339F-12B	DME INDICATOR
622-2175-002	339F-12B	DME INDICATOR
622-2175-003	339F-12B	DME INDICATOR
622-2175-201	339F-12B	DME INDICATOR
622-2224-001	621A-6A	AIR TRAFFIC CONTROL TRANSPONDER
622-2224-003	621A-6A	AIR TRAFFIC CONTROL TRANSPONDER
622-2256-002	FGC-80	FLIGHT GUIDANCE COMPUTER
622-2256-004	FGC-80	FLIGHT GUIDANCE COMPUTER
622-2263-001	APA-80	AUTOPILOT AMPLIFIER
622-2263-002	APA-80	AUTOPILOT AMPLIFIER
622-2263-003	APA-80	AUTOPILOT AMPLIFIER
622-2263-006	APA-80	AUTOPILOT AMPLIFIER
622-2263-007	APA-80	AUTOPILOT AMPLIFIER
622-2263-009	APA-80	AUTOPILOT AMPLIFIER
622-2263-010	APA-80	AUTOPILOT AMPLIFIER
622-2263-015	APA-80	AUTOPILOT AMPLIFIER
622-2263-016	APA-80	AUTOPILOT AMPLIFIER
622-2263-017	APA-80	AUTOPILOT AMPLIFIER
622-2263-018	APA-80	AUTOPILOT AMPLIFIER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-2263-019	APA-80	AUTOPILOT AMPLIFIER
622-2263-023	APA-80	AUTOPILOT AMPLIFIER
622-2263-024	APA-80	AUTOPILOT AMPLIFIER
622-2263-031	APA-80	AUTOPILOT AMPLIFIER
622-2263-036	APA-80	AUTOPILOT AMPLIFIER
622-2265-002	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-006	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-026	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-027	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-030	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-031	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-044	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-045	FGP-81	FLIGHT GUIDANCE PANEL
622-2265-058	FGP-81	FLIGHT GUIDANCE PANEL
622-2290-099	ADC-80F	AIR DATA COMPUTER
622-2292-001	ALI-80	INDICATOR, ALTIMETER
622-2292-005	ALI-80	INDICATOR, ALTIMETER
622-2292-007	ALI-80	INDICATOR, ALTIMETER
622-2292-008	ALI-80	INDICATOR, ALTIMETER
622-2293-005	MSI-80A	INDICATOR, MACH SPEED
622-2293-007	MSI-80A	INDICATOR, MACH SPEED
622-2293-017	MSI-80A	INDICATOR, MACH SPEED
622-2294-001	TAI-80A	INDICATOR, SAT/TAS
622-2294-002	TAI-80A	INDICATOR, SAT/TAS
622-2294-004	TAI-80A	INDICATOR, SAT/TAS
622-2294-013	TAI-80A	INDICATOR, SAT/TAS
622-2294-014	TAI-80A	INDICATOR, SAT/TAS
622-2313-011	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-031	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-053	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-054	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-055	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-062	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-068	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-069	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-079	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-088	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-093	FGP-80	FLIGHT GUIDANCE PANEL
622-2313-101	FGP-80	FLIGHT GUIDANCE PANEL
622-2362-001	ADF-60A	RECEIVER,RADIO

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-2366-001	334C-9A	PRIMARY SERVO
622-2366-002	334C-9A	PRIMARY SERVO
622-2366-003	334C-9A	PRIMARY SERVO
622-2485-001	WXT-150	RECEIVER-TRANSMITTER, RADIO
622-2486-001	IND-150	INDICATOR, WEATHER RADAR
622-2492-001	WXT-200	RECEIVER-TRANSMITTER, RADIO
622-2493-001	IND-201	INDICATOR, WEATHER RADAR
622-2494-002	ANT-212	ANTENNA WEATHER RADAR
622-2501-001	ANT-312	ANTENNA, WEATHER RADAR
622-2504-001	ANT-318	ANTENNA, WEATHER RADAR
622-2506-002	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-003	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-004	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-006	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-008	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-009	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-013	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-014	RMI-36	INDICATOR, RADIO MAGNETIC
622-2506-015	RMI-36	INDICATOR, RADIO MAGNETIC
622-2552-002	548S-5A	POWER AMPLIFIER-COUPLER
622-2631-001	671U-4AN	RECEIVER-EXCITER
622-2631-003	671U-4AN	RECEIVER-EXCITER
622-2733-001	334C-11	PRIMARY SERVO
622-2733-002	334C-11	PRIMARY SERVO
622-2747-012	NCS-31R	CONTROL DISPLAY, REMOTE
622-2747-016	NCS-31R	CONTROL DISPLAY, REMOTE
622-2748-001	RPU-31A	REMOTE PROCESSOR UNIT
622-2757-001	RPU-31N	REMOTE PROCESSOR UNIT
622-2814-001	454N-3	MONITOR, TRIM SERVO
622-2855-001	ALT-55B	ALTIMETER
622-2855-002	ALT-55B	ALTIMETER
622-2855-011	ALT-55B	ALTIMETER
622-2873-001	ADF-60B	ADF RECEIVER, SIN/COS
622-2882-001	TCR-200	RECEIVER TRANSMITTER, RADIO
622-2883-001	PWR-200	POWER AMPLIFIER
622-2884-001	AAC-200	ANTENNA COUPLER, AUTO
622-2884-003	AAC-200	ANTENNA COUPLER, AUTO
622-2884-004	AAC-200	ANTENNA COUPLER, AUTO
622-2885-001	CTL-200	CONTROL HEAD
622-2892-001	IND-200	INDICATOR, WEATHER RADAR
622-2898-012	ANS-31A	AREA NAVIGATION COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-2899-012	NCS-31A	AREA NAV & RADIO CONTROL COMPUTER
622-2899-016	NCS-31A	AREA NAV & RADIO CONTROL COMPUTER
622-2913-001	462A-1	RELAY UNIT
622-2913-002	462A-1	RELAY UNIT
622-2921-001	860E-5	DISTANCE MEASURING EQPT
622-2923-002	PRE-80A	PRESELECTOR, ALERTER
622-2923-004	PRE-80A	PRESELECTOR, ALERTER
622-2923-005	PRE-80A	PRESELECTOR, ALERTER
622-2923-006	PRE-80A	PRESELECTOR, ALERTER
622-2923-015	PRE-80A	PRESELECTOR, ALERTER
622-2923-016	PRE-80A	PRESELECTOR, ALERTER
622-2923-024	PRE-80A	PRESELECTOR, ALERTER
622-2923-025	PRE-80A	PRESELECTOR, ALERTER
622-2923-026	PRE-80A	PRESELECTOR, ALERTER
622-2923-035	PRE-80A	PRESELECTOR, ALERTER
622-2937-001	ALI-55	INDICATOR, ALTIMETER
622-2937-002	ALI-55	INDICATOR, ALTIMETER
622-2937-004	ALI-55	INDICATOR, ALTIMETER
622-2937-009	ALI-55	INDICATOR, ALTIMETER
622-2938-001	ALI-55A	RADIO ALTITUDE INDICATOR
622-2938-002	ALI-55A	INDICATOR, ALTIMETER
622-3015-001	SVO-80A	PRIMARY SERVO
622-3016-001	SVO-80B	PRIMARY SERVO
622-3017-001	SVO-80C	PRIMARY SERVO
622-3097-001	334C-12H	PRIMARY SERVO
622-3104-001	FGC-80A	FLIGHT GUIDANCE COMPUTER
622-3106-001	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-002	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-004	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-006	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3106-009	FGC-80B	FLIGHT GUIDANCE COMPUTER
622-3108-003	APA-80A	AUTOPILOT AMPLIFIER
622-3108-016	APA-80A	AUTOPILOT AMPLIFIER
622-3108-018	APA-80A	AUTOPILOT AMPLIFIER
622-3108-021	APA-80A	AUTOPILOT AMPLIFIER
622-3108-025	APA-80A	AUTOPILOT AMPLIFIER
622-3108-027	APA-80A	AUTOPILOT AMPLIFIER
622-3108-031	APA-80A	AUTOPILOT AMPLIFIER
622-3108-033	APA-80A	AUTOPILOT AMPLIFIER
622-3108-035	APA-80A	AUTOPILOT AMPLIFIER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-3109-004	APP-80A	AUTOPILOT PANEL
622-3109-009	APP-80A	AUTOPILOT PANEL
622-3109-011	APP-80A	AUTOPILOT PANEL
622-3109-023	APP-80A	AUTOPILOT PANEL
622-3167-041	562C-8F	YAW DAMPER COMPUTER
622-3167-055	562C-8F	YAW DAMPER COMPUTER
622-3167-061	562C-8F	YAW DAMPER COMPUTER
622-3167-099	562C-8F	YAW DAMPER COMPUTER
622-3167-199	562C-8F	YAW DAMPER COMPUTER
622-3201-001	ALT-50A	ALTIMETER
622-3201-011	ALT-50A	ALTIMETER
622-3202-001	913K-1A	COMPUTER, CONTROL
622-3202-003	913K-1A	COMPUTER, CONTROL
622-3202-013	913K-1A	COMPUTER, CONTROL
622-3202-014	913K-1A	COMPUTER, CONTROL
622-3202-016	913K-1A	COMPUTER, CONTROL
622-3234-001	TAI-80B	INDICATOR, SAT/TAS
622-3234-002	TAI-80B	INDICATOR, SAT/TAS
622-3234-004	TAI-80B	INDICATOR, SAT/TAS
622-3246-001	614E-41A	CONTROL, PITCH-TURN
622-3257-001	51RV-4B	RCVR, NAVIGATION
622-3260-001	334D-6A	TRIM SERVO
622-3371-001	628T-1	RECEIVER-TRANSMITTER, RADIO
622-3371-002	628T-1	RECEIVER-TRANSMITTER, RADIO
622-3373-001	628T-3	RECEIVER-TRANSMITTER, RADIO
622-3594-012	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-013	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-015	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-016	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-017	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3594-018	ADI-84A	ATTITUDE DIRECTOR INDICATOR
622-3595-001	562C-13A	COMPUTER, AUTOPILOT
622-3595-007	562C-13A	COMPUTER, AUTOPILOT
622-3595-011	562C-13A	COMPUTER, AUTOPILOT
622-3702-002	BDI-36	BEARING DISTANCE INDICATOR
622-3702-004	BDI-36	BEARING DISTANCE INDICATOR
622-3702-006	BDI-36	BEARING DISTANCE INDICATOR
622-3702-008	BDI-36	BEARING DISTANCE INDICATOR
622-3702-009	BDI-36	BEARING DISTANCE INDICATOR
622-3702-011	BDI-36	BEARING DISTANCE INDICATOR
622-3702-014	BDI-36	BEARING DISTANCE INDICATOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-3702-015	BDI-36	BEARING DISTANCE INDICATOR
622-3710-001	ANT-60B	ANTENNA ACTIVE
622-3711-005	MSI-80B	INDICATOR, MACH SPEED
622-3881-001	IND-40C	INDICATOR, DME
622-3881-002	IND-40C	INDICATOR, DME
622-3890-003	860F-4	ALTIMETER, RADIO
622-3890-014	860F-4	ALTIMETER, RADIO
622-3915-001	IND-40	INDICATOR, DME
622-3915-002	IND-40	INDICATOR, DME
622-3916-001	IND-40A	INDICATOR, DME
622-3916-002	IND-40A	INDICATOR, DME
622-3917-001	IND-40B	INDICATOR, DME
622-3919-001	IND-41A	INDICATOR, DME
622-3920-002	IND-41B	INDICATOR, DME
622-3921-002	IND-41C	INDICATOR, DME
622-3975-001	ALI-80A	INDICATOR, ALTIMETER
622-3975-003	ALI-80A	INDICATOR, ALTIMETER
622-3975-004	ALI-80A	INDICATOR, ALTIMETER
622-3975-005	ALI-80A	INDICATOR, ALTIMETER
622-3975-006	ALI-80A	INDICATOR, ALTIMETER
622-3975-007	ALI-80A	INDICATOR, ALTIMETER
622-3975-011	ALI-80A	INDICATOR, ALTIMETER
622-3975-014	ALI-80A	INDICATOR, ALTIMETER
622-3992-019	APC-80A	COMPUTER, AUTOPILOT
622-4021-001	WXT-200A	RECEIVER-TRANSMITTER, RADIO
622-4022-001	WXT-250A	RECEIVER-TRANSMITTER, RADIO
622-4023-001	IND-200A	INDICATOR, WEATHER RADAR
622-4027-001	IND-250A	INDICATOR, WEATHER RADAR
622-4027-003	IND-250A	INDICATOR, WEATHER RADAR
622-4093-002	514A-7	CONTROL RADIO SET
622-4096-001	346D-2B	PASSENGER ADDRESS AMPLIFIER
622-4096-003	346D-2B	PASSENGER ADDRESS AMPLIFIER
622-4151-002	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-003	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-005	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-006	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-007	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-012	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-015	HSI-84	INDICATOR, HORIZONTAL SITUATION
622-4151-016	HSI-84	INDICATOR, HORIZONTAL SITUATION

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-4160-004	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-005	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-008	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-011	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-013	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-015	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-017	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4160-018	DRI-55	DIGITAL RADIO ALTITUDE INDICATOR
622-4176-001	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-002	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-003	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-004	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-005	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-006	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-008	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-009	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4176-012	HSI-85	INDICATOR, HORIZONTAL SITUATION
622-4177-001	HCP-85	PANEL, HEADING COURSE
622-4177-002	HCP-85	PANEL, HEADING COURSE
622-4177-004	HCP-85	PANEL, HEADING COURSE
622-4178-001	HCP-86	PANEL, HEADING COURSE
622-4178-003	HCP-86	PANEL, HEADING COURSE
622-4178-004	HCP-86	PANEL, HEADING COURSE
622-4185-013	VNI-80A	INDICATOR, VERTICAL NAVIGATION
622-4248-019	APA-80C	AMPLIFIER, AUTOPILOT
622-4331-001	IND-300	INDICATOR, WEATHER RADAR
622-4331-002	IND-300	INDICATOR, WEATHER RADAR
622-4331-003	IND-300	INDICATOR, WEATHER RADAR
622-4365-099	ADC-80H	AIR DATA COMPUTER
622-4365-221	ADC-80H	AIR DATA COMPUTER
622-4371-099	ADC-80G	AIR DATA COMPUTER
622-4371-100	ADC-80G	AIR DATA COMPUTER
622-4382-004	MSI-80C	INDICATOR, MACH SPEED
622-4382-007	MSI-80C	INDICATOR, MACH SPEED
622-4382-011	MSI-80C	INDICATOR, MACH SPEED
622-4382-013	MSI-80C	INDICATOR, MACH SPEED
622-4382-015	MSI-80C	INDICATOR, MACH SPEED
622-4382-017	MSI-80C	INDICATOR, MACH SPEED
622-4382-018	MSI-80C	INDICATOR, MACH SPEED
622-4382-024	MSI-80C	INDICATOR, MACH SPEED
622-4393-001	590A-3J1	CONTROL, AIR DATA

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-4393-019	590A-3J1	CONTROL, AIR DATA
622-4394-001	590A-3K1	CONTROL, AIR DATA
622-4394-002	590A-3K1	CONTROL, AIR DATA
622-4394-004	590A-3K1	CONTROL, AIR DATA
622-4394-005	590A-3K1	CONTROL, AIR DATA
622-4394-008	590A-3K1	CONTROL, AIR DATA
622-4394-009	590A-3K1	CONTROL, AIR DATA
622-4394-013	590A-3K1	CONTROL, AIR DATA
622-4394-019	590A-3K1	CONTROL, AIR DATA
622-4394-042	590A-3K1	CONTROL, AIR DATA
622-4401-001	ADC-81A	AIR DATA COMPUTER
622-4404-001	SVO-85A	SERVO
622-4404-002	SVO-85A	SERVO
622-4404-101	SVO-85A	SERVO
622-4404-102	SVO-85A	SERVO
622-4424-001	332D-11V	GYRO, VERTICAL REFERENCE
622-4449-040	FGP-81A	FLIGHT GUIDANCE PANEL
622-4483-002	IND-31C	INDICATOR, WEATHER RADAR
622-4483-003	IND-31C	INDICATOR, WEATHER RADAR
622-4523-001	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-003	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-004	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-011	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-013	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-014	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-015	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-016	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-017	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-018	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-201	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-215	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-802	CTL-20	CONTROL, VHF COMMUNICATION
622-4523-804	CTL-20	CONTROL, VHF COMMUNICATION
622-4524-043	CTL-30	CONTROL, NAVIGATION
622-4524-063	CTL-30	CONTROL, NAVIGATION
622-4524-064	CTL-30	CONTROL, NAVIGATION
622-4524-066	CTL-30	CONTROL, NAVIGATION
622-4524-067	CTL-30	CONTROL, NAVIGATION
622-4524-079	CTL-30	CONTROL, NAVIGATION
622-4524-086	CTL-30	CONTROL, NAVIGATION

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-4524-106	CTL-30	CONTROL, NAVIGATION
622-4524-277	CTL-30	CONTROL, NAVIGATION
622-4524-278	CTL-30	CONTROL, NAVIGATION
622-4524-279	CTL-30	CONTROL, NAVIGATION
622-4524-813	CTL-30	CONTROL, NAVIGATION
622-4524-815	CTL-30	CONTROL, NAVIGATION
622-4526-001	CTL-60	CONTROL, ADF
622-4526-013	CTL-60	CONTROL, ADF
622-4526-015	CTL-60	CONTROL, ADF
622-4526-016	CTL-60	CONTROL, ADF
622-4526-019	CTL-60	CONTROL, ADF
622-4526-031	CTL-60	CONTROL, ADF
622-4526-032	CTL-60	CONTROL, ADF
622-4526-033	CTL-60	CONTROL, ADF
622-4526-034	CTL-60	CONTROL, ADF
622-4526-804	CTL-60	CONTROL, ADF
622-4527-007	CTL-90	CONTROL, TRANSPONDER
622-4527-013	CTL-90	CONTROL, TRANSPONDER
622-4527-015	CTL-90	CONTROL, TRANSPONDER
622-4527-016	CTL-90	CONTROL, TRANSPONDER
622-4527-017	CTL-90	CONTROL, TRANSPONDER
622-4527-018	CTL-90	CONTROL, TRANSPONDER
622-4527-019	CTL-90	CONTROL, TRANSPONDER
622-4527-020	CTL-90	CONTROL, TRANSPONDER
622-4527-804	CTL-90	CONTROL, TRANSPONDER
622-4540-001	DME-700	DISTANCE MEASURING EQPT
622-4540-023	DME-700	DISTANCE MEASURING EQPT
622-4540-122	DME-700	DISTANCE MEASURING EQPT
622-4542-002	LRA-700	RADIO ALTIMETER
622-4542-003	LRA-700	RADIO ALTIMETER
622-4542-020	LRA-700	RADIO ALTIMETER
622-4542-103	LRA-700	RADIO ALTIMETER
622-4542-120	LRA-700	RADIO ALTIMETER
622-4542-221	LRA-700	RADIO ALTIMETER
622-4545-001	CTL-220	CONTROL PANEL HF
622-4545-004	CTL-220	CONTROL PANEL HF
622-4545-005	CTL-220	CONTROL PANEL HF
622-4545-006	CTL-220	CONTROL PANEL HF
622-4545-013	CTL-220	CONTROL PANEL HF
622-4545-021	CTL-220	CONTROL PANEL HF
622-4555-002	RLS-701	GENERATED WIRE KIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-4565-001	332D-11T	GYRO, VERTICAL REFERENCE
622-4565-002	332D-11T	GYRO, VERTICAL REFERENCE
622-4569-001	REU-84A	UNIT, REMOTE ELECTRONICS
622-4570-001	ADI-70C	INDICATOR, ATTITUDE DIRECTOR
622-4572-001	HSI-70C	INDICATOR, HORIZONTAL SITUATION
622-4593-508	MCDP-701	PANEL, MAINTENANCE CONTROL DISPLAY
622-4717-004	MCP-701	PANEL, MODE CONTROL
622-4730-001	FPA-80	FLIGHT PROFILE ADVISORY
622-4730-002	FPA-80	FLIGHT PROFILE ADVISORY
622-4730-011	FPA-80	FLIGHT PROFILE ADVISORY
622-4730-012	FPA-80	FLIGHT PROFILE ADVISORY
622-4782-001	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-003	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-004	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-005	VSI-80A	VERTICAL SPEED INDICATOR
622-4782-007	VSI-80A	VERTICAL SPEED INDICATOR
622-4784-001	180R-4M	ANTENNA COUPLER
622-4808-001	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-002	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-004	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-005	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-006	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4808-009	ADI-85A	FLIGHT DIRECTOR INDICATOR
622-4912-002	ADI-70	FLIGHT DIRECTOR & ATTITUDE INDICATOR
622-4913-001	HSI-70	INDICATOR, HORIZONTAL SITUATION
622-4913-002	HSI-70	INDICATOR, HORIZONTAL SITUATION
622-4938-001	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-002	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-004	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-005	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-006	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-007	RMI-30	INDICATOR, RADIO MAGNETIC
622-4938-027	RMI-30	INDICATOR, RADIO MAGNETIC
622-4964-001	APC-80F	COMPUTER, AUTOPILOT
622-5001-109	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-502	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-503	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-504	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5001-701	RDMI-743	INDICATOR, RADIO DISTANCE MAGNETIC
622-5002-203	RMI-733	INDICATOR, RADIO MAGNETIC

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-5027-001	SVO-85B	SERVO
622-5027-002	SVO-85B	SERVO
622-5027-101	SVO-85B	SERVO
622-5027-102	SVO-85B	SERVO
622-5028-001	SMT-85A	SERVO, MOUNT
622-5028-101	SMT-85A	SERVO, MOUNT
622-5029-001	SMT-85B	SERVO, MOUNT
622-5029-002	SMT-85B	SERVO, MOUNT
622-5029-101	SMT-85B	SERVO, MOUNT
622-5029-102	SMT-85B	SERVO, MOUNT
622-5029-111	SMT-85B	SERVO, MOUNT
622-5048-341	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5048-344	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5048-361	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5048-381	EFIC-701	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-5107-001	RNC-300	COMPUTER, RADAR NAVIGATION
622-5108-001	DCP-320	DISPLAY CONTROL PANEL
622-5108-004	DCP-320	DISPLAY CONTROL PANEL
622-5108-005	DCP-320	DISPLAY CONTROL PANEL
622-5108-006	DCP-320	DISPLAY CONTROL PANEL
622-5108-007	DCP-320	DISPLAY CONTROL PANEL
622-5108-008	DCP-320	DISPLAY CONTROL PANEL
622-5110-001	RDP-300	PROGRAMMER, REMOTE DATA
622-5112-001	ANS-31C	RNAV CTL 5V GY 6 POS
622-5112-002	ANS-31C	RNAV CTL 28V BK 6 PO
622-5112-003	ANS-31C	RNAV CTL, 5V, BK, 4 POSITION
622-5112-004	ANS-31C	CONTROL, R NAV
622-5129-105	WCP-701	PANEL, SINGLE CONTROL
622-5129-107	WCP-701	PANEL, SINGLE CONTROL
622-5129-108	WCP-701	PANEL, SINGLE CONTROL
622-5129-203	WCP-701	PANEL, SINGLE CONTROL
622-5129-223	WCP-701	PANEL, SINGLE CONTROL
622-5129-802	WCP-701	PANEL, SINGLE CONTROL
622-5130-020	WCP-702	CONT. PANEL, DUAL
622-5130-021	WCP-702	CONT. PANEL, DUAL
622-5130-103	WCP-702	CONT. PANEL, DUAL
622-5130-111	WCP-702	CONT. PANEL, DUAL
622-5130-113	WCP-702	CONT. PANEL, DUAL
622-5130-114	WCP-702	CONT. PANEL, DUAL
622-5130-119	WCP-702	CONT. PANEL, DUAL
622-5130-205	WCP-702	CONT. PANEL, DUAL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-5130-208	WCP-702	CONT. PANEL, DUAL
622-5132-104	WRT-701X	RECEIVER/TRANSMITTER
622-5132-107	WRT-701X	RECEIVER/TRANSMITTER
622-5132-109	WRT-701X	RECEIVER/TRANSMITTER
622-5132-120	WRT-701X	RECEIVER/TRANSMITTER
622-5132-622	WRT-701X	RECEIVER/TRANSMITTER
622-5132-623	WRT-701X	RECEIVER/TRANSMITTER
622-5132-633	WRT-701X	RECEIVER/TRANSMITTER
622-5133-002	WMT-701X	MOUNT, ANTENNA
622-5133-007	WMT-701X	MOUNT, ANTENNA
622-5133-102	WMT-701X	MOUNT, ANTENNA
622-5133-105	WMT-701X	MOUNT, ANTENNA
622-5134-064	WMT-702X	MOUNT, RADAR DUAL R/T
622-5135-002	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5135-102	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5135-202	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5135-802	WMA-701X	ANTENNA MOUNT X-BAND SINGLE
622-5136-001	WMA-702X	MOUNT, ANTENNA
622-5136-201	WMA-702X	MOUNT, ANTENNA
622-5136-202	WMA-702X	MOUNT, ANTENNA
622-5136-801	WMA-702X	MOUNT, ANTENNA
622-5136-802	WMA-702X	MOUNT, ANTENNA
622-5137-001	WFA-701X	ANTENNA RADIATOR X-BAND
622-5137-601	WFA-701X	ANTENNA RADIATOR X-BAND
622-5192-001	APC-841	COMPUTER, AUTOPILOT
622-5192-002	APC-841	COMPUTER, AUTOPILOT
622-5192-004	APC-841	COMPUTER, AUTOPILOT
622-5192-006	APC-841	COMPUTER, AUTOPILOT
622-5192-007	APC-841	COMPUTER, AUTOPILOT
622-5193-001	AAM-830	MONITOR, AIRCRAFT ATTITUDE
622-5194-001	SVO-830	SERVO
622-5194-002	SVO-830	SERVO
622-5206-099	ADC-80J	AIR DATA COMPUTER
622-5206-100	ADC-80J	AIR DATA COMPUTER
622-5219-003	VHF-700	COMMUNICATIONS TRANSCEIVER, VHF
622-5219-020	VHF-700	COMMUNICATIONS TRANSCEIVER, VHF
622-5219-120	VHF-700	COMMUNICATIONS TRANSCEIVER, VHF
622-5220-002	VOR-700	RECEIVER, VOR
622-5220-020	VOR-700	RECEIVER, VOR
622-5220-103	VOR-700	RECEIVER, VOR
622-5220-120	VOR-700	RECEIVER, VOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-5221-002	ILS-700	RECEIVER, ILS
622-5221-102	ILS-700	RECEIVER, ILS
622-5221-120	ILS-700	RECEIVER, ILS
622-5222-002	ADF-700	RECEIVER, ADF
622-5222-020	ADF-700	RECEIVER, ADF
622-5222-102	ADF-700	RECEIVER, ADF
622-5222-120	ADF-700	RECEIVER, ADF
622-5224-001	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-002	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-003	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-004	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-005	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-006	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-007	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-009	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-010	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-012	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-013	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-015	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-016	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-021	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5224-023	FGC-80F	FLIGHT GUIDANCE COMPUTER
622-5272-020	HFS-700	RECEIVER/TRANSMITTER
622-5272-120	HFS-700	RECEIVER/TRANSMITTER
622-5337-001	TCR-220	RECEIVER-TRANSMITTER, RADIO
622-5342-001	PAU-700	PASSENGER ADDRESS AMPLIFIER
622-5342-101	PAU-700	PASSENGER ADDRESS AMPLIFIER
622-5350-014	ASI-80B	INDICATOR, AIRSPEED
622-5350-024	ASI-80B	INDICATOR, AIRSPEED
622-5352-014	ASI-80D	INDICATOR, AIRSPEED
622-5352-024	ASI-80D	INDICATOR, AIRSPEED
622-5352-054	ASI-80D	INDICATOR, AIRSPEED
622-5353-011	ASI-80E	INDICATOR, AIRSPEED
622-5374-002	ASA-701	ANNUNCIATOR AUTOLAND STATUS
622-5375-001	454N-2D	MONITOR, RATE CUTOUT
622-5375-002	454N-2D	MONITOR, RATE CUTOUT
622-5375-005	454N-2D	MONITOR, RATE CUTOUT
622-5377-001	628T-2A	RECEIVER-TRANSMITTER
622-5404-001	DFA-701A	ANTENNA, ADF
622-5404-002	DFA-701A	ANTENNA, ADF
622-5404-003	DFA-701A	ANTENNA, ADF

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-5462-001	728U-2	RECEIVER TRANSMITTER, RADIO (Export License required)
622-5462-002	728U-2	RECEIVER TRANSMITTER, RADIO (Export License required)
622-5463-001	514A-8	CONTROL, RADIO SET (Export License required)
622-5463-011	514A-8	CONTROL, RADIO SET (Export License required)
622-5465-099	ADC-80K	AIR DATA COMPUTER
622-5465-100	ADC-80K	AIR DATA COMPUTER
622-5465-316	ADC-80K	AIR DATA COMPUTER
622-5465-618	ADC-80K	AIR DATA COMPUTER
622-5476-004	HCP-87	PANEL, HEADING COURSE
622-5510-001	999W-2A	ADAPTER SINGLE ANTENNA
622-5656-001	PAC-200	PROBE ANT. COUPLER
622-5734-001	SVO-65	SERVO, PRIMARY
622-5734-002	SVO-65	SERVO, PRIMARY
622-5735-001	SMT-65	SERVO, MOUNT
622-5735-002	SMT-65	SERVO, MOUNT
622-5735-003	SMT-65	SERVO, MOUNT
622-5735-004	SMT-65	SERVO, MOUNT
622-5735-020	SMT-65	SERVO, MOUNT
622-5735-021	SMT-65	SERVO, MOUNT
622-5735-022	SMT-65	SERVO, MOUNT
622-5735-023	SMT-65	SERVO, MOUNT
622-5735-024	SMT-65	SERVO, MOUNT
622-5735-103	SMT-65	SERVO, MOUNT
622-5735-104	SMT-65	SERVO, MOUNT
622-5735-105	SMT-65	SERVO, MOUNT
622-5735-511	SMT-65	SERVO, MOUNT
622-5796-001	APC-65	COMPUTER AUTOPILOT
622-5796-004	APC-65	COMPUTER AUTOPILOT
622-5796-006	APC-65	COMPUTER AUTOPILOT
622-5796-007	APC-65	COMPUTER AUTOPILOT
622-5796-008	APC-65	COMPUTER AUTOPILOT
622-5796-009	APC-65	COMPUTER AUTOPILOT
622-5796-010	APC-65	COMPUTER AUTOPILOT
622-5796-011	APC-65	COMPUTER AUTOPILOT
622-5796-012	APC-65	COMPUTER AUTOPILOT
622-5796-014	APC-65	COMPUTER AUTOPILOT
622-5796-016	APC-65	COMPUTER AUTOPILOT
622-5796-019	APC-65	COMPUTER AUTOPILOT
622-5796-020	APC-65	COMPUTER AUTOPILOT
622-5796-033	APC-65	COMPUTER AUTOPILOT
622-5796-107	APC-65	COMPUTER AUTOPILOT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-5796-108	APC-65	COMPUTER AUTOPILOT
622-5796-109	APC-65	COMPUTER AUTOPILOT
622-5796-110	APC-65	COMPUTER AUTOPILOT
622-5796-113	APC-65	COMPUTER AUTOPILOT
622-5796-209	APC-65	COMPUTER AUTOPILOT
622-5796-409	APC-65	COMPUTER AUTOPILOT
622-5797-001	ADS-65	SENSOR, AIR DATA
622-5798-002	FCP-65	FLIGHT CONTROL PANEL
622-5798-004	FCP-65	FLIGHT CONTROL PANEL
622-5798-005	FCP-65	FLIGHT CONTROL PANEL
622-5798-008	FCP-65	FLIGHT CONTROL PANEL
622-5798-013	FCP-65	FLIGHT CONTROL PANEL
622-5798-014	FCP-65	FLIGHT CONTROL PANEL
622-5798-022	FCP-65	FLIGHT CONTROL PANEL
622-5799-001	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-002	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-003	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-004	MAP-65	PANEL, MODE ANNUNCIATOR
622-5799-104	MAP-65	PANEL, MODE ANNUNCIATOR
622-5812-001	FDU-70	FLUX DETECTOR UNIT
622-5812-002	FDU-70	FLUX DETECTOR UNIT
622-5812-004	FDU-70	FLUX DETECTOR UNIT
622-5812-006	FDU-70	FLUX DETECTOR UNIT
622-5940-008	IND-220	INDICATOR, WEATHER RADAR
622-5941-001	IND-270	INDICATOR, WEATHER RADAR
622-5941-002	IND-270	INDICATOR, WEATHER RADAR
622-5942-001	RNC-300A	COMPUTER RADAR NAVIGATION
622-5952-001	FGC-65	FLIGHT GUIDANCE COMPUTER
622-5952-020	FGC-65	FLIGHT GUIDANCE COMPUTER
622-5962-001	628T-3A	TRANSCEIVER, HF
622-6019-001	SSS-65	SENSOR, SLIP SKID
622-6020-001	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-002	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-011	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-012	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-021	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6020-022	EFD-85	ELECTRONIC FLIGHT DISPLAY
622-6021-001	DCP-85B	DISPLAY CONTROL PANEL
622-6021-002	DCP-85B	DISPLAY CONTROL PANEL
622-6021-003	DCP-85B	DISPLAY CONTROL PANEL
622-6022-002	DPU-85	DISPLAY PROCESSOR UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-6022-012	DPU-85	DISPLAY PROCESSOR UNIT
622-6089-102	DSP-701A	DISPLAY SELECT PANEL
622-6090-001	MFD-85	MULTIFUNCTION DISPLAY
622-6090-002	MFD-85	MULTIFUNCTION DISPLAY
622-6091-002	MPU-85	PROCESSOR, MULTIFUNCTION
622-6091-012	MPU-85	PROCESSOR, MULTIFUNCTION
622-6092-001	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-002	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-011	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-012	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-021	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6092-032	WXP-85A	CONTROL PANEL, WEATHER RADAR
622-6093-001	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6093-011	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6093-012	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6093-032	WXP-85B	CONTROL PANEL, WEATHER RADAR
622-6105-023	MSI-80D	INDICATOR, MACH SPEED
622-6105-043	MSI-80D	INDICATOR, MACH SPEED
622-6135-001	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-003	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-011	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-012	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-013	CCU-65	UNIT, CONTROL COMPENSATION
622-6135-014	CCU-65	UNIT, CONTROL COMPENSATION
622-6136-001	DGS-65	GYRO, DIRECTIONAL
622-6136-002	DGS-65	GYRO, DIRECTIONAL
622-6137-001	VIR-32	NAVIGATION RECEIVER
622-6137-201	VIR-32	NAVIGATION RECEIVER
622-6140-002	SMT-65B	SERVO, MOUNT
622-6152-001	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-002	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-011	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-023	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-031	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6152-033	VHF-22A	COMMUNICATIONS TRANSCEIVER, VHF
622-6153-001	VHF-22B	COMMUNICATIONS TRANSCEIVER, VHF
622-6153-002	VHF-22B	COMMUNICATIONS TRANSCEIVER, VHF
622-6174-001	RCP-65	REMOTE COMPENSATION PANEL
622-6189-001	ICU-85	INTERNAL COMPENSATION UNIT
622-6189-002	ICU-85	INTERNAL COMPENSATION UNIT
622-6190-113	AHC-85	ATTITUDE HEADING COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-6190-204	AHC-85	ATTITUDE HEADING COMPUTER
622-6195-007	FCC-86	FLIGHT CONTROL COMPUTER
622-6195-008	FCC-86	FLIGHT CONTROL COMPUTER
622-6195-205	FCC-86	FLIGHT CONTROL COMPUTER
622-6195-315	FCC-86	FLIGHT CONTROL COMPUTER
622-6197-001	EFD-74	ELECTRONIC FLIGHT DISPLAY
622-6197-002	EFD-74	ELECTRONIC FLIGHT DISPLAY
622-6198-001	HPU-74	HSI PROCESSOR UNIT
622-6198-002	HPU-74	HSI PROCESSOR UNIT
622-6198-003	HPU-74	HSI PROCESSOR UNIT
622-6198-012	HPU-74	HSI PROCESSOR UNIT
622-6198-013	HPU-74	HSI PROCESSOR UNIT
622-6198-102	HPU74	HSI PROCESSOR UNIT
622-6198-103	HPU74	HSI PROCESSOR UNIT
622-6198-112	HPU-74	HSI PROCESSOR UNIT
622-6199-001	HPU-74A	HSI PROCESSOR UNIT
622-6200-001	HCP-74	HSI CONTROL PANEL
622-6200-002	HCP-74	HSI CONTROL PANEL
622-6200-003	HCP-74	HSI CONTROL PANEL
622-6208-001	APP-85	AUTOPILOT PANEL
622-6208-003	APP-85	AUTOPILOT PANEL
622-6208-004	APP-85	AUTOPILOT PANEL
622-6208-005	APP-85	AUTOPILOT PANEL
622-6208-044	APP-85	AUTOPILOT PANEL
622-6208-103	APP-85	AUTOPILOT PANEL
622-6208-104	APP-85	AUTOPILOT PANEL
622-6208-204	APP-85	AUTOPILOT PANEL
622-6208-208	APP-85	AUTOPILOT PANEL
622-6208-223	APP-85	AUTOPILOT PANEL
622-6208-227	APP-85	AUTOPILOT PANEL
622-6208-303	APP-85	AUTOPILOT PANEL
622-6208-403	APP-85	AUTOPILOT PANEL
622-6209-001	MSP-85	MODE SELECT PANEL
622-6209-002	MSP-85	MODE SELECT PANEL
622-6209-007	MSP-85	MODE SELECT PANEL
622-6209-008	MSP-85	MODE SELECT PANEL
622-6209-010	MSP-85	MODE SELECT PANEL
622-6209-011	MSP-85	MODE SELECT PANEL
622-6209-019	MSP-85	MODE SELECT PANEL
622-6209-020	MSP-85	MODE SELECT PANEL
622-6209-105	MSP-85	MODE SELECT PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-6209-111	MSP-85	MODE SELECT PANEL
622-6209-205	MSP-85	MODE SELECT PANEL
622-6209-206	MSP-85	MODE SELECT PANEL
622-6209-305	MSP-85	MODE SELECT PANEL
622-6209-306	MSP-85	MODE SELECT PANEL
622-6232-001	ADP-80	PROCESSOR, AIR DATA
622-6233-099	ADC-80L	AIR DATA COMPUTER
622-6233-100	ADC-80L	AIR DATA COMPUTER
622-6234-015	PRE-80L	PRESELECT OR ALERTER
622-6238-001	ALI-80L	INDICATOR, ALTIMETER
622-6263-001	DME-42	DISTANCE MEASURING EQPT
622-6263-003	DME-42	DISTANCE MEASURING EQPT
622-6318-002	CHP-85A	COURSE HEADING PANEL
622-6319-001	CHP-85B	COURSE HEADING PANEL
622-6319-002	CHP-85B	COURSE HEADING PANEL
622-6320-002	DCP-85A	DISPLAY CONTROL PANEL
622-6332-001	ADS-65C	SENSOR, AIR DATA
622-6342-012	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-014	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-022	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-023	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6342-024	EFD-86	ELECTRONIC FLIGHT DISPLAY
622-6383-012	RSP-85A	REVERSIONARY SWITCHING PANEL
622-6383-102	RSP-85A	REVERSIONARY SWITCHING PANEL
622-6383-112	RSP-85A	REVERSIONARY SWITCHING PANEL
622-6389-001	VHF-21A	COMMUNICATIONS TRANSCEIVER, VHF
622-6389-002	VHF-21A	COMMUNICATIONS TRANSCEIVER, VHF
622-6389-011	VHF-21A	COMMUNICATIONS TRANSCEIVER, VHF
622-6390-001	VHF-21B	COMMUNICATIONS TRANSCEIVER, VHF
622-6390-002	VHF-21B	COMMUNICATIONS TRANSCEIVER, VHF
622-6392-001	CWC-80	COMPARATOR WARNING COMPUTER
622-6404-002	CHP-85C	COURSE HEADING PANEL
622-6405-004	DCP-85C	DISPLAY CONTROL PANEL
622-6408-001	CHP-86A	COURSE HEADING PANEL
622-6408-002	CHP-86A	COURSE HEADING PANEL
622-6411-001	SMT-65D	SERVO, MOUNT
622-6411-002	SMT-65D	SERVO, MOUNT
622-6415-015	MSI-80E	INDICATOR, MACH SPEED
622-6470-002	AAC-200P	ANTENNA COUPLER
622-6471-002	AAC-220P	ANTENNA COUPLER SHUNT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-6475-005	ADC-82A	AIR DATA COMPUTER
622-6475-026	ADC-82A	AIR DATA COMPUTER
622-6475-099	ADC-82A	AIR DATA COMPUTER
622-6475-100	ADC-82A	AIR DATA COMPUTER
622-6475-627	ADC-82A	AIR DATA COMPUTER
622-6509-103	SMT-86B	SERVO, MOUNT
622-6513-001	ANT-312A	ANTENNA, WEATHER RADAR
622-6514-004	WXI-711	INDICATOR, WEATHER RADAR
622-6514-222	WXI-711	INDICATOR, WEATHER RADAR
622-6520-001	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-003	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-004	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-005	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-006	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-007	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-008	CTL-22	CONTROL, VHF COMMUNICATION
622-6520-009	CTL-22	CONTROL, VHF COMMUNICATION
622-6521-001	CTL-32	CONTROL, NAVIGATION
622-6521-007	CTL-32	CONTROL, NAVIGATION
622-6521-008	CTL-32	CONTROL, NAVIGATION
622-6521-009	CTL-32	CONTROL, NAVIGATION
622-6521-011	CTL-32	CONTROL, NAVIGATION
622-6521-012	CTL-32	CONTROL, NAVIGATION
622-6521-013	CTL-32	CONTROL, NAVIGATION
622-6521-014	CTL-32	CONTROL, NAVIGATION
622-6521-015	CTL-32	CONTROL, NAVIGATION
622-6521-016	CTL-32	CONTROL, NAVIGATION
622-6521-025	CTL-32	CONTROL, NAVIGATION
622-6522-001	CTL-62	CONTROL, ADF
622-6522-003	CTL-62	CONTROL, ADF
622-6522-004	CTL-62	CONTROL, ADF
622-6522-005	CTL-62	CONTROL, ADF
622-6522-006	CTL-62	CONTROL, ADF
622-6522-007	CTL-62	CONTROL, ADF
622-6522-008	CTL-62	CONTROL, ADF
622-6522-009	CTL-62	CONTROL, ADF
622-6522-010	CTL-62	CONTROL, ADF
622-6522-011	CTL-62	CONTROL, ADF
622-6522-013	CTL-62	CONTROL, ADF
622-6522-015	CTL-62	CONTROL, ADF
622-6522-016	CTL-62	CONTROL, ADF

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-6522-017	CTL-62	CONTROL, ADF
622-6523-004	CTL-92	CONTROL, TRANSPONDER
622-6523-005	CTL-92	CONTROL, TRANSPONDER
622-6523-006	CTL-92	CONTROL, TRANSPONDER
622-6523-007	CTL-92	CONTROL, TRANSPONDER
622-6523-008	CTL-92	CONTROL, TRANSPONDER
622-6523-201	CTL-92	CONTROL, TRANSPONDER
622-6523-203	CTL-92	CONTROL, TRANSPONDER
622-6523-204	CTL-92	CONTROL, TRANSPONDER
622-6523-205	CTL-92	CONTROL, TRANSPONDER
622-6523-206	CTL-92	CONTROL, TRANSPONDER
622-6523-207	CTL-92	CONTROL, TRANSPONDER
622-6523-208	CTL-92	CONTROL, TRANSPONDER
622-6523-213	CTL-92	CONTROL, TRANSPONDER
622-6524-001	IND-42A	INDICATOR, DME
622-6524-002	IND-42A	INDICATOR, DME
622-6524-003	IND-42A	INDICATOR, DME
622-6524-004	IND-42A	INDICATOR, DME
622-6535-012	EFD-86A	ELECTRONIC FLIGHT DISPLAY
622-6535-022	EFD-86A	ELECTRONIC FLIGHT DISPLAY
622-6557-001	TCR-230	RECEIVER-XMTR, RADIO
622-6567-001	CWC-65	COMPARATOR WARNING COMPUTER
622-6590-001	CAD-62	ADAPTER, CONTROL
622-6590-002	CAD-62	ADAPTER, CONTROL
622-6591-001	ANT-42	ANTENNA DME
622-6607-006	DCP-270	DISPLAY CONTROL PANEL
622-6608-006	DCP-325	DISPLAY CONTROL PANEL
622-6614-001	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-002	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-003	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-021	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-022	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-023	CTL-230	CONTROL, VHF COMMUNICATION
622-6614-024	CTL-230	CONTROL, VHF COMMUNICATION
622-6667-001	PWR-230	POWER AMPLIFIER
622-6684-001	APP-65A	AUTOPILOT PANEL
622-6684-002	APP-65A	AUTOPILOT PANEL
622-6684-003	APP-65A	AUTOPILOT PANEL
622-6684-004	APP-65A	AUTOPILOT PANEL
622-6684-005	APP-65A	AUTOPILOT PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-6684-106	APP-65A	AUTOPILOT PANEL
622-6717-004	SVO-85C	SERVO
622-6717-104	SVO-85C	SERVO
622-6718-001	SMT-85C	SERVO, MOUNT
622-6718-101	SMT-85C	SERVO, MOUNT
622-6718-102	SMT-85C	SERVO, MOUNT
622-6719-103	SMT-86C	SERVO, MOUNT
622-6728-011	ASI-80F	INDICATOR, AIRSPEED
622-6785-011	MSI-80F	INDICATOR, MACH SPEED
622-6785-015	MSI-80F	INDICATOR, MACH SPEED
622-6785-017	MSI-80F	INDICATOR, MACH SPEED
622-6785-021	MSI-80F	INDICATOR, MACH SPEED
622-6785-131	MSI-80F	INDICATOR, MACH SPEED
622-6793-001	ANT-52	ANTENNA, RADIO ALTIMETER
622-6794-002	DCP-85E	DISPLAY CONTROL PANEL
622-6795-003	DSP-85	DISPLAY SELECT PANEL
622-6827-021	HFP-712	RECEIVER/TRANSMITTER
622-6827-022	HFP-712	RECEIVER/TRANSMITTER
622-6829-001	DFP-712	DIRECTION FINDER PANEL
622-6829-022	DFP-712	DIRECTION FINDER PANEL
622-6830-001	DFP-713	DIRECTION FINDER PANEL
622-6830-022	DFP-713	DIRECTION FINDER PANEL
622-6831-002	VFP-712	PANEL, VHF FREQUENCY
622-6831-022	VFP-712	PANEL, VHF FREQUENCY
622-6898-001	CHP-85D	COURSE HEADING PANEL
622-6898-002	CHP-85D	COURSE HEADING PANEL
622-6899-001	CHP-86B	COURSE HEADING PANEL
622-6899-002	CHP-86B	COURSE HEADING PANEL
622-6900-007	APP-85A	AUTOPILOT PANEL
622-7154-001	FMM-85	FAN MONITOR MODULE
622-7154-002	FMM-85	FAN MONITOR MODULE
622-7194-101	VIR-432	NAVIGATION RECEIVER
622-7194-201	VIR-432	NAVIGATION RECEIVER
622-7208-001	ADC-850	AIR DATA COMPUTER
622-7208-002	ADC-850	AIR DATA COMPUTER
622-7209-001	RAC-870	CONVERTER, RADIO ALTIMETER
622-7209-002	RAC-870	CONVERTER, RADIO ALTIMETER
622-7209-003	RAC-870	CONVERTER, RADIO ALTIMETER
622-7209-004	RAC-870	CONVERTER, RADIO ALTIMETER
622-7236-001	MFD-85A	MULTI-FUNCTIONAL DISPLAY
622-7236-002	MFD-85A	MULTI-FUNCTIONAL DISPLAY

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-7236-011	MFD-85A	MULTI-FUNCTIONAL DISPLAY
622-7236-012	MFD-85A	MULTI-FUNCTIONAL DISPLAY
622-7244-001	DPU-85A	DISPLAY PROCESSOR UNIT
622-7244-002	DPU-85A	DISPLAY PROCESSOR UNIT
622-7245-001	DPU-85B	DISPLAY PROCESSOR UNIT
622-7247-001	DPU-86A	DISPLAY PROCESSOR UNIT
622-7248-001	DPU-86C	DISPLAY PROCESSOR UNIT
622-7248-002	DPU-86C	DISPLAY PROCESSOR UNIT
622-7248-003	DPU-86C	DISPLAY PROCESSOR UNIT
622-7250-001	MPU-85A	MULTIFUNCTIONAL PROCESSOR UNIT
622-7250-002	MPU-85A	MULTIFUNCTIONAL PROCESSOR UNIT
622-7251-001	MPU-85B	MULTIFUNCTIONAL PROCESSOR UNIT
622-7253-001	MPU-86A	MULTIFUNCTIONAL PROCESSOR UNIT
622-7254-002	MPU-86C	MULTIFUNCTIONAL PROCESSOR UNIT
622-7254-003	MPU-86C	MULTIFUNCTIONAL PROCESSOR UNIT
622-7292-001	VHF-422A	COMMUNICATIONS TRANSCEIVER, VHF
622-7292-101	VHF-422A	COMMUNICATIONS TRANSCEIVER, VHF
622-7292-123	VHF-422A	COMMUNICATIONS TRANSCEIVER, VHF
622-7293-101	VHF-422B	COMMUNICATIONS TRANSCEIVER, VHF
622-7293-121	VHF-422B	COMMUNICATIONS TRANSCEIVER, VHF
622-7309-001	DME-442	DISTANCE MEASURING EQPT
622-7309-101	DME-442	DISTANCE MEASURING EQPT
622-7318-001	IND-42C	INDICATOR, DME
622-7318-003	IND-42C	INDICATOR, DME
622-7318-004	IND-42C	INDICATOR, DME
622-7337-001	WXT-250B	RECEIVER-TRANSMITTER, RADIO
622-7338-001	WXP-85A	WEATHER RADAR CONTROL PANEL
622-7338-002	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-021	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-022	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-041	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7338-042	WXP-85C	WEATHER RADAR CONTROL PANEL
622-7346-001	CAD-870	ADAPTER, CONTROL
622-7346-002	CAD-870	ADAPTER, CONTROL
622-7375-002	490S-4	ANTENNA COUPLER (Export License required)
622-7375-003	490S-4	ANTENNA COUPLER
622-7382-001	ADF-462	RECEIVER,RADIO
622-7382-101	ADF-462	RECEIVER,RADIO
622-7383-001	ANT-462A	ANTENNA, AUTOMATIC DIRECTION FINDER
622-7384-001	ANT-462B	ANTENNA, ADF

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-7397-002	CHP-850	COURSE HEADING PANEL
622-7397-004	CHP-850	COURSE HEADING PANEL
622-7397-006	CHP-850	COURSE HEADING PANEL
622-7398-002	AAP-850	ALTITUDE AWARENESS PANEL
622-7405-004	IOC-851	IN/OUT CONCENTRATOR
622-7410-102	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-201	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-202	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-302	FCC-850	FLIGHT CONTROL COMPUTER
622-7410-402	FCC-850	FLIGHT CONTROL COMPUTER
622-7411-204	APP-85D	AUTOPILOT PANEL
622-7414-002	DAU-850	DATA ACQUISITION UNIT
622-7448-001	DPU-85G	DISPLAY PROCESSOR UNIT
622-7448-002	DPU-85G	DISPLAY PROCESSOR UNIT
622-7448-003	DPU-85G	DISPLAY PROCESSOR UNIT
622-7454-001	MPU-85G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7454-002	MPU-85G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7454-003	MPU-85G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7476-411	FCC-1000	FLIGHT CONTROL COMPUTER
622-7476-501	FCC-1000	FLIGHT CONTROL COMPUTER
622-7477-502	FMP-1000	FLIGHT MODE PANEL
622-7478-411	FAC-1000	FLIGHT AUGMENTATION COMPUTER
622-7478-501	FAC-1000	FLIGHT AUGMENTATION COMPUTER
622-7479-411	MCC-1000	MAINTENANCE CONTROL COMPUTER
622-7480-301	RMP-1000	REMOTE MAINTENANCE PANEL
622-7484-401	DU-1000	DISPLAY UNIT
622-7484-422	DU-1000	DISPLAY UNIT
622-7485-401	DCP-1000	DISPLAY CONTROL PANEL
622-7485-421	DCP-1000	DISPLAY CONTROL PANEL
622-7486-301	ASP-1000	ALTIMETER SET PANEL
622-7491-010	FCC-85B	FLIGHT CONTROL COMPUTER
622-7491-210	FCC-85B	FLIGHT CONTROL COMPUTER
622-7492-010	FCC-86B	FLIGHT CONTROL COMPUTER
622-7492-210	FCC-86B	FLIGHT CONTROL COMPUTER
622-7493-018	FCC-86C	FLIGHT CONTROL COMPUTER
622-7493-212	FCC-86C	FLIGHT CONTROL COMPUTER
622-7562-034	APA-80G	AMPLIFIER, AUTOPILOT
622-7576-099	ADC80N	AIR DATA COMPUTER
622-7576-554	ADC-80N	AIR DATA COMPUTER
622-7577-099	ADC-80Q	AIR DATA COMPUTER
622-7577-100	ADC-80Q	AIR DATA COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-7580-002	WXP-85D	WEATHER RADAR CONTROL PANEL
622-7580-022	WXP-85D	WEATHER RADAR CONTROL PANEL
622-7580-041	WXP-85D	WEATHER RADAR CONTROL PANEL
622-7648-004	PRE-80B	PRESELECT OR ALERTER
622-7648-006	PRE-80B	PRESELECT OR ALERTER
622-7648-035	PRE-80B	PRESELECT OR ALERTER
622-7667-001	DDA-42	DIGITAL DISTRIBUTION ADAPTER
622-7689-003	VNI80C	INDICATOR, VERTICAL NAVIGATION
622-7690-001	VNI-80D	INDICATOR, VERTICAL NAVIGATION
622-7690-003	VNI-80D	INDICATOR, VERTICAL NAVIGATION
622-7690-005	VNI-80D	INDICATOR, VERTICAL NAVIGATION
622-7695-001	CAD-870G	ADAPTER
622-7695-002	CAD-870G	ADAPTER
622-7710-001	DPU-86G	DISPLAY PROCESSOR UNIT
622-7710-002	DPU-86G	DISPLAY PROCESSOR UNIT
622-7711-002	DPU-86H	DISPLAY PROCESSOR UNIT
622-7711-003	DPU-86H	DISPLAY PROCESSOR UNIT
622-7713-001	DPU-86K	DISPLAY PROCESSOR UNIT
622-7713-003	DPU-86K	DISPLAY PROCESSOR UNIT
622-7713-004	DPU-86K	DISPLAY PROCESSOR UNIT
622-7715-001	MPU-86G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7715-002	MPU-86G	MULTIFUNCTIONAL PROCESSOR UNIT
622-7716-002	MPU-86H	MULTIFUNCTIONAL PROCESSOR UNIT
622-7716-003	MPU-86H	MULTIFUNCTIONAL PROCESSOR UNIT
622-7718-002	MPU-86K	MULTIFUNCTIONAL PROCESSOR UNIT
622-7718-003	MPU-86K	MULTIFUNCTIONAL PROCESSOR UNIT
622-7718-004	MPU-86K	MULTIFUNCTIONAL PROCESSOR UNIT
622-7728-002	DSP-85A	DISPLAY SELECT PANEL
622-7728-003	DSP-85A	DISPLAY SELECT PANEL
622-7728-004	DSP-85A	DISPLAY SELECT PANEL
622-7737-007	ADM-850	AIRCRAFT DATA MODULE
622-7875-001	CHP-86C	COURSE HEADING PANEL
622-7875-002	CHP-86C	COURSE HEADING PANEL
622-7876-011	MFD-85B	MULTI-FUNCTIONAL DISPLAY
622-7876-012	MFD-85B	MULTI-FUNCTIONAL DISPLAY
622-7877-001	CEU-85	CHECKLIST ENTRY UNIT
622-7878-201	TPR-710A	TRANSPONDER
622-7878-301	TPR-720	TRANSPONDER
622-7890-018	APC-65A	COMPUTER AUTOPILOT
622-7890-118	APC-65A	COMPUTER AUTOPILOT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-7925-303	SVO-1000	SERVO, PRIMARY
622-7927-302	SMT-1001	SERVO, MOUNT
622-7957-302	MFCP-1000A	MULTIFUNCTION CONTROL PANEL
622-7957-311	MFCP-1000A	MULTIFUNCTION CONTROL PANEL
622-7978-219	FCC-86D	FLIGHT CONTROL COMPUTER
622-7978-321	FCC-86D	FLIGHT CONTROL COMPUTER
622-7998-003	EDU-766D	ELECTRONIC DISPLAY UNIT
622-7998-013	EDU-766D	ELECTRONIC DISPLAY UNIT
622-7999-003	EDU-776D	ELECTRONIC DISPLAY UNIT
622-7999-013	EDU-776D	ELECTRONIC DISPLAY UNIT
622-8000-006	EFIP-701D	ELECTRONIC FLIGHT INSTRUMENT PROCESSOR
622-8001-350	EFIC-701D	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-8001-351	EFIC-701D	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-8001-352	EFIC-701D	ELECTRONIC FLIGHT INSTRUMENT CONTROL
622-8047-501	DU-1000A	DISPLAY UNIT
622-8051-001	ADC-85	AIR DATA COMPUTER
622-8051-002	ADC-85	AIR DATA COMPUTER
622-8051-003	ADC-85	AIR DATA COMPUTER
622-8051-004	ADC-85	AIR DATA COMPUTER
622-8051-005	ADC-85	AIR DATA COMPUTER
622-8069-302	SMT-1000A	SERVO, MOUNT
622-8069-304	SMT-1000A	SERVO, MOUNT
622-8070-099	ADC-80R	AIR DATA COMPUTER
622-8070-100	ADC-80R	AIR DATA COMPUTER
622-8071-302	SVL-1000	LINEAR ACTUATOR
622-8105-013	ADC-82L	AIR DATA COMPUTER
622-8105-099	ADC-82L	AIR DATA COMPUTER
622-8111-002	HF-9010	REMOTE CONTROL
622-8111-005	HF-9010	REMOTE CONTROL
622-8111-006	HF-9010	REMOTE CONTROL
622-8112-001	HF-9030	RECEIVER TRANSMITTER
622-8112-002	HF-9030	RECEIVER TRANSMITTER
622-8112-003	HF-9030	RECEIVER TRANSMITTER
622-8114-002	HF-9041	RECEIVER TRANSMITTER
622-8116-001	MT-9030A	MOUNTING BASE, ELECT EQUIP
622-8122-001	MT-9041A	MOUNTING BASE, ELECT EQUIP
622-8125-002	HF-9031	RECEIVER TRANSMITTER
622-8128-002	HF-9032	RECEIVER TRANSMITTER
622-8128-003	HF-9032	RECEIVER TRANSMITTER
622-8148-002	DCP-85F	DISPLAY CONTROL PANEL
622-8154-001	FDU-70A	FLUX DETECTOR UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-8154-003	FDU-70A	FLUX DETECTOR UNIT
622-8158-001	ADA-85	AIR DATA ADAPTER
622-8196-013	FCC-86E	FLIGHT CONTROL COMPUTER
622-8196-014	FCC-86E	FLIGHT CONTROL COMPUTER
622-8196-204	FCC-86E	FLIGHT CONTROL COMPUTER
622-8315-102	APC-65B	COMPUTER AUTOPILOT
622-8315-202	APC-65B	COMPUTER AUTOPILOT
622-8315-302	APC-65B	COMPUTER AUTOPILOT
622-8315-402	APC-65B	COMPUTER AUTOPILOT
622-8329-100	ADC-82C	AIR DATA COMPUTER
622-8330-003	MSP-850A	MODE SELECT PANEL
622-8330-004	MSP-850A	MODE SELECT PANEL
622-8330-005	MSP-850A	MODE SELECT PANEL
622-8332-002	CAD-31	ADAPTER, CONTROL
622-8334-002	ALI-850A	INDICATOR, ALTIMETER
622-8335-031	ASI-850A	INDICATOR, AIRSPEED
622-8336-011	SDU-640A	SENSOR DISPLAY UNIT
622-8363-002	CDU-850A	CONTROL DISPLAY UNIT
622-8364-002	ICC-850A	INTEGRATED CARD CAGE
622-8365-001	PWR-851A	POWER SUPPLY
622-8365-002	PWR-851A	POWER SUPPLY
622-8365-003	PWR-851A	POWER SUPPLY
622-8393-001	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-002	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-003	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-013	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8393-014	WXP-850A	CONTROL PANEL, WEATHER RADAR
622-8394-011	WXP-850B	CONTROL PANEL, WEATHER RADAR
622-8394-012	WXP-850B	CONTROL PANEL, WEATHER RADAR
622-8434-003	APC-65C	COMPUTER AUTOPILOT
622-8439-003	RTA-852	RECEIVER/TRANSMITTER/ANTENNA
622-8439-004	RTA-852	RECEIVER/TRANSMITTER/ANTENNA
622-8439-011	RTA-852	RECEIVER/TRANSMITTER/ANTENNA
622-8440-003	RTA-854	RECEIVER/TRANSMITTER/ANTENNA
622-8440-004	RTA-854	RECEIVER/TRANSMITTER/ANTENNA
622-8440-011	RTA-854	RECEIVER/TRANSMITTER/ANTENNA
622-8441-002	RTA-858	RECEIVER/TRANSMITTER/ANTENNA
622-8441-003	RTA-858	RECEIVER/TRANSMITTER/ANTENNA
622-8441-004	RTA-858	RECEIVER/TRANSMITTER/ANTENNA
622-8441-011	RTA-858	RECEIVER/TRANSMITTER/ANTENNA

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-8444-002	DPU-85M	DISPLAY PROCESSOR UNIT
622-8445-001	MPU-85M	MULTIFUNCTIONAL PROCESSOR UNIT
622-8445-002	MPU-85M	MULTIFUNCTIONAL PROCESSOR UNIT
622-8526-017	PFD-870	PRIMARY FLIGHT DISPLAY
622-8527-017	ND-870	DISPLAY, NAVIGATION
622-8528-017	MFD-870	MULTI-FUNCTIONAL DISPLAY
622-8529-015	ECD-870	ENGINE / CAUTION DISPLAY
622-8588-105	DU-7000	DISPLAY UNIT
622-8589-105	EIU-7000	EFIS/EICAS INTERFACE UNIT
622-8590-108	DCP-7000	DISPLAY CONTROL PANEL
622-8590-112	DCP-7000	DISPLAY CONTROL PANEL
622-8591-100	DSP-7000	DISPLAY SELECT PANEL
622-8594-001	DTP-722	TRANSPONDER PANEL
622-8594-021	DTP-722	TRANSPONDER PANEL
622-8613-002	BIA-32	BEARING INTERFACE ADAPTOR
622-8630-002	FGC-80G	FLIGHT GUIDANCE COMPUTER
622-8678-002	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-004	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-005	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-007	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-008	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-012	DPU-85N	DISPLAY PROCESSOR UNIT
622-8678-014	DPU-85N	DISPLAY PROCESSOR UNIT
622-8679-004	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-005	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-007	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-008	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-012	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8679-014	MPU-85N	MULTIFUNCTIONAL PROCESSOR UNIT
622-8680-001	DCP-85G	DISPLAY CONTROL PANEL
622-8680-002	DCP-85G	DISPLAY CONTROL PANEL
622-8682-003	FMC-851A	FLIGHT MANAGEMENT COMPUTER
622-8692-004	ADM-85	MODULE, AIR DATA
622-8692-005	ADM-85	MODULE, AIR DATA
622-8692-008	ADM-85	MODULE, AIR DATA
622-8692-014	ADM-85	MODULE, AIR DATA
622-8692-015	ADM-85	MODULE, AIR DATA
622-8701-002	RAA-700	RADIO ALTIMETER ANTENNA
622-8701-003	RAA-700	RADIO ALTIMETER ANTENNA
622-8757-106	FCC-702	FLIGHT CONTROL COMPUTER
622-8780-102	MCP-704	MODE CONTROL PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-8780-103	MCP-704	MODE CONTROL PANEL
622-8849-100	RFU-900	RADIO FREQUENCY UNIT
622-8971-020	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-022	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-120	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-122	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-320	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-322	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-420	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-422	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-500	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8971-522	TTR-920	RECEIVER TRANSMITTER, TCAS
622-8973-001	TRE-920	TCAS RADIATING ELEMENT
622-8973-104	TRE-920	TCAS RADIATING ELEMENT
622-8974-001	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-003	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-010	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-118	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-304	TTC-920	TRANSPONDER, TCAS CONTROL
622-8974-314	TTC-920	TRANSPONDER, TCAS CONTROL
622-9007-001	DPU-85R	DISPLAY PROCESSOR UNIT
622-9007-002	DPU-85R	DISPLAY PROCESSOR UNIT
622-9007-003	DPU-85R	DISPLAY PROCESSOR UNIT
622-9007-004	DPU-85R	DISPLAY PROCESSOR UNIT
622-9008-001	MPU-85R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9008-003	MPU-85R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9008-004	MPU-85R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9009-001	DPU-86R	DISPLAY PROCESSOR UNIT
622-9009-002	DPU-86R	DISPLAY PROCESSOR UNIT
622-9009-003	DPU-86R	DISPLAY PROCESSOR UNIT
622-9009-004	DPU-86R	DISPLAY PROCESSOR UNIT
622-9010-001	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9010-002	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9010-003	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9010-004	MPU-86R	MULTIFUNCTIONAL PROCESSOR UNIT
622-9046-026	APC-65E	COMPUTER AUTOPILOT
622-9080-004	RTA-852L	RECEIVER/TRANSMITTER/ANTENNA
622-9116-014	DSP-85B	DISPLAY SELECT PANEL
622-9116-102	DSP-85B	DISPLAY SELECT PANEL
622-9117-001	DSP-85C	DISPLAY SELECT PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9117-003	DSP-85C	DISPLAY SELECT PANEL
622-9117-004	DSP-85C	DISPLAY SELECT PANEL
622-9165-001	DCP-85H	DISPLAY CONTROL PANEL
622-9165-002	DCP-85H	DISPLAY CONTROL PANEL
622-9210-003	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-004	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-005	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-006	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-007	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-008	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-108	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-207	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-308	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-309	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-310	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-409	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9210-410	TDR-94D	TRANSPONDER, AIR TRAFFIC CONTROL
622-9221-001	HPU-74B	HSI PROCESSOR UNIT
622-9221-002	HPU-74B	HSI PROCESSOR UNIT
622-9222-001	HCP-74B	HSI CONTROL PANEL
622-9227-001	ARP-86	AIR DATA REF PANEL
622-9227-002	ARP-86	AIR DATA REF PANEL
622-9237-002	ADC-86	AIR DATA COMPUTER
622-9238-001	ALI-850B	INDICATOR, ALTIMETER
622-9238-011	ALI-850B	INDICATOR, ALTIMETER
622-9238-021	ALI-850B	INDICATOR, ALTIMETER
622-9238-022	ALI-850B	INDICATOR, ALTIMETER
622-9238-041	ALI-850B	INDICATOR, ALTIMETER
622-9238-042	ALI-850B	INDICATOR, ALTIMETER
622-9250-001	PAI-850	PRESELECTED ALTITUDE INDICATOR
622-9252-101	HPA-901	AMPLIFIER, HIGH POWER
622-9267-027	APC-65F	COMPUTER AUTOPILOT
622-9282-005	ADM-86	AIR DATA MODULE
622-9285-005	DPU-86S	DISPLAY PROCESSOR UNIT
622-9285-013	DPU-86S	DISPLAY PROCESSOR UNIT
622-9285-014	DPU-86S	DISPLAY PROCESSOR UNIT
622-9286-005	MPU-86S	MULTIFUNCTIONAL PROCESSOR UNIT
622-9286-013	MPU-86S	MULTIFUNCTIONAL PROCESSOR UNIT
622-9286-014	MPU-86S	MULTIFUNCTIONAL PROCESSOR UNIT
622-9288-006	TTC-920A	TRANSPONDER, TCAS CONTROL
622-9288-007	TTC-920A	TRANSPONDER, TCAS CONTROL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9292-001	ARP-850	AIR DATA REF PANEL
622-9301-003	RTA-842	RECEIVER/TRANSMITTER/ANTENNA
622-9301-004	RTA-842	RECEIVER/TRANSMITTER/ANTENNA
622-9301-011	RTA-842	RECEIVER/TRANSMITTER/ANTENNA
622-9302-003	RTA-844	RECEIVER/TRANSMITTER/ANTENNA
622-9302-004	RTA-844	RECEIVER/TRANSMITTER/ANTENNA
622-9302-011	RTA-844	RECEIVER/TRANSMITTER/ANTENNA
622-9303-003	RTA-848	RECEIVER/TRANSMITTER/ANTENNA
622-9303-004	RTA-848	RECEIVER/TRANSMITTER/ANTENNA
622-9304-003	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9304-004	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9304-013	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9304-014	WXP-840A	WEATHER RADAR CONTROL PANEL
622-9305-013	WXP-840B	WEATHER RADAR CONTROL PANEL
622-9336-001	AHC-85E	ATTITUDE HEADING COMPUTER
622-9336-002	AHC-85E	ATTITUDE HEADING COMPUTER
622-9336-003	AHC-85E	ATTITUDE HEADING COMPUTER
622-9336-400	AHC-85E	ATTITUDE HEADING COMPUTER
622-9337-001	CDC-850B	CONTROL DISPLAY COUPLER
622-9338-001	FMC-851B	FLIGHT MANAGEMENT COMPUTER
622-9339-001	FMC-852B	FLIGHT MANAGEMENT COMPUTER
622-9343-102	IOC-851A	IN/OUT CONCENTRATOR
622-9343-104	IOC-851A	IN/OUT CONCENTRATOR
622-9343-105	IOC-851A	IN/OUT CONCENTRATOR
622-9343-106	IOC-851A	IN/OUT CONCENTRATOR
622-9343-116	IOC-851A	IN/OUT CONCENTRATOR
622-9343-204	IOC-851A	IN/OUT CONCENTRATOR
622-9343-205	IOC-851A	IN/OUT CONCENTRATOR
622-9343-206	IOC-851A	IN/OUT CONCENTRATOR
622-9343-220	IOC-851A	IN/OUT CONCENTRATOR
622-9343-221	IOC-851A	IN/OUT CONCENTRATOR
622-9343-222	IOC-851A	IN/OUT CONCENTRATOR
622-9343-223	IOC-851A	IN/OUT CONCENTRATOR
622-9343-234	IOC-851A	IN/OUT CONCENTRATOR
622-9343-401	IOC-851A	IN/OUT CONCENTRATOR
622-9344-001	DAU-650	DATA ACQUISITION UNIT
622-9345-021	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-025	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-026	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9345-027	EFD-871	ELECTRONIC FLIGHT DISPLAY

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9345-203	EFD-871	ELECTRONIC FLIGHT DISPLAY
622-9346-012	RTU-870A	RADIO TUNING UNIT
622-9346-013	RTU-870A	RADIO TUNING UNIT
622-9346-022	RTU-870A	RADIO TUNING UNIT
622-9346-023	RTU-870A	RADIO TUNING UNIT
622-9347-001	SDD-640A	SENSOR DISPLAY DRIVER
622-9352-003	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-004	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-005	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-006	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-007	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-008	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9352-409	TDR-94	TRANSPONDER, AIR TRAFFIC CONTROL
622-9353-011	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-021	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-023	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-113	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-121	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-125	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-213	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-223	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-225	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-413	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-423	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-425	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9353-623	TVI-920	TCAS VERTICAL SPEED INDICATOR
622-9377-001	ATC-850	AUTOMATIC TRIM COUPLER
622-9434-026	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-035	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-037	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-211	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9434-213	MFD-871	MULTI-FUNCTIONAL DISPLAY
622-9435-001	CHP-850A	COURSE HEADING PANEL
622-9436-101	EFIP-701E	ELECTRONIC FLIGHT INSTRUMENT PROCESSOR
622-9462-004	PRE-80C	PRESELECT OR ALERTER
622-9462-005	PRE-80C	PRESELECT OR ALERTER
622-9462-016	PRE-80C	PRESELECT OR ALERTER
622-9462-024	PRE-80C	PRESELECT OR ALERTER
622-9462-025	PRE-80C	PRESELECT OR ALERTER
622-9462-035	PRE-80C	PRESELECT OR ALERTER
622-9462-036	PRE-80C	PRESELECT OR ALERTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9500-002	ARP-851	AIR DATA REF PANEL
622-9500-011	ARP-851	AIR DATA REF PANEL
622-9575-001	ATC-81	AUTOMATIC TRIM COUPLER
622-9576-002	CDU-860	CONTROL DISPLAY UNIT
622-9576-011	CDU-860	CONTROL DISPLAY UNIT
622-9578-001	CDU-851	CONTROL DISPLAY UNIT
622-9614-001	CTL-92T	CONTROL, TCAS
622-9614-009	CTL-92T	CONTROL, TCAS
622-9614-011	CTL-92T	CONTROL, TCAS
622-9614-013	CTL-92T	CONTROL, TCAS
622-9614-101	CTL-92T	CONTROL, TCAS
622-9614-109	CTL-92T	CONTROL, TCAS
622-9614-110	CTL-92T	CONTROL, TCAS
622-9614-111	CTL-92T	CONTROL, TCAS
622-9614-112	CTL-92T	CONTROL, TCAS
622-9614-113	CTL-92T	CONTROL, TCAS
622-9614-115	CTL-92T	CONTROL, TCAS
622-9614-116	CTL-92T	CONTROL, TCAS
622-9627-005	FYD-65	FLIGHT DIRECTOR YAW DAMPER
622-9627-017	FYD-65	FLIGHT DIRECTOR YAW DAMPER
622-9627-105	FYD-65	FLIGHT DIRECTOR YAW DAMPER
622-9679-001	DBU-4001	DATA BASE UNIT
622-9681-001	EFD-84	ELECTRONIC FLIGHT DISPLAY
622-9681-101	EFD-84	ELECTRONIC FLIGHT DISPLAY
622-9682-002	DPU-84	DISPLAY PROCESSOR UNIT
622-9682-004	DPU-84	DISPLAY PROCESSOR UNIT
622-9683-001	DSP-84	DISPLAY SELECT PANEL
622-9683-011	DSP-84	DISPLAY SELECT PANEL
622-9683-111	DSP-84	DISPLAY SELECT PANEL
622-9683-113	DSP-84	DISPLAY SELECT PANEL
622-9684-002	MPU-84	MULTIFUNCTION PROCESSOR UNIT
622-9684-004	MPU-84	MULTIFUNCTION PROCESSOR UNIT
622-9722-005	PRE-80D	PRESELECT OR ALERTER
622-9722-035	PRE-80D	PRESELECT OR ALERTER
622-9724-005	APC-65H	COMPUTER AUTOPILOT
622-9724-015	APC-65H	COMPUTER AUTOPILOT
622-9724-017	APC-65H	COMPUTER AUTOPILOT
622-9724-028	APC-65H	COMPUTER AUTOPILOT
622-9724-030	APC-65H	COMPUTER AUTOPILOT
622-9724-105	APC-65H	COMPUTER AUTOPILOT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9724-130	APC-65H	COMPUTER AUTOPILOT
622-9724-143	APC-65H	COMPUTER AUTOPILOT
622-9724-205	APC-65H	COMPUTER AUTOPILOT
622-9724-215	APC-65H	COMPUTER AUTOPILOT
622-9724-217	APC-65H	COMPUTER AUTOPILOT
622-9724-228	APC-65H	COMPUTER AUTOPILOT
622-9724-241	APC-65H	COMPUTER AUTOPILOT
622-9728-122	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-124	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-125	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-214	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-215	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-223	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-224	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-311	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-312	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-313	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-314	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-315	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-316	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-322	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-323	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-324	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-325	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-326	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-413	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-416	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-423	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-424	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-425	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9728-426	TVI-920D	TCAS VERTICAL SPEED INDICATOR
622-9732-001	SIA-850	SIGNAL INTERFACE ADAPTER
622-9732-002	SIA-850	SIGNAL INTERFACE ADAPTER
622-9732-003	SIA-850	SIGNAL INTERFACE ADAPTER
622-9735-001	SDU-640B	SENSOR DISPLAY UNIT
622-9735-002	SDU-640B	SENSOR DISPLAY UNIT
622-9738-020	ILS-720	NAVIGATION RECEIVER
622-9738-041	ILS-720	NAVIGATION RECEIVER
622-9738-220	ILS-720	NAVIGATION RECEIVER
622-9785-032	APC-65J	COMPUTER AUTOPILOT
622-9785-232	APC-65J	COMPUTER AUTOPILOT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9785-432	APC-65J	COMPUTER AUTOPILOT
622-9785-436	APC-65J	COMPUTER AUTOPILOT
622-9810-008	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-010	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-012	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-016	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-202	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-204	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-300	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-302	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-304	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9810-306	EFD-4076	ELECTRONIC FLIGHT DISPLAY
622-9812-002	DCP-4000	DISPLAY CONTROL PANEL
622-9812-006	DCP-4000	DISPLAY CONTROL PANEL
622-9812-008	DCP-4000	DISPLAY CONTROL PANEL
622-9812-010	DCP-4000	DISPLAY CONTROL PANEL
622-9812-012	DCP-4000	DISPLAY CONTROL PANEL
622-9812-102	DCP-4000	DISPLAY CONTROL PANEL
622-9812-204	DCP-4000	DISPLAY CONTROL PANEL
622-9812-206	DCP-4000	DISPLAY CONTROL PANEL
622-9814-004	IOC-4000	IN/OUT CONCENTRATOR
622-9814-005	IOC-4000	IN/OUT CONCENTRATOR
622-9814-008	IOC-4000	IN/OUT CONCENTRATOR
622-9814-009	IOC-4000	IN/OUT CONCENTRATOR
622-9814-010	IOC-4000	IN/OUT CONCENTRATOR
622-9814-106	IOC-4000	IN/OUT CONCENTRATOR
622-9814-107	IOC-4000	IN/OUT CONCENTRATOR
622-9814-108	IOC-4000	IN/OUT CONCENTRATOR
622-9814-301	IOC-4000	IN/OUT CONCENTRATOR
622-9814-302	IOC-4000	IN/OUT CONCENTRATOR
622-9814-303	IOC-4000	IN/OUT CONCENTRATOR
622-9814-312	IOC-4000	IN/OUT CONCENTRATOR
622-9814-313	IOC-4000	IN/OUT CONCENTRATOR
622-9814-322	IOC-4000	IN/OUT CONCENTRATOR
622-9814-332	IOC-4000	IN/OUT CONCENTRATOR
622-9814-511	IOC-4000	IN/OUT CONCENTRATOR
622-9814-513	IOC-4000	IN/OUT CONCENTRATOR
622-9814-514	IOC-4000	IN/OUT CONCENTRATOR
622-9814-515	IOC-4000	IN/OUT CONCENTRATOR
622-9814-603	IOC-4000	IN/OUT CONCENTRATOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9814-605	IOC-4000	IN/OUT CONCENTRATOR
622-9814-607	IOC-4000	IN/OUT CONCENTRATOR
622-9814-631	IOC-4000	IN/OUT CONCENTRATOR
622-9814-632	IOC-4000	IN/OUT CONCENTRATOR
622-9814-634	IOC-4100	IN/OUT CONCENTRATOR
622-9814-635	IOC-4100	IN/OUT CONCENTRATOR
622-9814-651	IOC-4000	IN/OUT CONCENTRATOR
622-9814-652	IOC-4000	IN/OUT CONCENTRATOR
622-9814-702	IOC-4000	IN/OUT CONCENTRATOR
622-9814-704	IOC-4000	IN/OUT CONCENTRATOR
622-9814-705	IOC-4000	IN/OUT CONCENTRATOR
622-9814-715	IOC-4000	IN/OUT CONCENTRATOR
622-9814-716	IOC-4000	IN/OUT CONCENTRATOR
622-9814-717	IOC-4000	IN/OUT CONCENTRATOR
622-9814-730	IOC-4000	IN/OUT CONCENTRATOR
622-9814-802	IOC-4000	IN/OUT CONCENTRATOR
622-9814-803	IOC-4000	IN/OUT CONCENTRATOR
622-9814-804	IOC-4000	IN/OUT CONCENTRATOR
622-9815-037	FCC-4000	FLIGHT CONTROL COMPUTER
622-9815-604	FCC-4000	FLIGHT CONTROL COMPUTER
622-9815-704	FCC-4000	FLIGHT CONTROL COMPUTER
622-9815-904	FCC-4000	FLIGHT CONTROL COMPUTER
622-9817-001	ATC-4000	AUTOMATIC TRIM COUPLER
622-9818-005	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-006	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-020	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-120	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-122	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-211	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-212	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-213	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-403	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-404	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-405	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-610	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-652	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-653	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9818-751	MDC-4000	MAINTENANCE DIAGNOSTIC COMPUTER
622-9819-006	ARP-4000	AIR DATA REF PANEL
622-9819-104	ARP-4000	AIR DATA REF PANEL
622-9819-106	ARP-4000	AIR DATA REF PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9819-204	ARP-4000	AIR DATA REF PANEL
622-9820-004	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-005	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-006	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-008	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-009	DCU-4000	DATA CONCENTRATOR UNIT
622-9820-010	DCU-4000	DATA CONCENTRATOR UNIT
622-9821-002	ECP-4000	EICAS CONTROL PANEL
622-9822-001	LDU-4000	LAMP DRIVER UNIT
622-9849-011	MFD-85C	MULTI-FUNCTIONAL DISPLAY
622-9849-012	MFD-85C	MULTI-FUNCTIONAL DISPLAY
622-9851-001	CTL-23	CONTROL, VHF COMMUNICATION
622-9851-002	CTL-23	CONTROL, VHF COMMUNICATION
622-9851-003	CTL-23	CONTROL, VHF COMMUNICATION
622-9852-106	RTU-4000	RADIO TUNING UNIT
622-9852-108	RTU-4000	RADIO TUNING UNIT
622-9852-122	RTU-4000	RADIO TUNING UNIT
622-9852-124	RTU-4000	RADIO TUNING UNIT
622-9852-208	RTU-4000	RADIO TUNING UNIT
622-9852-224	RTU-4000	RADIO TUNING UNIT
622-9856-102	RTU-870T	RADIO TUNING UNIT
622-9856-111	RTU-870T	RADIO TUNING UNIT
622-9856-122	RTU-870T	RADIO TUNING UNIT
622-9856-142	RTU-870T	RADIO TUNING UNIT
622-9856-151	RTU-870T	RADIO TUNING UNIT
622-9865-001	DBU-4000	DATA BASE UNIT
622-9865-002	DBU-4000	DATA BASE UNIT
622-9884-001	SIU-80	SIGNAL INTERFACE ADAPTER
622-9884-002	SIU-80	SIGNAL INTERFACE ADAPTER
622-9890-001	CEU-85A	CHECKLIST ENTRY UNIT
622-9924-002	CDC-850C	CONTROL DISPLAY COUPLER
622-9924-101	CDC-850C	CONTROL DISPLAY COUPLER
622-9925-002	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-202	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-205	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-220	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-221	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9925-250	FMC-851C	FLIGHT MANAGEMENT COMPUTER
622-9926-002	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-101	FMC-852C	FLIGHT MANAGEMENT COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9926-205	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-207	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-220	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-221	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9926-250	FMC-852C	FLIGHT MANAGEMENT COMPUTER
622-9929-002	WXP-4120	CONTROL, WEATHER RADAR PANEL
622-9932-002	WXP-4220	CONTROL, WEATHER RADAR PANEL
622-9945-001	PWR-4000	POWER SUPPLY
622-9945-003	PWR-4000	POWER SUPPLY
622-9945-020	PWR-4000	POWER SUPPLY
622-9945-021	PWR-4000	POWER SUPPLY
622-9945-022	PWR-4000	POWER SUPPLY
622-9968-001	SVL-4000	LINEAR ACTUATOR
622-9968-002	SVL-4000	LINEAR ACTUATOR
622-9968-003	SVL-4000	LINEAR ACTUATOR
622-9968-101	SVL-4000	LINEAR ACTUATOR
622-9968-102	SVL-4000	LINEAR ACTUATOR
622-9978-024	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-026	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-104	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-106	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-110	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-114	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-118	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-120	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-122	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-126	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-128	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-130	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-304	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-306	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-308	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-310	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-312	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-314	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-402	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-406	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-408	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9978-410	EFD-4077	ELECTRONIC FLIGHT DISPLAY
622-9983-002	ARP-4001	AIR DATA REF PANEL
622-9987-002	DCP-4001	DISPLAY CONTROL PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
622-9988-004	DCU-4001	DATA CONCENTRATOR UNIT
622-9988-006	DCU-4001	DATA CONCENTRATOR UNIT
622-9989-002	ECP-4001	EICAS CONTROL PANEL
622-9992-002	FCP-4001	FLIGHT CONTROL PANEL
622-9992-004	FCP-4001	FLIGHT CONTROL PANEL
622-9995-001	ICC-4001	INTEGRATED CARD CAGE
622-9996-002	INC-4000	INCLINOMETER
629-8654-001	ART.MON.	ARTHUR MONITOR
685-0350-002	HF-9041	COUP PRESSURIZED HF
685-0350-020	HF-9041	ANTENNA COUPLER
772-5005-005	329B-8J	FLIGHT DIRECTOR INDICATOR
772-5025-001	331A-8A	INDICATOR, HORIZONTAL SITUATION
772-5130-001	562A-5M	FLIGHT COMPUTER
772-5130-003	562A-5M	FLIGHT COMPUTER
772-5130-004	562A-5M	FLIGHT COMPUTER
772-5130-009	562A5M	FLIGHT COMPUTER
772-5130-015	562A5M	FLIGHT COMPUTER
772-5131-003	562C4A	FLIGHT COMPUTER AMPLIFIER
772-5131-004	562C4A	FLIGHT COMPUTER AMPLIFIER
772-5131-008	562C4A	FLIGHT COMPUTER AMPLIFIER
772-5131-011	562C4A	FLIGHT COMPUTER AMPLIFIER
772-5131-013	562C4A	FLIGHT COMPUTER AMPLIFIER
772-5131-017	562C4A	FLIGHT COMPUTER AMPLIFIER
772-5131-018	562C-4A	FLIGHT COMPUTER AMPLIFIER
772-5131-019	562C4A	FLIGHT COMPUTER AMPLIFIER
772-5132-001	161E2	COUPLER
772-5140-001	345A-7	RATE GYRO
772-5140-002	345A-7	RATE GYRO
772-5370-001	331A8G	HORIZONTAL SITUATION INDICATOR
772-5370-003	331A8G	HORIZONTAL SITUATION INDICATOR
772-5374-001	334C-3B	SERVO
772-5472-001	334C3C	SERVO
777-1061-001	334C6	SERVO
777-1062-001	351B-6	CAPSTAN
777-1083-002	331A-8D	HORIZONTAL SITUATION INDICATOR
777-1083-007	331A-8D	HORIZONTAL SITUATION INDICATOR
777-1224-001	329B8G	FLIGHT DIRECTOR INDICATOR
777-1328-001	180R-17	ANTENNA COUPLER
777-1329-001	309A-17	CONTROL, ANTENNA COUPLER
777-1397-004	331A-8K	INDICATOR, HSI

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
777-1492-001	51Y7	RECEIVER, ADF
777-1492-003	51Y-7	RECEIVER, ADF
777-1492-004	51Y-7	RECEIVER, ADF
777-1492-005	51Y-7	RECEIVER, ADF
777-1555-001	332E-5	GYRO, DIRECTIONAL
777-1556-001	328A-5	AMPLIFIER, COMPASS
777-1825-001	331A-8L	INDICATOR, HSI
777-1825-002	331A-8L	INDICATOR, HSI
787-6173-016	ADI-84	ATTITUDE DIRECTOR INDICATOR
787-6173-217	ADI-84	ATTITUDE DIRECTOR INDICATOR
787-6211-001	621A-6	TRANSPONDER ATC
787-6211-002	621A6	TRANSPONDER ATC
787-6211-003	621A-6	TRANSPONDER ATC
787-6371-001	490R4A	ANTENNA COUPLER
787-6385-002	331A-6P	INDICATOR, COURSE
787-6385-005	331A-6P	INDICATOR, COURSE
787-6781-001	548S-3	AMPLIFIER COUPLER
787-6781-004	548S3	AMPLIFIER COUPLER
787-6934-002	671U-4A	HF RECEIVER-EXCITER
787-6934-004	671U-4A	HF RECEIVER-EXCITER
787-6934-007	671U-4A	HF RECEIVER-EXCITER
792-6091-001	331A-9G	COURSE INDICATOR
792-6091-005	331A-9G	COURSE INDICATOR
792-6091-009	331A-9G	COURSE INDICATOR
792-6091-011	331A-9G	COURSE INDICATOR
792-6091-012	331A-9G	COURSE INDICATOR
792-6091-013	331A-9G	COURSE INDICATOR
792-6091-015	331A-9G	COURSE INDICATOR
792-6091-016	331A-9G	COURSE INDICATOR
792-6091-019	331A-9G	COURSE INDICATOR
792-6122-004	514A4	CONTROL RADIO SET
792-6134-001	323A-3G-1	COMPENSATOR
792-6140-001	490S-1	ANTENNA COUPLER
792-6216-001	51Y-7A	RECEIVER, ADF
792-6216-002	51Y-7A	RECEIVER, ADF
792-6216-003	51Y-7A	RECEIVER, ADF
792-6216-004	51Y-7A	RECEIVER, ADF
792-6221-001	614E-22B	REMOTE SINGLE CRS, 5V
792-6221-004	614E-22B	REMOTE SINGLE CRS, 5V, GRAY
792-6255-001	161E-2A	MODE COUPLER
792-6275-002	614L-13	CONTROL ADF

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
792-6275-005	614L-13	CONTROL ADF
792-6275-007	614L-13	CONTROL ADF
792-6348-001	614E-5A	AUTOPILOT CONTROLLER
792-6348-002	614E-5A	AUTOPILOT CONTROLLER
792-6348-003	614E-5A	AUTOPILOT CONTROLLER
792-6348-004	614E-5A	AUTOPILOT CONTROLLER
792-6355-001	329B-7R	3-D FLIGHT DIRECTOR INDICATOR
792-6355-003	329B-7R	3-D FLIGHT DIRECTOR INDICATOR
792-6356-002	331A-6R	INDICATOR, COURSE
792-6356-003	331A-6R	INDICATOR, COURSE
792-6357-002	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-006	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-007	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-008	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6357-011	329B-8Y	INDICATOR, HORIZ DIRECTOR
792-6484-001	614E4B	CONTROLLER AUTO
792-6657-001	VHF20	COMMUNICATIONS TRANSCEIVER, VHF
792-6657-003	VHF20	COMMUNICATIONS TRANSCEIVER, VHF
792-6657-004	VHF20	COMMUNICATIONS TRANSCEIVER, VHF
792-6672-008	590A-3H	CONTROL, AIR DATA
792-6694-001	332D-11A	VERTICAL GY
792-6703-001	562A-5M5	FLIGHT COMPUTER
792-6780-001	334C-6A	PRIMARY SERVO
792-6781-001	334C-6B	PRIMARY SERVO
792-6783-001	351B-7B	SERVO MOUNT
792-6784-001	351B-6A	SERVO MOUNT
792-6785-001	351B-6B	SERVO MOUNT
792-6972-001	334C-6C	PRIMARY SERVO
792-6974-001	351B-7C	SERVO MOUNT
822-0002-003	RTU-4010	RADIO TUNING UNIT
822-0002-006	RTU-4010	RADIO TUNING UNIT
822-0002-110	RTU-4010	RADIO TUNING UNIT
822-0002-120	RTU-4010	RADIO TUNING UNIT
822-0002-122	RTU-4010	RADIO TUNING UNIT
822-0002-128	RTU-4010	RADIO TUNING UNIT
822-0002-210	RTU-4010	RADIO TUNING UNIT
822-0002-222	RTU-4010	RADIO TUNING UNIT
822-0006-103	AFDC-770	ADAPTIVE FLIGHT DISPLAY
822-0006-104	AFDC-770	ADAPTIVE FLIGHT DISPLAY
822-0014-004	DBU-4100	DATA BASE UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0014-102	DBU-4100	DATA BASE UNIT, GRAY
822-0014-103	DBU-4100	DATA BASE UNIT, BK
822-0014-104	DBU-4100	DATA BASE UNIT
822-0021-102	CDU-4100	CONTROL DISPLAY UNIT
822-0021-104	CDU-4100	CONTROL DISPLAY UNIT
822-0021-202	CDU-4100	CONTROL DISPLAY UNIT
822-0021-204	CDU-4100	CONTROL DISPLAY UNIT
822-0022-004	FMC-4100	FLIGHT MANAGEMENT COMPUTER
822-0022-006	FMC-4100	FLIGHT MANAGEMENT COMPUTER
822-0044-001	FCP-4002	FLIGHT CONTROL PANEL
822-0049-002	CSU-4000	CONFIGURATION STRAPPING UNIT
822-0074-006	RTU-4020	RADIO TUNING UNIT
822-0074-008	RTU-4020	RADIO TUNING UNIT
822-0074-010	RTU-4020	RADIO TUNING UNIT
822-0074-102	RTU-4020	RADIO TUNING UNIT
822-0074-104	RTU-4020	RADIO TUNING UNIT
822-0074-204	RTU-4020	RADIO TUNING UNIT
822-0074-210	RTU-4020	RADIO TUNING UNIT
822-0078-003	TTC-920G	TRANSPONDER, TCAS CONTROL
822-0078-005	TTC-920G	TRANSPONDER, TCAS CONTROL
822-0089-001	FL-9002	ADAPTER, ANTENNA
822-0101-001	HF-9031A	RECEIVER/TRANSMITTER
822-0101-002	HF-9031A	RECEIVER/TRANSMITTER
822-0102-001	HF-9034A	RECEIVER/TRANSMITTER
822-0175-002	FCC-86G	FLIGHT CONTROL COMPUTER
822-0175-019	FCC-86G	FLIGHT CONTROL COMPUTER
822-0179-002	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-003	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-013	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-014	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-201	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-202	DCU-4002	DATA CONCENTRATOR UNIT
822-0179-203	DCU-4002	DATA CONCENTRATOR UNIT
822-0180-002	ECP-4003	EICAS CONTROL PANEL
822-0180-102	ECP-4003	EICAS CONTROL PANEL
822-0182-001	FCP-4003	FLIGHT CONTROL PANEL
822-0182-101	FCP-4003	FLIGHT CONTROL PANEL
822-0195-102	MCP-770	MODE CONTROL PANEL
822-0198-001	ICC-4004	INTEGRATED CARD CAGE
822-0201-001	ICC-4005	INTEGRATED CARD CAGE
822-0201-002	ICC-4005	INTEGRATED CARD CAGE

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0259-001	SMT-87A	SERVO, MOUNT
822-0260-001	SMT-87B	SERVO, MOUNT
822-0269-001	ICC-851A	INTEGRATED CARD CAGE
822-0271-001	AIU-4000	AUDIO INTERFACE UNIT
822-0273-002	RSP-4000	REVERSIONARY SWITCHING PANEL
822-0273-004	RSP-4000	REVERSIONARY SWITCHING PANEL
822-0273-006	RSP-4000	REVERSIONARY SWITCHING PANEL
822-0282-002	ILS-700A	RECEIVER, ILS
822-0282-102	ILS-700A	RECEIVER, ILS
822-0282-120	ILS-700A	RECEIVER, ILS
822-0287-101	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-201	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-401	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-501	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-502	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-701	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-702	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-801	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0287-802	LHP-4000	LIGHTNING HIRF PROTECTOR
822-0288-001	IEC-4000	IAPS ENVIRONMENTAL CONTROLLER
822-0288-002	IEC-4000	IAPS ENVIRONMENTAL CONTROLLER
822-0297-001	VOR-900	RECEIVER, NAVIGATION
822-0297-020	VOR-900	RECEIVER, NAVIGATION
822-0298-001	ILS-900	NAVIGATION RECEIVER
822-0298-020	ILS-900	NAVIGATION RECEIVER
822-0299-001	ADF-900	RECEIVER, ADF
822-0299-020	ADF-900	RECEIVER, ADF
822-0312-101	SDU-906-4	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-101	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-102	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-150	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-151	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-303	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0314-350	SDU-906-6	SATELLITE COMMUNICATIONS DATA UNIT
822-0319-001	WXA-85	WEATHER RADAR ADAPTER
822-0320-001	DAU-4000	DATA ACQUISITION UNIT
822-0320-003	DAU-4000	DATA ACQUISITION UNIT
822-0320-011	DAU-4000	DATA ACQUISITION UNIT
822-0321-002	DCP-4002	DISPLAY CONTROL PANEL
822-0321-006	DCP-4002	DISPLAY CONTROL PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0323-002	VHF-900	COMMUNICATIONS TRANSCEIVER, VHF
822-0323-020	VHF-900	COMMUNICATIONS TRANSCEIVER, VHF
822-0326-002	ARP-4002	AIR DATA REF PANEL
822-0326-102	ARP-4002	AIR DATA REF PANEL
822-0327-024	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-034	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-124	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-134	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-408	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-508	FCC-4002	FLIGHT CONTROL COMPUTER
822-0327-608	FCC-4002	FLIGHT CONTROL COMPUTER
822-0328-002	AAP-851	ALTITUDE AWARENESS PANEL
822-0328-004	AAP-851	ALTITUDE AWARENESS PANEL
822-0328-011	AAP-851	ALTITUDE AWARENESS PANEL
822-0329-001	DME-900	DISTANCE MEASURING EQPT
822-0329-020	DME-900	DISTANCE MEASURING EQPT
822-0329-021	DME-900	DISTANCE MEASURING EQPT
822-0330-001	HFS-900	RECEIVER/TRANSMITTER
822-0330-020	HFS-900	RECEIVER/TRANSMITTER
822-0332-101	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-201	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-401	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-501	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-701	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-702	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-801	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0332-802	LHP-4001	LIGHTNING HIRF PROTECTOR
822-0333-001	IEC-4001	IAPS ENVIRONMENTAL CONTROLLER
822-0334-002	LRA-900	RADIO ALTIMETER
822-0334-003	LRA-900	RADIO ALTIMETER
822-0334-020	LRA-900	RADIO ALTIMETER
822-0336-001	TPR-900	TRANSPONDER
822-0336-020	TPR-900	TRANSPONDER
822-0370-123	ADC-85A	AIR DATA COMPUTER
822-0370-404	ADC-85A	AIR DATA COMPUTER
822-0370-408	ADC-85A	AIR DATA COMPUTER
822-0370-425	ADC-85A	AIR DATA COMPUTER
822-0370-426	ADC-85A	AIR DATA COMPUTER
822-0370-451	ADC-85A	AIR DATA COMPUTER
822-0370-460	ADC-85A	AIR DATA COMPUTER
822-0370-461	ADC-85A	AIR DATA COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0370-462	ADC-85A	AIR DATA COMPUTER
822-0370-472	ADC-85A	AIR DATA COMPUTER
822-0371-165	ADC-86A	AIR DATA COMPUTER
822-0371-403	ADC-86A	AIR DATA COMPUTER
822-0371-405	ADC-86A	AIR DATA COMPUTER
822-0372-143	ADC-850A	AIR DATA COMPUTER
822-0372-145	ADC-850A	AIR DATA COMPUTER
822-0372-154	ADC-850A	AIR DATA COMPUTER
822-0372-162	ADC-850A	AIR DATA COMPUTER
822-0372-351	ADC-850A	AIR DATA COMPUTER
822-0372-354	ADC-850A	AIR DATA COMPUTER
822-0372-362	ADC-850A	AIR DATA COMPUTER
822-0372-416	ADC-850A	AIR DATA COMPUTER
822-0372-436	ADC-850A	AIR DATA COMPUTER
822-0372-445	ADC-850A	AIR DATA COMPUTER
822-0372-497	ADC-850A	AIR DATA COMPUTER
822-0372-636	ADC-850A	AIR DATA COMPUTER
822-0372-645	ADC-850A	AIR DATA COMPUTER
822-0372-697	ADC-850A	AIR DATA COMPUTER
822-0373-520	ADC-850B	AIR DATA COMPUTER
822-0374-134	ADC-850C	AIR DATA COMPUTER
822-0374-410	ADC-850C	AIR DATA COMPUTER
822-0374-412	ADC-850C	AIR DATA COMPUTER
822-0374-419	ADC-850C	AIR DATA COMPUTER
822-0374-437	ADC-850C	AIR DATA COMPUTER
822-0374-439	ADC-850C	AIR DATA COMPUTER
822-0374-440	ADC-850C	AIR DATA COMPUTER
822-0374-447	ADC-850C	AIR DATA COMPUTER
822-0374-454	ADC-850C	AIR DATA COMPUTER
822-0374-457	ADC-850C	AIR DATA COMPUTER
822-0374-463	ADC-850C	AIR DATA COMPUTER
822-0374-640	ADC-850C	AIR DATA COMPUTER
822-0374-647	ADC-850C	AIR DATA COMPUTER
822-0374-657	ADC-850C	AIR DATA COMPUTER
822-0385-002	FCP-4004	FLIGHT CONTROL PANEL
822-0386-002	FMC-4050	FLIGHT MANAGEMENT COMPUTER
822-0389-109	ADC-850D	AIR DATA COMPUTER
822-0389-118	ADC-850D	AIR DATA COMPUTER
822-0389-129	ADC-850D	AIR DATA COMPUTER
822-0389-133	ADC-850D	AIR DATA COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0389-433	ADC-850D	AIR DATA COMPUTER
822-0389-450	ADC-850D	AIR DATA COMPUTER
822-0389-468	ADC-850D	AIR DATA COMPUTER
822-0389-629	ADC-850D	AIR DATA COMPUTER
822-0389-633	ADC-850D	AIR DATA COMPUTER
822-0389-634	ADC-850D	AIR DATA COMPUTER
822-0393-001	VIR-433	NAVIGATION RECEIVER
822-0407-101	BCA-770	ACTUATOR, BACKDRIVE
822-0408-201	FPI-9330	INDICATOR, STANDBY
822-0409-201	FPI-9331	INDICATOR, STANDBY
822-0416-001	IND-270A	INDICATOR, WEATHER RADAR
822-0450-001	ICC-4006	INTEGRATED CARD CAGE
822-0592-407	FCC-850A	FLIGHT CONTROL COMPUTER
822-0612-111	FCC-4003	FLIGHT CONTROL COMPUTER
822-0615-001	ALT-4000	ALTIMETER
822-0615-002	ALT-4000	ALTIMETER
822-0615-003	ALT-4000	ALTIMETER
822-0615-101	ALT-4000	ALTIMETER
822-0615-102	ALT-4000	ALTIMETER
822-0615-111	ALT-4000	ALTIMETER
822-0615-125	ALT-4000	ALTIMETER
822-0615-202	ALT-4000	ALTIMETER
822-0615-205	ALT-4000	ALTIMETER
822-0615-206	ALT-4000	ALTIMETER
822-0615-207	ALT-4000	ALTIMETER
822-0615-226	ALT-4000	ALTIMETER
822-0615-305	ALT-4000	ALTIMETER
822-0615-306	ALT-4000	ALTIMETER
822-0615-312	ALT-4000	ALTIMETER
822-0615-315	ALT-4000	ALTIMETER
822-0615-316	ALT-4000	ALTIMETER
822-0666-003	DLM-900	DATA LINK MANAGEMENT UNIT
822-0668-001	RTU-4200	RADIO TUNING UNIT
822-0668-011	RTU-4200	RADIO TUNING UNIT
822-0668-012	RTU-4200	RADIO TUNING UNIT
822-0668-031	RTU-4200	RADIO TUNING UNIT
822-0668-101	RTU-4200	RADIO TUNING UNIT
822-0668-111	RTU-4200	RADIO TUNING UNIT
822-0668-131	RTU-4200	RADIO TUNING UNIT
822-0668-251	RTU-4200	RADIO TUNING UNIT
822-0668-261	RTU-4200	RADIO TUNING UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0668-262	RTU-4200	RADIO TUNING UNIT
822-0693-003	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0693-004	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0693-020	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0693-120	VHF-700A	COMMUNICATIONS TRANSCEIVER, VHF
822-0726-002	VOR-700A	RECEIVER, VOR
822-0726-020	VOR-700A	RECEIVER, VOR
822-0726-103	VOR-700A	RECEIVER, VOR
822-0726-120	VOR-700A	RECEIVER, VOR
822-0730-131	RTU-4220	RADIO TUNING UNIT
822-0730-132	RTU-4220	RADIO TUNING UNIT
822-0730-202	RTU-4220	RADIO TUNING UNIT
822-0730-214	RTU-4220	RADIO TUNING UNIT
822-0730-224	RTU-4220	RADIO TUNING UNIT
822-0730-234	RTU-4220	RADIO TUNING UNIT
822-0730-301	RTU-4220	RADIO TUNING UNIT
822-0730-311	RTU-4220	RADIO TUNING UNIT
822-0730-312	RTU-4220	RADIO TUNING UNIT
822-0730-314	RTU-4220	RADIO TUNING UNIT
822-0730-322	RTU-4220	RADIO TUNING UNIT
822-0730-331	RTU-4220	RADIO TUNING UNIT
822-0730-332	RTU-4220	RADIO TUNING UNIT
822-0730-333	RTU-4220	RADIO TUNING UNIT
822-0730-334	RTU-4220	RADIO TUNING UNIT
822-0730-336	RTU-4220	RADIO TUNING UNIT
822-0730-338	RTU-4220	RADIO TUNING UNIT
822-0730-434	RTU-4220	RADIO TUNING UNIT
822-0730-436	RTU-4220	RADIO TUNING UNIT
822-0730-438	RTU-4220	RADIO TUNING UNIT
822-0730-442	RTU-4220	RADIO TUNING UNIT
822-0730-461	RTU-4220	RADIO TUNING UNIT
822-0730-462	RTU-4220	RADIO TUNING UNIT
822-0730-464	RTU-4220	RADIO TUNING UNIT
822-0730-466	RTU-4220	RADIO TUNING UNIT
822-0732-101	618M-4A	TRANSCEIVER, VHF
822-0761-001	51RV-5B	RECEIVER, VOR/ILS
822-0781-001	ICC-4007	INTEGRATED CARD CAGE
822-0782-001	SSM-4000	SERVO, SWITCHING MODULE
822-0783-011	FMC-4200	FLIGHT MANAGEMENT COMPUTER
822-0783-013	FMC-4200	FLIGHT MANAGEMENT COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0783-015	FMC-4200	FLIGHT MANAGEMENT COMPUTER
822-0783-028	FMC-4200	FLIGHT MANAGEMENT COMPUTER
822-0807-029	FCC-4005	FLIGHT CONTROL COMPUTER
822-0807-112	FCC-4005	FLIGHT CONTROL COMPUTER
822-0807-129	FCC-4005	FLIGHT CONTROL COMPUTER
822-0807-203	FCC-4005	FLIGHT CONTROL COMPUTER
822-0807-229	FCC-4005	FLIGHT CONTROL COMPUTER
822-0809-030	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-210	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-310	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-410	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-510	FCC-4006	FLIGHT CONTROL COMPUTER
822-0809-710	FCC-4006	FLIGHT CONTROL COMPUTER
822-0825-001	DAU-4002	DATA ACQUISITION UNIT
822-0826-001	IMT-4077D	TRAY, MOUNT
822-0836-005	RTU-4210	RADIO TUNING UNIT
822-0836-006	RTU-4210	RADIO TUNING UNIT
822-0836-015	RTU-4210	RADIO TUNING UNIT
822-0836-016	RTU-4210	RADIO TUNING UNIT
822-0836-035	RTU-4210	RADIO TUNING UNIT
822-0836-036	RTU-4210	RADIO TUNING UNIT
822-0836-113	RTU-4210	RADIO TUNING UNIT
822-0836-114	RTU-4210	RADIO TUNING UNIT
822-0836-124	RTU-4210	RADIO TUNING UNIT
822-0836-133	RTU-4210	RADIO TUNING UNIT
822-0836-134	RTU-4210	RADIO TUNING UNIT
822-0836-203	RTU-4210	RADIO TUNING UNIT
822-0836-213	RTU-4210	RADIO TUNING UNIT
822-0836-214	RTU-4210	RADIO TUNING UNIT
822-0836-233	RTU-4210	RADIO TUNING UNIT
822-0836-234	RTU-4210	RADIO TUNING UNIT
822-0836-313	RTU-4210	RADIO TUNING UNIT
822-0836-333	RTU-4210	RADIO TUNING UNIT
822-0836-334	RTU-4210	RADIO TUNING UNIT
822-0836-434	RTU-4210	RADIO TUNING UNIT
822-0838-002	DCU-4010	DATA CONCENTRATOR UNIT
822-0838-003	DCU-4010	DATA CONCENTRATOR UNIT
822-0842-142	ADC-850E	AIR DATA COMPUTER
822-0842-421	ADC-850E	AIR DATA COMPUTER
822-0842-621	ADC-850E	AIR DATA COMPUTER
822-0842-656	ADC-850E	AIR DATA COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0845-001	ERU-4000	EICAS ROUTING UNIT
822-0845-002	ERU-4000	EICAS ROUTING UNIT
822-0867-008	CDU-6000	CONTROL DISPLAY UNIT
822-0868-021	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-026	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-028	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-029	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-030	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-031	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-039	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-040	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-041	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-044	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-046	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-047	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-051	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-055	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-057	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-060	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-069	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-071	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-073	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-081	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-083	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-085	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-087	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-089	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-090	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-091	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-094	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-095	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-109	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-110	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-111	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-112	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-113	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-114	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-116	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-117	FMC-6000	FLIGHT MANAGEMENT COMPUTER
822-0868-130	FMC-6000	FLIGHT MANAGEMENT COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0883-005	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-015	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-020	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-021	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-023	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-024	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-025	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-027	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-031	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-036	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-038	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-039	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-040	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-043	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-048	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-049	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-054	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-056	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-058	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-701	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-703	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0883-704	FMC-3000	FLIGHT MANAGEMENT COMPUTER
822-0884-112	CDU-3000	CONTROL DISPLAY UNIT
822-0884-118	CDU-3000	CONTROL DISPLAY UNIT
822-0884-161	CDU-3000	CONTROL DISPLAY UNIT
822-0884-172	CDU-3000	CONTROL DISPLAY UNIT
822-0884-191	CDU-3000	CONTROL DISPLAY UNIT
822-0884-193	CDU-3000	CONTROL DISPLAY UNIT
822-0884-364	CDU-3000	CONTROL DISPLAY UNIT
822-0884-416	CDU-3000	CONTROL DISPLAY UNIT
822-0884-420	CDU-3000	CONTROL DISPLAY UNIT
822-0884-472	CDU-3000	CONTROL DISPLAY UNIT
822-0884-491	CDU-3000	CONTROL DISPLAY UNIT
822-0884-492	CDU-3000	CONTROL DISPLAY UNIT
822-0884-493	CDU-3000	CONTROL DISPLAY UNIT
822-0884-512	CDU-3000	CONTROL DISPLAY UNIT
822-0884-602	CDU-3000	CONTROL DISPLAY UNIT
822-0884-604	CDU-3000	CONTROL DISPLAY UNIT
822-0884-662	CDU-3000	CONTROL DISPLAY UNIT
822-0891-005	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-008	FMC-5000	FLIGHT MANAGEMENT COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-0891-017	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-018	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-027	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-028	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-029	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-030	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-039	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0891-040	FMC-5000	FLIGHT MANAGEMENT COMPUTER
822-0892-002	CDU-5000	CONTROL DISPLAY UNIT
822-0892-011	CDU-5000	CONTROL DISPLAY UNIT
822-0892-019	CDU-5000	CONTROL DISPLAY UNIT
822-0916-001	IMT-4077B	TRAY, MOUNT
822-0917-001	IMT-4077C	TRAY, MOUNT
822-0923-012	RTU-4280	RADIO TUNING UNIT
822-0923-032	RTU-4280	RADIO TUNING UNIT
822-0927-001	SDD-640C	SENSOR DISPLAY DRIVER
822-0927-003	SDD-640C	SENSOR DISPLAY DRIVER
822-0931-003	GPS-4000	GPS SENSOR
822-0938-001	MCDU-901	MULTIFUNCTIONAL CONTROL DISPLAY
822-0938-011	MCDU-901	MULTIFUNCTIONAL CONTROL DISPLAY
822-0953-001	HPA-901A	AMPLIFIER, HIGH POWER
822-0953-002	HPA-901A	AMPLIFIER, HIGH POWER
822-0987-003	CPL-920D	HF ANTENNA COUPLER
822-0987-004	CPL-920D	HF ANTENNA COUPLER
822-0987-020	CPL-920D	HF ANTENNA COUPLER
822-0987-120	CPL-920D	HF ANTENNA COUPLER
822-0990-002	HFS-900D	RECEIVER/TRANSMITTER
822-0990-003	HFS-900D	RECEIVER/TRANSMITTER
822-0990-004	HFS-900D	RECEIVER/TRANSMITTER
822-0990-020	HFS-900D	RECEIVER/TRANSMITTER
822-0990-120	HFS-900D	RECEIVER/TRANSMITTER
822-0998-102	MAT-980	MAINTENANCE ACCESS TERMINAL
822-1019-113	FCC-4007	FLIGHT CONTROL COMPUTER
822-1019-213	FCC-4007	FLIGHT CONTROL COMPUTER
822-1019-313	FCC-4007	FLIGHT CONTROL COMPUTER
822-1028-002	DCP-5000	DISPLAY CONTROL PANEL
822-1028-011	DCP-5000	DISPLAY CONTROL PANEL
822-1029-001	ICC-4008	INTEGRATED CARD CAGE
822-1029-101	ICC-4008	INTEGRATED CARD CAGE
822-1033-100	EAP-703	ENGINE & ALERT PROCESSOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1036-411	ADC-850F	AIR DATA COMPUTER
822-1036-423	ADC-850F	AIR DATA COMPUTER
822-1036-424	ADC-850F	AIR DATA COMPUTER
822-1036-438	ADC-850F	AIR DATA COMPUTER
822-1036-441	ADC-850F	AIR DATA COMPUTER
822-1036-442	ADC-850F	AIR DATA COMPUTER
822-1036-466	ADC-850F	AIR DATA COMPUTER
822-1036-467	ADC-850F	AIR DATA COMPUTER
822-1036-611	ADC-850F	AIR DATA COMPUTER
822-1036-641	ADC-850F	AIR DATA COMPUTER
822-1036-642	ADC-850F	AIR DATA COMPUTER
822-1036-666	ADC-850F	AIR DATA COMPUTER
822-1036-667	ADC-850F	AIR DATA COMPUTER
822-1039-001	TCU-906	TELEPHONE CONV UNIT
822-1044-004	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1044-020	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1044-120	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1044-121	VHF-700B	COMMUNICATIONS TRANSCEIVER, VHF
822-1045-001	618M-5	RECEIVER-TRANSMITTER, RADIO
822-1045-401	618M-5	RECEIVER-TRANSMITTER, RADIO
822-1047-003	VHF-900B	COMMUNICATIONS TRANSCEIVER, VHF
822-1047-020	VHF-900B	COMMUNICATIONS TRANSCEIVER, VHF
822-1047-030	VHF-900B	COMMUNICATIONS TRANSCEIVER, VHF
822-1050-001	RTA-800	RECEIVER/TRANSMITTER/ANTENNA
822-1050-004	RTA-800	RECEIVER/TRANSMITTER/ANTENNA
822-1058-002	CCP-4000	CURSOR CONTROL PANEL
822-1065-006	CIU-906	CABIN INTERFACE UNIT
822-1075-001	DAU-4003	DATA ACQUISITION UNIT
822-1075-002	DAU-4003	DATA ACQUISITION UNIT
822-1084-014	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-016	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-017	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-020	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-051	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-055	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-056	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-104	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-108	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-110	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-122	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-123	AFD-3010	ADAPTIVE FLIGHT DISPLAY

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1084-124	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-131	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-202	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-206	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-208	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-306	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-308	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-310	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-351	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-352	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-353	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-354	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-358	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-404	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-406	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-408	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-410	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-412	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-422	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-460	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-480	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-488	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-502	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-506	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-510	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-602	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1084-603	AFD-3010	ADAPTIVE FLIGHT DISPLAY
822-1107-012	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-102	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-103	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-104	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-106	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-108	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-110	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-112	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-116	FGP-3000	FLIGHT GUIDANCE PANEL
822-1107-136	FGP-3000	FLIGHT GUIDANCE PANEL
822-1108-018	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-022	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-023	FGC-3000	FLIGHT GUIDANCE COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1108-032	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-033	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-035	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-040	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-041	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-043	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-047	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-118	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-122	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-131	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-132	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-135	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-140	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-143	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-147	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-217	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-218	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-222	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-235	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1108-317	FGC-3000	FLIGHT GUIDANCE COMPUTER
822-1109-001	ADC-3000	AIR DATA COMPUTER
822-1109-002	ADC-3000	AIR DATA COMPUTER
822-1109-003	ADC-3000	AIR DATA COMPUTER
822-1109-004	ADC-3000	AIR DATA COMPUTER
822-1109-005	ADC-3000	AIR DATA COMPUTER
822-1109-009	ADC-3000	AIR DATA COMPUTER
822-1109-010	ADC-3000	AIR DATA COMPUTER
822-1109-011	ADC-3000	AIR DATA COMPUTER
822-1109-013	ADC-3000	AIR DATA COMPUTER
822-1109-014	ADC-3000	AIR DATA COMPUTER
822-1109-015	ADC-3000	AIR DATA COMPUTER
822-1109-016	ADC-3000	AIR DATA COMPUTER
822-1109-018	ADC-3000	AIR DATA COMPUTER
822-1109-020	ADC-3000	AIR DATA COMPUTER
822-1109-022	ADC-3000	AIR DATA COMPUTER
822-1109-023	ADC-3000	AIR DATA COMPUTER
822-1109-122	ADC-3000	AIR DATA COMPUTER
822-1109-123	ADC-3000	AIR DATA COMPUTER
822-1109-126	ADC-3000	AIR DATA COMPUTER
822-1109-128	ADC-3000	AIR DATA COMPUTER
822-1109-143	ADC-3000	AIR DATA COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1110-001	AHC-3000	ATTITUDE DIRECTOR INDICATOR
822-1110-002	AHC-3000	ATTITUDE DIRECTOR INDICATOR
822-1111-001	VHF-21C	COMMUNICATIONS TRANSCEIVER, VHF
822-1112-001	VHF-21D	COMMUNICATIONS TRANSCEIVER, VHF
822-1113-001	VHF-22C	COMMUNICATIONS TRANSCEIVER, VHF
822-1113-021	VHF-22C	COMMUNICATIONS TRANSCEIVER, VHF
822-1114-001	VHF-22D	COMMUNICATIONS TRANSCEIVER, VHF
822-1114-021	VHF-22D	COMMUNICATIONS TRANSCEIVER, VHF
822-1115-001	VHF-422C	COMMUNICATIONS TRANSCEIVER
822-1115-021	VHF-422C	COMMUNICATIONS TRANSCEIVER
822-1116-001	VHF-422D	COMMUNICATIONS TRANSCEIVER
822-1116-021	VHF-422D	COMMUNICATIONS TRANSCEIVER
822-1120-001	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-003	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-005	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-006	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-007	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-008	CTL-22C	CONTROL, VHF COMMUNICATION
822-1120-009	CTL-22C	CONTROL, VHF COMMUNICATION
822-1121-001	CTL-23C	CONTROL, VHF COMMUNICATION
822-1121-002	CTL-23C	CONTROL, VHF COMMUNICATION
822-1121-005	CTL-23C	CONTROL, VHF COMMUNICATION
822-1122-111	RTU-870B	RADIO TUNING UNIT
822-1122-112	RTU-870B	RADIO TUNING UNIT
822-1123-102	RTU-870C	RADIO TUNING UNIT
822-1123-111	RTU-870C	RADIO TUNING UNIT
822-1129-001	ICC-3000	INTEGRATED CARD CAGE
822-1130-101	IOC-3000	I/O CONCENTRATOR IAPS
822-1130-151	IOC-3000	I/O CONCENTRATOR IAPS
822-1131-001	IEC-3000	IAPS ENVIRONMENTAL CONTROLLER
822-1132-002	DCU-3000	DATA CONCENTRATOR UNIT
822-1134-002	DCP-3000	DISPLAY CONTROL PANEL
822-1134-012	DCP-3000	DISPLAY CONTROL PANEL
822-1134-061	DCP-3000	DISPLAY CONTROL PANEL
822-1134-102	DCP-3000	DISPLAY CONTROL PANEL
822-1134-112	DCP-3000	DISPLAY CONTROL PANEL
822-1134-202	DCP-3000	DISPLAY CONTROL PANEL
822-1134-302	DCP-3000	DISPLAY CONTROL PANEL
822-1137-001	PWR-3000	POWER SUPPLY
822-1139-021	MDC-3000	MAINTENANCE DIAGNOSTIC COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1139-401	MDC-3000	MAINTENANCE DIAGNOSTIC COMPUTER
822-1139-402	MDC-3000	MAINTENANCE DIAGNOSTIC COMPUTER
822-1148-116	FCC-4009	FLIGHT CONTROL COMPUTER
822-1148-128	FCC-4009	FLIGHT CONTROL COMPUTER
822-1148-216	FCC-4009	FLIGHT CONTROL COMPUTER
822-1148-228	FCC-4009	FLIGHT CONTROL COMPUTER
822-1152-001	GLU-920	GLOBAL LANDING UNIT
822-1152-002	GLU-920	GLOBAL LANDING UNIT
822-1152-122	GLU-920	GLOBAL LANDING UNIT
822-1155-100	GMLU-910	GLOBAL NAVIGATION AND LANDING UNIT
822-1155-121	GMLU-910	GLOBAL NAVIGATION AND LANDING UNIT
822-1158-001	GLU-910	GLOBAL LANDING UNIT
822-1167-001	IEC-3001	IAPS ENVIRONMENTAL CONTROLLER
822-1168-001	SVO-3000	SERVO
822-1168-002	SVO-3000	SERVO
822-1168-003	SVO-3000	SERVO
822-1168-021	SVO-3000	SERVO
822-1168-022	SVO-3000	SERVO
822-1168-023	SVO-3000	SERVO
822-1168-031	SVO-3000	SERVO (HIGH TORQUE)
822-1168-032	SVO-3000	SERVO (HIGH TORQUE)
822-1168-033	SVO-3000	SERVO (HIGH TORQUE)
822-1178-101	DU-9801	DISPLAY UNIT
822-1181-002	SDU-640C	SENSOR DISPLAY UNIT
822-1193-001	FDU-3000	FLUX DETECTOR UNIT
822-1197-101	HDD980	HARD DISK DRIVE
822-1200-001	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-002	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-003	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-005	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-201	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-202	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-204	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-207	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-209	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-802	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-803	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-997	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1200-999	ECU-3000	EXTERNAL COMPENSATION UNIT
822-1239-101	CMU-900	COMMUNICATION MANAGEMENT UNIT
822-1239-151	CMU-900	COMMUNICATION MANAGEMENT UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1250-002	VHF-920	COMMUNICATIONS TRANSCEIVER, VHF
822-1250-020	VHF-920	COMMUNICATIONS TRANSCEIVER, VHF
822-1261-101	FCC703	FLIGHT CONTROL COMPUTER
822-1261-102	FCC703	FLIGHT CONTROL COMPUTER
822-1278-001	DCU-3010	DATA CONCENTRATOR UNIT
822-1278-002	DCU-3010	DATA CONCENTRATOR UNIT
822-1278-003	DCU-3010	DATA CONCENTRATOR UNIT
822-1278-004	DCU-3010	DATA CONCENTRATOR UNIT
822-1279-002	CHP-3000	COURSE HEADING PANEL
822-1280-002	CHP-3010	COURSE HEADING PANEL
822-1281-002	CKP-3000	COURSE KNOB PANEL
822-1287-101	VHF-2100	RECEIVER TRANSMITTER
822-1287-180	VHF-2100	RECEIVER TRANSMITTER
822-1293-002	TTR-921	RECEIVER TRANSMITTER, TCAS
822-1293-321	TTR-921	RECEIVER TRANSMITTER, TCAS
822-1293-322	TTR-921	RECEIVER TRANSMITTER, TCAS
822-1294-002	TTR-4000	RECEIVER TRANSMITTER, TCAS
822-1308-027	FCC-4010	FLIGHT CONTROL COMPUTER
822-1308-320	FCC-4010	FLIGHT CONTROL COMPUTER
822-1308-420	FCC-4010	FLIGHT CONTROL COMPUTER
822-1310-004	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-005	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-101	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-102	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-103	DCU-4004	DATA CONCENTRATOR UNIT
822-1310-104	DCU-4004	DATA CONCENTRATOR UNIT
822-1330-001	GNA-910	ANTENNA, GLOBAL POSITIONING SATELLITE
822-1338-002	TPR-901	TRANSPONDER
822-1338-003	TPR-901	TRANSPONDER
822-1338-004	TPR-901	TRANSPONDER
822-1338-020	TPR-901	TRANSPONDER
822-1338-021	TPR-901	TRANSPONDER
822-1343-002	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-003	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-022	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-023	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-102	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-201	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1343-221	MDC-4100	MAINTENANCE DIAGNOSTIC COMPUTER
822-1348-001	SRT-2000-4	SATELLITE RECEIVER-TRANSMITTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1349-001	SRT-2000-6	SATELLITE RECEIVER-TRANSMITTER
822-1349-002	SRT-2000-6	SATELLITE RECEIVER-TRANSMITTER
822-1349-401	SRT-2000-6	SATELLITE RECEIVER-TRANSMITTER
822-1354-002	CDU-6100	CONTROL DISPLAY UNIT
822-1354-102	CDU-6100	CONTROL DISPLAY UNIT
822-1354-104	CDU-6100	CONTROL DISPLAY UNIT
822-1360-001	WXA-1000	WEATHER RADAR ADAPTER
822-1360-021	WXA-1000	WEATHER RADAR ADAPTER
822-1361-001	IOC-3100	IN/OUT CONCENTRATOR
822-1361-002	IOC-3100	IN/OUT CONCENTRATOR
822-1361-003	IOC-3100	IN/OUT CONCENTRATOR
822-1361-004	IOC-3100	IN/OUT CONCENTRATOR
822-1361-101	IOC-3100	IN/OUT CONCENTRATOR
822-1361-102	IOC-3100	IN/OUT CONCENTRATOR
822-1361-103	IOC-3100	IN/OUT CONCENTRATOR
822-1361-105	IOC-3100	IN/OUT CONCENTRATOR
822-1361-106	IOC-3100	IN/OUT CONCENTRATOR
822-1361-221	IOC-3100	IN/OUT CONCENTRATOR
822-1361-222	IOC-3100	IN/OUT CONCENTRATOR
822-1361-302	IOC-3100	IN/OUT CONCENTRATOR
822-1361-303	IOC-3100	IN/OUT CONCENTRATOR
822-1361-304	IOC-3100	IN/OUT CONCENTRATOR
822-1361-305	IOC-3100	IN/OUT CONCENTRATOR
822-1361-321	IOC-3100	IN/OUT CONCENTRATOR
822-1361-402	IOC-3100	IN/OUT CONCENTRATOR
822-1361-404	IOC-3100	IN/OUT CONCENTRATOR
822-1361-405	IOC-3100	IN/OUT CONCENTRATOR
822-1361-406	IOC-3100	IN/OUT CONCENTRATOR
822-1361-410	IOC-3100	IN/OUT CONCENTRATOR
822-1361-411	IOC-3100	IN/OUT CONCENTRATOR
822-1361-412	IOC-3100	IN/OUT CONCENTRATOR
822-1361-430	IOC-3100	IN/OUT CONCENTRATOR
822-1361-440	IOC-3100	IN/OUT CONCENTRATOR
822-1361-442	IOC-3100	IN/OUT CONCENTRATOR
822-1361-510	IOC-3100	IN/OUT CONCENTRATOR
822-1361-601	IOC-3100	IN/OUT CONCENTRATOR
822-1361-610	IOC-3100	IN/OUT CONCENTRATOR
822-1361-612	IOC-3100	IN/OUT CONCENTRATOR
822-1361-613	IOC-3100	IN/OUT CONCENTRATOR
822-1361-614	IOC-3100	IN/OUT CONCENTRATOR
822-1362-010	IOC-4100	IN/OUT CONCENTRATOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1362-052	IOC-4100	IN/OUT CONCENTRATOR
822-1362-053	IOC-4100	IN/OUT CONCENTRATOR
822-1362-054	IOC-4100	IN/OUT CONCENTRATOR
822-1362-060	IOC-4100	IN/OUT CONCENTRATOR
822-1362-065	IOC-4100	IN/OUT CONCENTRATOR
822-1362-066	IOC-4100	IN/OUT CONCENTRATOR
822-1362-080	IOC-4100	IN/OUT CONCENTRATOR
822-1362-081	IOC-4100	IN/OUT CONCENTRATOR
822-1362-082	IOC-4100	IN/OUT CONCENTRATOR
822-1362-101	IOC-4100	IN/OUT CONCENTRATOR
822-1362-111	IOC-4100	IN/OUT CONCENTRATOR
822-1362-112	IOC-4100	IN/OUT CONCENTRATOR
822-1362-113	IOC-4100	IN/OUT CONCENTRATOR
822-1362-117	IOC-4100	IN/OUT CONCENTRATOR
822-1362-118	IOC-4100	IN/OUT CONCENTRATOR
822-1362-119	IOC-4100	IN/OUT CONCENTRATOR
822-1362-131	IOC-4100	IN/OUT CONCENTRATOR
822-1362-510	IOC-4100	IN/OUT CONCENTRATOR
822-1363-002	CSU-3100	CONFIGURATION STRAPPING UNIT
822-1364-002	CSU-4100	CONFIGURATION STRAPPING UNIT
822-1369-001	IGA-2000	INTERMEDIATE GAIN ANTENNA
822-1369-003	IGA-2000	INTERMEDIATE GAIN ANTENNA
822-1369-401	IGA-2000	INTERMEDIATE GAIN ANTENNA
822-1373-021	FCC-4011	FLIGHT CONTROL COMPUTER
822-1373-121	FCC-4011	FLIGHT CONTROL COMPUTER
822-1377-001	GPS-4000A	GPS SENSOR
822-1378-001	AHC-3000A	ATTITUDE DIRECTOR INDICATOR
822-1379-101	DSP9800	DISPLAY SELECT PANEL
822-1382-101	DCC-9800	DISPLAY CONCENTRATOR COMPUTER
822-1398-452	ADC-87A	AIR DATA COMPUTER
822-1398-459	ADC-87A	AIR DATA COMPUTER
822-1398-471	ADC-87A	AIR DATA COMPUTER
822-1398-473	ADC-87A	AIR DATA COMPUTER
822-1398-474	ADC-87A	AIR DATA COMPUTER
822-1398-478	ADC-87A	AIR DATA COMPUTER
822-1398-480	ADC-87A	AIR DATA COMPUTER
822-1398-481	ADC-87A	AIR DATA COMPUTER
822-1398-482	ADC-87A	AIR DATA COMPUTER
822-1398-486	ADC-87A	AIR DATA COMPUTER
822-1398-490	ADC-87A	AIR DATA COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1398-504	ADC-87A	AIR DATA COMPUTER
822-1398-510	ADC-87A	AIR DATA COMPUTER
822-1398-521	ADC-87A	AIR DATA COMPUTER
822-1399-001	DSP-2000	DISPLAY SELECT PANEL
822-1399-002	DSP-2000	DISPLAY SELECT PANEL
822-1399-102	DSP-2000	DISPLAY SELECT PANEL
822-1405-001	SRT-2000-3	SATELLITE RECEIVER TRANSMITTER
822-1407-001	ICC-4009	INTEGRATED CARD CAGE
822-1424-001	APM-900	AIRCRAFT PERSONALITY MODULE
822-1444-012	AFD-2000	ADAPTIVE FLIGHT DISPLAY
822-1459-001	ICC-3001	INTEGRATED CARD CAGE
822-1459-002	ICC-3001	INTEGRATED CARD CAGE
822-1459-003	ICC-3001	INTEGRATED CARD CAGE
822-1463-200	OCM-4100	OPTIONS CONTROL MODULE
822-1463-201	OCM-4100	OPTIONS CONTROL MODULE
822-1463-208	OCM-4100	OPTIONS CONTROL MODULE
822-1463-209	OCM-4100	OPTIONS CONTROL MODULE
822-1463-210	OCM-4100	OPTIONS CONTROL MODULE
822-1463-212	OCM-4100	OPTIONS CONTROL MODULE
822-1463-214	OCM-4100	OPTIONS CONTROL MODULE
822-1463-216	OCM-4100	OPTIONS CONTROL MODULE
822-1463-224	OCM-4100	OPTIONS CONTROL MODULE
822-1463-228	OCM-4100	OPTIONS CONTROL MODULE
822-1463-231	OCM-4100	OPTIONS CONTROL MODULE
822-1463-235	OCM-4100	OPTIONS CONTROL MODULE
822-1463-314	OCM-4100	OPTIONS CONTROL MODULE
822-1465-001	NAV-4000	RCVR, VOR/LOC/GS/MB/ADF
822-1465-101	NAV-4000	RCVR, VOR/LOC/GS/MB/ADF
822-1466-001	DME-4000	DISTANCE MEASURING EQPT
822-1468-101	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1468-102	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1468-202	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1468-302	VHF-4000	COMMUNICATIONS TRANSCEIVER, VHF
822-1469-101	RIU-4000	RADIO INTERFACE UNIT
822-1469-102	RIU-4000	RADIO INTERFACE UNIT
822-1469-151	RIU-4000	RADIO INTERFACE UNIT
822-1469-152	RIU-4000	RADIO INTERFACE UNIT
822-1469-153	RIU-4000	RADIO INTERFACE UNIT
822-1476-002	DCP-3020	DISPLAY CONTROL PANEL
822-1476-012	DCP-3020	DISPLAY CONTROL PANEL
822-1483-002	DCU-3001	DATA CONCENTRATOR UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1483-010	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-101	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-102	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-201	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-250	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-270	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-301	DCU-3001	DATA CONCENTRATOR UNIT
822-1483-350	DCU-3001	DATA CONCENTRATOR UNIT
822-1484-200	OCM-3100	OPTIONS CONTROL MODULE
822-1484-201	OCM-3100	OPTIONS CONTROL MODULE
822-1484-205	OCM-3100	OPTIONS CONTROL MODULE
822-1484-209	OCM-3100	OPTIONS CONTROL MODULE
822-1484-217	OCM-3100	OPTIONS CONTROL MODULE
822-1484-219	OCM-3100	OPTIONS CONTROL MODULE
822-1484-222	OCM-3100	OPTIONS CONTROL MODULE
822-1484-223	OCM-3100	OPTIONS CONTROL MODULE
822-1484-228	OCM-3100	OPTIONS CONTROL MODULE
822-1484-241	OCM-3100	OPTIONS CONTROL MODULE
822-1484-252	OCM-3100	OPTIONS CONTROL MODULE
822-1485-008	CDU-6200	CONTROL DISPLAY UNIT
822-1485-010	CDU-6200	CONTROL DISPLAY UNIT
822-1485-032	CDU-6200	CONTROL DISPLAY UNIT
822-1485-038	CDU-6200	CONTROL DISPLAY UNIT
822-1485-062	CDU-6200	CONTROL DISPLAY UNIT
822-1485-066	CDU-6200	CONTROL DISPLAY UNIT
822-1485-070	CDU-6200	CONTROL DISPLAY UNIT
822-1485-108	CDU-6200	CONTROL DISPLAY UNIT
822-1485-166	CDU-6200	CONTROL DISPLAY UNIT
822-1485-202	CDU-6200	CONTROL DISPLAY UNIT
822-1485-204	CDU-6200	CONTROL DISPLAY UNIT
822-1485-402	CDU-6200	CONTROL DISPLAY UNIT
822-1485-562	CDU-6200	CONTROL DISPLAY UNIT
822-1517-001	DCU-2000	DATA CONCENTRATOR UNIT
822-1517-002	DCU-2000	DATA CONCENTRATOR UNIT
822-1531-001	MAA-2000	TWLU ANTENNA
822-1532-001	PMAA-2000	CWLU ANTENNA
822-1533-001	RDC-4002	REMOTE DATA CONCENTRATOR
822-1533-201	RDC-4002	REMOTE DATA CONCENTRATOR
822-1533-202	RDC-4002	REMOTE DATA CONCENTRATOR
822-1538-002	DCU-5010	DATA CONCENTRATOR UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1538-004	DCU-5010	DATA CONCENTRATOR UNIT
822-1538-103	DCU-5010	DATA CONCENTRATOR UNIT
822-1538-104	DCU-5010	DATA CONCENTRATOR UNIT
822-1538-201	DCU-5010	DATA CONCENTRATOR UNIT
822-1543-101	FSU-5010	FILE SERVER UNIT
822-1558-010	ACP-4100	AUDIO CONTROL PANEL
822-1558-020	ACP-4100	AUDIO CONTROL PANEL
822-1558-060	ACP-4100	AUDIO CONTROL PANEL
822-1558-070	ACP-4100	AUDIO CONTROL PANEL
822-1558-080	ACP-4100	AUDIO CONTROL PANEL
822-1558-090	ACP-4100	AUDIO CONTROL PANEL
822-1560-003	CDU-5200	CONTROL DISPLAY UNIT
822-1560-106	CDU-5200	CONTROL DISPLAY UNIT
822-1561-001	DCP-5020	DISPLAY CONTROL PANEL
822-1567-101	MCP-730	MODE CONTROL PANEL
822-1567-102	MCP-730	MODE CONTROL PANEL
822-1569-003	RSP-5020	REVERSIONARY SWITCHING PANEL
822-1569-103	RSP-5020	REVERSIONARY SWITCHING PANEL
822-1573-003	CCP-5020	CNTRL PNL, SLVR GRY METALLIC
822-1573-013	CCP-5020	CNTRL PNL, SLVR GRY METALLIC
822-1574-001	FGP-5020	FLIGHT GUIDANCE PANEL
822-1575-001	TAS-5000	TERRAIN AWARENESS SYSTEM
822-1577-012	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-104	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-105	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-202	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-204	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-205	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1577-303	AFD-5220	ADAPTIVE FLIGHT DISPLAY
822-1578-002	DCU-5000	DATA CONCENTRATOR UNIT
822-1578-003	DCU-5000	DATA CONCENTRATOR UNIT
822-1578-004	DCU-5000	DATA CONCENTRATOR UNIT
822-1579-001	NAV-4500	RCVR, VOR/LOC/GS/MB/ADF
822-1579-101	NAV-4500	RCVR, VOR/LOC/GS/MB/ADF
822-1581-001	RDC-5000	REMOTE DATA CONCENTRATOR
822-1583-001	CPE-4100	CONTROL PANEL ELECTRONICS
822-1588-101	SVO-730	SERVO DRIVE UNIT
822-1590-101	RIU-4100	RADIO INTERFACE UNIT
822-1590-102	RIU-4100	RADIO INTERFACE UNIT
822-1590-151	RIU-4100	RADIO INTERFACE UNIT
822-1590-152	RIU-4100	RADIO INTERFACE UNIT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1592-126	FGC-3002	FLIGHT GUIDANCE COMPUTER
822-1592-226	FGC-3002	FLIGHT GUIDANCE COMPUTER
822-1592-426	FGC-3002	FLIGHT GUIDANCE COMPUTER
822-1604-101	FCC-730	FLIGHT CONTROL COMPUTER
822-1604-151	FCC-730	FLIGHT CONTROL COMPUTER
822-1646-001	WLU-2001	WIRELESS L.A.N. UNIT
822-1692-001	ANT-5020	ANTENNA, AERO
822-1693-001	AIC-5020	ANTENNA CONTROL UNIT
822-1710-001	WRT-2100	RECEIVER/TRANSMITTER
822-1710-203	WRT-2100	RECEIVER/TRANSMITTER
822-1714-101	DU-7001	DISPLAY UNIT
822-1716-101	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-111	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-112	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-121	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1716-122	AFD-2000A	ADAPTIVE FLIGHT DISPLAY
822-1719-001	DCP-2000	DISPLAY CONTROL PANEL
822-1719-002	DCP-2000	DISPLAY CONTROL PANEL
822-1719-003	DCP-2000	DISPLAY CONTROL PANEL
822-1719-004	DCP-2000	DISPLAY CONTROL PANEL
822-1719-501	DCP-2000	DISPLAY CONTROL PANEL
822-1719-502	DCP-2000	DISPLAY CONTROL PANEL
822-1724-458	ADC-85L	AIR DATA COMPUTER
822-1739-002	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1739-003	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1739-501	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1739-511	CMU-4000	COMMUNICATION MANAGEMENT UNIT
822-1746-001	CCP-3000	CURSOR CONTROL PANEL
822-1746-002	CCP-3000	CURSOR CONTROL PANEL
822-1746-012	CCP-3000	CURSOR CONTROL PANEL
822-1746-102	CCP-3000	CURSOR CONTROL PANEL
822-1753-016	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-017	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-020	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-120	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-122	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-123	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-124	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-131	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-220	AFD-3010E	ADAPTIVE FLIGHT DISPLAY

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1753-310	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-351	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-352	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-353	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-354	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-358	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-408	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-410	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-412	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-432	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-480	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-483	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-488	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-506	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-510	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-602	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1753-603	AFD-3010E	ADAPTIVE FLIGHT DISPLAY
822-1764-001	NSU-2100	NETWORK SERVER UNIT
822-1771-001	EGU-2100	ETHERNET GATEWAY UNIT
822-1772-003	HST-900	HIGH-SPEED SATCOM TRANSCEIVER
822-1785-001	SRT-2100B	SATELLITE RECEIVER TRANSMITTER
822-1787-101	TTC-2100	TRANSPONDER, TCAS
822-1791-001	TAC-5000	TAWS CONFIGURATION MODULE
822-1792-001	SPC-5000	STALL PROTECTION COMPUTER
822-1792-002	SPC-5000	STALL PROTECTION COMPUTER
822-1792-003	SPC5000	STALL PROTECTION COMPUTER
822-1793-001	SVL-85A	SERIES ACTUATOR
822-1794-001	SVL-86A	SERIES ACTUATOR
822-1795-001	SVL-87A	SERIES ACTUATOR
822-1799-101	DMU-2100	DATA MANAGEMENT UNIT
822-1800-001	AHC-3000S	ATTITUDE DIRECTOR INDICATOR
822-1807-001	CTL-92E	CONTROL UNIT
822-1807-002	CTL-92E	CONTROL UNIT
822-1807-003	CTL-92E	CONTROL UNIT
822-1807-004	CTL-92E	CONTROL UNIT
822-1807-006	CTL-92E	CONTROL UNIT
822-1808-101	PRNTR-2100	FLIGHT DECK PRINTER
822-1811-003	MMT-5000	MOUNT
822-1811-004	MMT-5000	MOUNT
822-1821-001	GLU-925	RECEIVER
822-1821-330	GLU-925	RECEIVER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1821-331	GLU-925	RECEIVER
822-1821-430	GLU-925	RECEIVER
822-1825-101	RTU-870F	RADIO TUNING UNIT
822-1825-102	RTU-870F	RADIO TUNING UNIT
822-1825-111	RTU-870F	RADIO TUNING UNIT
822-1828-002	DCP-3030	DISPLAY CONTROL PANEL
822-1828-003	DCP-3030	DISPLAY CONTROL PANEL
822-1828-012	DCP-3030	DISPLAY CONTROL PANEL
822-1828-061	DCP-3030	DISPLAY CONTROL PANEL
822-1828-062	DCP-3030	DISPLAY CONTROL PANEL
822-1828-102	DCP-3030	DISPLAY CONTROL PANEL
822-1828-112	DCP-3030	DISPLAY CONTROL PANEL
822-1828-161	DCP-3030	DISPLAY CONTROL PANEL
822-1828-162	DCP-3030	DISPLAY CONTROL PANEL
822-1861-010	ACP-4110	AUDIO CONTROL PANEL
822-1861-015	ACP-4110	AUDIO CONTROL PANEL
822-1861-030	ACP-4110	AUDIO CONTROL PANEL
822-1863-002	RIU-4010	RADIO INTERFACE UNIT
822-1863-012	RIU-4010	RADIO INTERFACE UNIT
822-1863-022	RIU-4010	RADIO INTERFACE UNIT
822-1863-024	RIU-4010	RADIO INTERFACE UNIT
822-1863-052	RIU-4010	RADIO INTERFACE UNIT
822-1863-062	RIU-4010	RADIO INTERFACE UNIT
822-1863-072	RIU-4010	RADIO INTERFACE UNIT
822-1863-074	RIU-4010	RADIO INTERFACE UNIT
822-1863-151	RIU-4010	RADIO INTERFACE UNIT
822-1863-172	RIU-4010	RADIO INTERFACE UNIT
822-1864-001	RIU-4110	RADIO INTERFACE UNIT
822-1864-002	RIU-4110	RADIO INTERFACE UNIT
822-1864-012	RIU-4110	RADIO INTERFACE UNIT
822-1864-022	RIU-4110	RADIO INTERFACE UNIT
822-1864-024	RIU-4110	RADIO INTERFACE UNIT
822-1864-051	RIU-4110	RADIO INTERFACE UNIT
822-1864-052	RIU-4110	RADIO INTERFACE UNIT
822-1864-062	RIU-4110	RADIO INTERFACE UNIT
822-1864-072	RIU-4110	RADIO INTERFACE UNIT
822-1864-074	RIU-4110	RADIO INTERFACE UNIT
822-1864-151	RIU-4110	RADIO INTERFACE UNIT
822-1864-172	RIU-4110	RADIO INTERFACE UNIT
822-1868-201	AHC-1000S	ATTITUDE DIRECTOR INDICATOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-1872-101	VHF-4000E	COMMUNICATIONS TRANSCEIVER, VHF
822-1872-301	VHF-4000E	COMMUNICATIONS TRANSCEIVER, VHF
822-1872-310	VHF-4000E	COMMUNICATIONS TRANSCEIVER, VHF
822-1917-104	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-105	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-202	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-204	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-205	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1917-303	AFD-5220E	ADAPTIVE FLIGHT DISPLAY
822-1939-001	ALT-1000	ALTIMETER
822-1939-005	ALT-1000	ALTIMETER
822-1939-006	ALT-1000	ALTIMETER
822-1947-010	AOP-4120	AUDIO OPTIONS PANEL
822-1950-010	ACP-4120	AUDIO CONTROL PANEL
822-1950-030	ACP-4120	AUDIO CONTROL PANEL
822-1950-050	ACP-4120	AUDIO CONTROL PANEL
822-1950-060	ACP-4120	AUDIO CONTROL PANEL
822-1950-070	ACP-4120	AUDIO CONTROL PANEL
822-1950-090	ACP-4120	AUDIO CONTROL PANEL
822-1950-110	ACP-4120	AUDIO CONTROL PANEL
822-1950-130	ACP-4120	AUDIO CONTROL PANEL
822-1950-160	ACP-4120	AUDIO CONTROL PANEL
822-1950-503	ACP-4120	AUDIO CONTROL PANEL
822-1964-004	RSP-5040	REVERSIONARY SWITCHING PANEL
822-1965-102	CCP-5040	CURSOR CONTROL PANEL
822-1966-002	DCP-5040	DISPLAY CONTROL PANEL
822-1984-002	DDP-5040	DIMMER DISPLAY PANEL
822-1987-001	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-003	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-004	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-005	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-006	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-007	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1987-008	MDC-3110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-004	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-008	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-024	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-028	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1988-104	MDC-4110	MAINTENANCE DIAGNOSTIC COMPUTER
822-1993-100	AFD-3310	ADAPTIVE FLIGHT DISPLAY
822-2012-036	FGC-3003	FLIGHT GUIDANCE COMPUTER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-2016-102	ABM-2100	AIR BLOCKING MODULE
822-2018-001	ICC-3010	INTEGRATED CARD CAGE
822-2019-101	TRIAA-2100	TRIAXIAL ACCELEROMETER
822-2020-001	HST-2100	HIGH-SPEED SATCOM TRANSCEIVER
822-2023-001	SRT-2100-3	SATELLITE RECEIVER TRANSMITTER
822-2023-002	SRT-2100-3	SATELLITE RECEIVER TRANSMITTER
822-2023-101	SRT-2100-3	SATELLITE RECEIVER TRANSMITTER
822-2030-001	XMA-1000	XM WEATHER ANTENNA
822-2031-001	XMWR-1000	XM WEATHER RECEIVER
822-2031-002	XMWR-1000	XM WEATHER RECEIVER
822-2033-001	GNA-925	ANTENNA, GLOBAL POSITIONING SATELLITE
822-2063-002	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-101	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-102	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-103	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-104	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-105	DIU-3010	DIGITAL INTERFACE UNIT
822-2063-106	DIU-3010	DIGITAL INTERFACE UNIT
822-2064-001	IOC-3110	IN/OUT CONCENTRATOR
822-2065-001	IOC-4110	IN/OUT CONCENTRATOR
822-2083-001	ADC-3010	AIR DATA COMPUTER
822-2083-002	ADC-3010	AIR DATA COMPUTER
822-2100-001	AFDX-2100	AFDX SWITCH UNIT
822-2102-001	AFDX-2120	AFDX SWITCH UNIT
822-2117-002	DCP-3040	DISPLAY CONTROL PANEL
822-2117-202	DCP-3040	DISPLAY CONTROL PANEL
822-2119-001	ICC-3011	INTEGRATED CARD CAGE
822-2120-101	ISS-2100	ISS-2100 (BLACK LABEL BOEING 787)
822-2127-001	RTM-2100	RECEIVER TRANSMITTER MODULE, RTM-2100
822-2131-001	DRV-2120	RADAR DRIVE ASSEMBLY, DRV-2120
822-2132-001	TSS-4100	TRAFFIC SURVEILLANCE SYSTEM PROCESSING
822-2133-001	DSM-5110	DIGITAL SWITCHING MODULE, DSM-5110
822-2136-001	SVO-5000	SERVO, PRIMARY - SVO-5000
822-2142-101	IPC-6220	INTEGRATED PROCESSING CABINET - IPC-622
822-2148-101	AFD-2100	ADAPTIVE FLIGHT DISPLAY, AFD-2100
822-2152-101	CCD-2100	CURSOR CONTROL DEVICE, CCD-2100
822-2152-201	CCD-2100	CURSOR CONTROL DEVICE, CCD-2100
822-2153-101	MKP-2100	MULTIFUNCTION KEYBOARD PANEL, MKP-2100
822-2154-101	DCP-2100	DISPLAY CONTROL PANEL, DCP-2100 - LEFT H
822-2154-201	DCP-2100	DISPLAY CONTROL PANEL, DCP-2100 - RIGHT

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-2165-002	DCP-5060	DISPLAY CONTROL PANEL
822-2171-020	ACP-5200	AUDIO CONTROL PANEL
822-2171-040	ACP-5200	AUDIO CONTROL PANEL
822-2171-060	ACP-5200	AUDIO CONTROL PANEL
822-2171-070	ACP-5200	AUDIO CONTROL PANEL
822-2171-080	ACP-5200	AUDIO CONTROL PANEL
822-2171-090	ACP-5200	AUDIO CONTROL PANEL
822-2172-010	CPE-5200	CONTROL PANEL ELECTRONICS
822-2175-001	CTL-22D	CONTROL, VHF COMMUNICATION
822-2175-003	CTL-22D	CONTROL, VHF COMMUNICATION
822-2175-005	CTL-22D	CONTROL, VHF COMMUNICATION
822-2175-007	CTL-22D	CONTROL, VHF COMMUNICATION
822-2176-001	CTL-22G	CONTROL, VHF COMMUNICATION
822-2176-003	CTL-22G	CONTROL, VHF COMMUNICATION
822-2176-005	CTL-22G	CONTROL, VHF COMMUNICATION
822-2176-007	CTL-22G	CONTROL, VHF COMMUNICATION
822-2177-001	CTL-23D	CONTROL, VHF COMMUNICATION
822-2177-003	CTL-23D	CONTROL, VHF COMMUNICATION
822-2178-001	CTL-23G	CONTROL, VHF COMMUNICATION
822-2179-001	CTL-32G	CONTROL, NAVIGATION
822-2179-007	CTL-32G	CONTROL, NAVIGATION
822-2179-011	CTL-32G	CONTROL, NAVIGATION
822-2179-013	CTL-32G	CONTROL, NAVIGATION
822-2179-015	CTL-32G	CONTROL, NAVIGATION
822-2180-001	CTL-62G	CONTROL, ADF
822-2180-003	CTL-62G	CONTROL, ADF
822-2180-005	CTL-62G	CONTROL, ADF
822-2180-007	CTL-62G	CONTROL, ADF
822-2180-013	CTL-62G	CONTROL, ADF
822-2180-015	CTL-62G	CONTROL, ADF
822-2181-201	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-203	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-205	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-207	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2181-213	CTL-92G	CONTROL UNIT, TRANSPONDER
822-2182-101	CTL-93T	CONTROL, TCAS
822-2182-103	CTL-93T	CONTROL, TCAS
822-2182-109	CTL-93T	CONTROL, TCAS
822-2182-111	CTL-93T	CONTROL, TCAS
822-2182-113	CTL-93T	CONTROL, TCAS
822-2182-115	CTL-93T	CONTROL, TCAS

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-2189-002	GPS-4000S	GLOBAL POSITIONING SYSTEM
822-2189-003	GPS-4000S	GLOBAL POSITIONING SYSTEM
822-2191-001	ICC-3111	INTEGRATED CARD CAGE
822-2195-001	APM-5000	AIRCRAFT PERSONALITY MODULE, APM-5000
822-2211-101	TCP-2100	TUNING CONTROL PANEL, TCP-2100
822-2213-003	CCP-5220	CONTROL PANEL
822-2213-004	CCP-5220	CONTROL PANEL
822-2215-001	DBU-5000	DATA BASE UNIT
822-2215-002	DBU-5000	DATA BASE UNIT
822-2215-101	DBU-5000	DATA BASE UNIT
822-2215-102	DBU-5000	DATA BASE UNIT
822-2215-201	DBU-5000	DATA BASE UNIT
822-2215-202	DBU-5000	DATA BASE UNIT
822-2215-203	DBU-5000	DATA BASE UNIT
822-2215-302	DBU-5000	DATA BASE UNIT
822-2215-402	DBU-5000	DATA BASE UNIT
822-2215-601	DBU-5000	DATA BASE UNIT
822-2215-602	DBU-5000	DATA BASE UNIT
822-2231-020	HST-2110	HIGH-SPEED SATCOM TRANSCEIVER
822-2232-020	HST-2110B	HIGH-SPEED SATCOM TRANSCEIVER
822-2233-010	HST-2120	HIGH-SPEED SATCOM TRANSCEIVER
822-2242-101	EGM-2200	ETHERNET GATEWAY MODULE, EGM-2200
822-2244-101	FSM-2200	FILE SERVER MODULE, FSM-2200
822-2244-151	FSM-2200	FILE SERVER MODULE, FSM-2200
822-2248-001	HCM-2100B	TRANSMITTER MODULE
822-2254-001	RTA-4112	TOP LEVEL ASSY
822-2256-001	RTA-4118	RECEIVER / TRANSMITTER ANTENNA ASSEMBLY
822-2279-101	NIM-2200	NETWORK INTERFACE MODULE, NIM-2200
822-2280-101	MCA-2200	MODULAR CHASSIS ASSEMBLY, MCA-2200
822-2290-101	RLS-2100	SENSOR ASSY, LIGHT, RLS-2100
822-2323-001	SVM-6110	SYNTHETIC VISION MODULE, SVM-6110
822-2335-002	RSP-6200	REVERSION SWITCH PANEL ASSEMBLY
822-2349-100	AFD-3320	MULTIFUNCTIONAL DISPLAY
822-2352-001	PEM-6210	POWER AND ENVIRONMENTAL MODULE, PEM-6210
822-2362-002	DCU-3001C	DATA CONCENTRATOR UNIT
822-2362-003	DCU-3001C	DATA CONCENTRATOR UNIT DCU-3001C
822-2362-102	DCU-3001C	DATA CONCENTRATOR UNIT
822-2381-010	ACP-4130	AUDIO CONTROL PANEL
822-2381-030	ACP-4130	AUDIO CONTROL PANEL
822-2381-035	ACP-4130	AUDIO CONTROL PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-2381-215	ACP-4130	AUDIO CONTROL PANEL
822-2381-230	ACP-4130	AUDIO CONTROL PANEL
822-2381-235	ACP-4130	AUDIO CONTROL PANEL
822-2381-601	ACP-4130	AUDIO CONTROL PANEL
822-2388-001	DCP-3310	DISPLAY CONTROL PANEL
822-2389-001	CCP-3310	CURSOR CONTROL PANEL
822-2394-002	DCM-6000	DATA CONCENTRATOR MODULE, DCM-6000
822-2395-002	PPM-6000	POWER PRODUCING MODULE, PPM-6000
822-2401-001	CEM-6000	COVER AND ENVIRONMENTAL MODULE, CEM-6000
822-2403-101	DMC-6000	DCU MODULE CABINET, DMC-6000
822-2404-101	IPC-6210	INTEGRATED PROCESSING CABINET - IPC-6210
822-2405-101	CEM-6210	COVER, ENVIRONMENTAL MODULE
822-2406-101	CEM-6220	COVER, ENVIRONMENTAL MODULE - CEM-6220
822-2433-100	DCP-3320	DISPLAY CONTROL PANEL
822-2434-100	CCP-3320	CURSOR CONTROL PANEL
822-2437-010	ANT-4010	ANTENNA, GLOBAL POSITIONING SATELLITE
822-2461-001	REU-6000	REMOTE ELECTRONICS UNIT
822-2465-001	SVL-6000	SERVO, LINEAR ACTUATOR - SVL-6000
822-2468-001	FCP-5120	FLIGHT CONTROL PANEL
822-2482-101	CMC-7001	CENTRAL MAINTENANCE COMPUTER
822-2483-101	CCP-7001	CURSOR CONTROL PANEL
822-2484-101	DSP-7001	DISPLAY SELECT PANEL
822-2493-001	CTP-6000	CONTROL TUNING PANEL - CTP-6000
822-2493-002	CTP-6000	CONTROL TUNING PANEL - CTP-6000
822-2543-102	CVR-2100	COCKPIT VOICE RECORDER - CVR-2100
822-2544-101	CVRCP-2100	CONTROL PANEL, COCKPIT VOICE RECORDER
822-2545-101	CVRMIC-2100	MICROPHONE, COCKPIT VOICE RECORDER - CVR
822-2546-102	FDR-2100	FLIGHT DATA RECORDER - FDR-2100
822-2547-101	ELT-2200	EMERGENCY LOCATOR TRANSMITTER - ELT-2200
822-2553-101	ANT-2200	ANTENNA, EMERGENCY LOCATOR TRANSMITTER
822-2554-101	ENIU-2200	ELT NAVIGATION INTERFACE UNIT - ENIU-220
822-2555-101	RTP-2100	RADIO TUNING PANEL - RTP-2100
822-2556-101	SDU-2200	SATELLITE DATA UNIT, SDU-2200
822-2557-101	FMPA-2200	FLANGE MOUNTED POWER AMPLIFIER, FMPA-220
822-2558-101	SCM-2200	SDU CONFIGURATION MODULE, SCM-2200
822-2559-101	SCD-2100	SELCAL DECODER - SCD-2100
822-2586-001	TPM-6000	TERRAIN AWARENESS AND WARNING SYSTEM
822-2647-101	HTSE	HIGH DEFINITION TOUCHSCREEN EQUIPMENT
822-2655-101	DLNA-2100A	DIPLEXER/LOW NOISE AMPLIFIER, DLNA-2100A
822-2656-101	HGA-2100A	HIGH GAIN ANTENNA, HGA-2100A
822-2775-010	TRE-940	TCAS ANTENNA, TRE-940

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
822-2776-010	ANT-4030	L-BAND ANTENNA, ANT-4030
822-2777-010	MBS-4000	MARKER BEACON ANTENNA, MBS-4000
822-2777-020	MBS-4000	MARKER BEACON SPLITTER, MBS-4000
822-2778-010	VHF-4000	VHF ANTENNA, VHFA-4000
822-2779-010	VLS-4000	VOR/LOC ANTENNA, VLS-4000
822-2779-030	VLS-4000	VOR/LOR COUPLER, VLS-4000
822-2780-010	QAR-100	QUICK ACCESS RECORDER, QAR-100
822-2831-001	CCP-6000	CURSOR CONTROL PANEL, CCP-6000
822-5404-001	DFA-901	ANTENNA, ADF
822-5404-003	DFA-901	ANTENNA, ADF
856-0072-010	WX-1000E	DRIVER, DISK
856-0072-020	WX-1000	LIGHTNING DETECTION SYS
856-0073-010	AIS-REU	AUDIO INTEGRATION SYSTEM
856-0073-020	AIS-ACPDV	AUDIO INTEGRATION SYSTEM
856-0073-030	AIS-ACPTV	AUDIO INTEGRATION SYSTEM
856-0073-050	AIS-ACPDV	AUDIO INTEGRATION SYSTEM
856-0073-060	AIS-ACPDV	AUDIO INTEGRATION SYSTEM
856-0075-010	LTN-101IRU	IRS MODE SELECT (Export License required)
856-0075-020	LTN-101MSD	DUAL IRS MODE SELECT
856-0075-050	LTN-101MSS	SINGLE IRS MODE SELECT
856-0075-110	LTN-101MSS	IRS MODE SELECT
856-0077-010	AOA-XMTR	ANGLE OF ATTACK XMTR
866-0016-101	TSA-4100	ANTENNA
866-0018-010	ACP-3110	AUDIO CONTROL PANEL
866-0018-015	ACP-3110	AUDIO CONTROL PANEL
866-0018-030	ACP-3110	AUDIO CONTROL PANEL
866-0018-035	ACP-3110	AUDIO CONTROL PANEL
866-0020-101	TSA-2100	SPECIFICATION FOR TSA-2100
866-0077-101	ACP-2100	AUDIO CONTROL PANEL - ACP-2100
866-0078-101	AGU-2100	AUDIO GATEWAY UNIT
866-0079-101	AJP-2100	PILOT'S JACK PANEL
866-0080-101	AJP-2101	FIRST OBSERVER'S JACK PANEL
866-0081-101	AJP-2102	SECOND OBSERVER'S JACK PANEL
866-0082-101	AMP-2100	AREA MICROPHONE AND PREAMPLIFIER - AMP-2
866-0083-101	ATP-2100	SPECIFICATION FOR ATP-2100
866-0084-101	EAFR-2100	ENHANCED AIRBORNE FLIGHT RECORDER - EAFR
866-0085-101	RIPS-2100	RECORDER INDEPENDENT POWER SUPPLY - RIPS
866-0115-101	HMJP-2100	HAND MIC JACK PANEL, HJMP-2100
866-0155-010	PRNTR-30	PRINTER
866-1098-001	CKL-550	CHECKLIST MANAGEMENT SYSTEM
866-5002-010	GS-ANT	ANTENNA, GLIDESCOPE AND COUPLER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
866-5002-020	GS-ANT	ANTENNA, GLIDESCOPE AND COUPLER
866-5010-010	XMA-1000G	ANTENNA, GPS/XM
866-5011-101	SPKR-2100	SPEAKER, FLIGHT DECK
866-5012-101	VHFA-2100	ANTENNA, VHF
866-5013-101	DLNA-2100	DIPLEXER/LOW NOISE AMPLIFIER
866-5015-101	HGA-2100	HIGH GAIN ANTENNA
866-5029-010	ANT-5029	RF/MICROWAVE ANTENNA

Part Number Lists

AMETEK SYSTEMS PRODUCT PART NUMBERS

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
128-384028-3	AMFQI	TURBINE SPEED INDICATOR
128-384030-1	AMFQIF	FUEL QUANTITY INDICATOR-FUSELAGE
128-384031-1	AMFQIW1	FUEL QUANTITY INDICATOR-WING
128-384031-3	AMFQIW3	FUEL QUANTITY INDICATOR-WING
128-384045-5	AMFQI	TURBINE SPEED INDICATORS
128-384046-3	AMFQI	FAN SPEED INDICATOR
128-384047-5	AMITTIND	ITT INDICATOR
45AS86803-7	AMVM	VIBRATION MONITOR
45AS86846-009	AMHPI	HYDRAULIC PRESSURE INDICATOR
45AS86846-9	AMHPI	HYDRAULIC PRESSURE INDICATOR
45AS86848-001	AMRTI	ROLL TRIM INDICATOR
45AS86848-1	AMRTI	ROLL TRIM INDICATOR

Part Number Lists

CABIN SYSTEMS AND AIRSHOW PRODUCT PART NUMBERS

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
020-0071-04	SSEE-6000	CCC SURROUND SOUND PROCESSOR
0204-0021-1	DAMPER	DAMPER, PRIMARY CONTROL, BOEING
1000005	AITR	AIRBORNE INTEGRATED TRANSCEIVER/ROUTER
1000009	TMASS	TAIL MOUNT ANTENNA SUB SYSTEM, (VIASAT)
100-601981-001	EDU104	MISC ELECTR:OTHER
1007783	ACU	ANTENNA CONTROL UNIT, (VIASAT), GEN I
1013-1-1	ACM	AUDIO CONTROL MODULE
102002-1	DAU	DBS-2100 ANTENNA UNIT
102002-3	DAU	DBS-2100 ANTENNA UNIT
102002-4	DAU	DBS-2100D ANTENNA UNIT
102005	DAU	DBS-2400 ANTENNA UNIT
102012-1	AIU	ANTENNA INTERFACE UNIT, INTERNATIONAL
102012-3	AIU	ANTENNA INTERFACE UNIT, INTERNATIONAL
102012-4	AIU	ANTENNA INTERFACE UNIT, WESTERN
1020-1-3	SPE-102X	PLUG 'N' PLAY
1021-1-1	SPE-102X	VIDEO MULTIPLEXER
1022-1-1	SPE-102X	A/V CONTROLLER
1022-1-2	SPE-102X	AUDIO VIDEO MODULE
1023-1-1	SPE-102X	AUDIO VIDEO MODULE
1024-1-1	SPE-102X	AUDIO VIDEO MODULE
1025-1-4	SPE-102X	AUDIO VIDEO MODULE
1025-1-5	SPE-102X	AUDIO VIDEO MODULE
1025-1-6	SPE-102X	AUDIO VIDEO MODULE
1026-1-2	SPE-102X	AUDIO VIDEO MODULE
1027-1-1	SPE-102X	AUDIO VIDEO MODULE
1027-1-2	SPE-102X	AUDIO VIDEO MODULE
1029-1-1	SPE-102X	AUDIO MULTIPLEXER
1030-1-2	SPE-103X	INFRARED INTERPRETER MODULE
1033-1-1	SPE-103X	INTERPRETER
1033-1-10	SPE-103X	INTERPRETER, RF/IR 418MHZ
1033-1-8	SPE-103X	INTP,418MHZ MOD
1047182	TMASS	TAIL MOUNT ANTENNA SUB SYSTEM
1050-1-1	SPE-105X	UNIVERSAL MODULE
1050-1-2	SPE-105X	UNIVERSAL MODULE
1051-1-1	SPE-105X	CABIN MANAGEMENT MODULE
1051-1-2	SPE-105X	CABIN MANAGEMENT MODULE
1051-1-3	SPE-105X	CABIN MANAGEMENT MODULE
1051-1-7	SPE-105X	CABIN MANAGEMENT MODULE
1051-1-8	SPE-105X	CABIN MANAGEMENT MODULE
1052-1-1	SPE-105X	SWITCH CONTROLLER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
1052-1-3	SPE-105X	SWITCH CONTROLLER
1052850	ACU	ANTENNA CONTROL UNIT, (VIASAT), GEN II
1053-1-3	SPE-105X	UNET/RS-32 CONVERT
1054023	AITR	AIRBORNE INTEGRATED TRANSCEIVER/ROUTER
1054-1-1	SPE-105X	8 CKT AC/DC MODULE
1055-1-1	SPE-105X	EIGHT CIRCUIT CONTROLLER
1055-1-2	SPE-105X	EIGHT CIRCUIT CONTROLLER
1056-1-1	SPE-105X	EIGHT CIRCUIT CONTROLLER
1056-1-2	SPE-105X	EIGHT CIRCUIT CONTROLLER
1056-1-3	SPE-105X	EIGHT CIRCUIT CONTROLLER
1056-1-4	SPE-105X	EIGHT CIRCUIT CONTROLLER
1058-1-1	SPE-105X	28VDC DIMMER MODULE - 5A
1059-1-1	SPE-105X	15 CIRCUIT CONTROLLER - 1A AC
1060076	TMASS	TAIL MOUNT ANTENNA SUB SYSTEM
1060-1-1	SPE-106X	DIGITAL POTENTIOMETER
1060-1-3	SPE-106X	DIGITAL POTENTIOMETER
1061-1-1	SPE-106X	CALL MODULE
1062-1-1	SPE-106X	INTERPHONE MODULE
1067697	ACU	ANTENNA CONTROL UNIT, (VIASAT), GEN III
10718B01E01	PDE-6000	POWER DISTRIBUTION EQUIP DC
10719B01E01	PDE-6100	POWER DISTRIBUTION EQUIP AC
10720B01E00	PDE-6010	POWER DISTRIBUTION EQUIP DC
10722B01E00	PDE-6110	POWER DISTRIBUTION EQUIP AC
1142400-130	ASEB	SEAT ELECTRONICS BOX
1167012-140	PCP-140	PILOT CALL PANEL
1167014-144	AMU-140	AUDIO MANAGEMENT UNIT
1167015-141	ACP-140	AUDIO CONTROL PANEL
1167017-143	FDH	FLIGHT DECK HANDSET
1180-1-2	CSW-1180	CURRENT SENSOR
1226-1-1	DC-1226	DATA CONVERTER
1287-1-1	WU-1287	FINAL ASSY, WARNING UNIT
1287-1-2	WU-1287	WARNING UNIT
1288-1-1	JA-1288	JUMP SEAT AUDIO
1302046-106	DU-6.4	MONITOR, SEATBACK, LCD - 6.4 INCH
1303910-100	MONITOR 10.4	MONITOR, RETRACTOR, LCD - 10.4 INCH - 73
1303910-101	MONITOR 10.4	MONITOR, RETRACTOR, LCD - 10.4 INCH - 73
1304-1-11	CA-1304	ANNUNCIATOR
1304-1-12	CA-1304	ANNUNCIATOR
1304-1-16	CA-1304	ANNUNCIATOR
1304-1-17	CA-1304	ANNUNCIATOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
1305-1-5	SSA	SMARTSWITCH ADAPTER
1308520-100	TSE-6014	TOUCH SCREEN EQPT (TSE), 10.4
1308521-100	TSE6084	TOUCH SCREEN EQPT (TSE), 8.4 INCH
1308523-100	ZDE-6000	ZONE DISTRIBUTION EQPT
1308523-101	ZDE-6000	ZONE DISTRIBUTION EQPT
1308524-100	DTE-6000	DIGITAL TAPPING EQPT
1308525-100	VEE-6000	VIDEO ENCODER EQPT
1322-1-108Q100D	SPE-1322	SWITCH PANEL
1322-1-109Q100D	SPE-1322	SWITCH PANEL
1322-1-112Q100D	SPE-1322	SWITCH PANEL
1322-1-117Q100D	SPE-1322	SWITCH PANEL
1322-1-147Q100D	SPE-1322	SWITCH PANEL
1322-1-156Q100D	SPE-1322	SWITCH PANEL
1322-1-16Q100D	SPE-1322	SWITCH PANEL
1322-1-193Q100D	SPE-1322	SWITCH PANEL
1322-1-199Q100D	SPE-1322	SWITCH PANEL
1322-1-42Q100D	SPE-1322	SWITCH PANEL
1322-1-44Q100D	SPE-1322	SWITCH PANEL
1322-1-53Q100D	SPE-1322	SWITCH PANEL
1322-1-59Q100D	SPE-1322	SWITCH PANEL
1322-1-6Q100D	SPE-1322	SWITCH PANEL
1322-1-89Q100D	SPE-1322	SWITCH PANEL
1445-1-1	TCC	TCC AUDIO FILE
1448-1-1/Q120B	SPE-1448	SWITCH PANEL
1448-1-10Q100D	SPE-1448	SWITCH PANEL
1448-1-11Q100D	SPE-1448	SWITCH PANEL
1448-1-37Q100D	SPE-1448	SWITCH PANEL
1448-1-51Q100D	SPE-1448	SWITCH PANEL
1448-1-60Q100D	SPE-1448	SWITCH PANEL
1448-1-61Q100D	SPE-1448	SWITCH PANEL
1448-1-62Q100D	SPE-1448	SWITCH PANEL
1448-1-67Q100D	SPE-1448	SWITCH PANEL
1448-1-7Q120B	SPE-1448	SWITCH PANEL
1448-1-9Q100D	SPE-1448	SWITCH PANEL
1457-1-1	WATER LVL	WATER LEVEL SENSOR, 10 GAL GV
1457-1-2	WATER LVL	WATER LEVEL SENSOR, 10 GAL GIV
1706-1-1	AMP	AUDIO MULTIPLEXER
1710-1-1	AVM	AUDIO/VIDEO MODULE
1710-1-2	AVM	AUDIO/VIDEO MODULE
1730-1-1	CA-1730	ANNUNCIATOR
1730-1-3	CA-1730	ANNUNCIATOR

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
1734-1-1Q100D	SPE-1734	SWITCH PANEL
1734-1-24Q100D	SPE-1734	SWITCH PANEL
1734-1-29Q100D	SPE-1734	SWITCH PANEL
1734-1-30Q100D	SPE-1734	SWITCH PANEL
1734-1-31Q100D	SPE-1734	SWITCH PANEL
1734-1-32Q100D	SPE-1734	SWITCH PANEL
1734-1-3Q100D	SPE-1734	SWITCH PANEL
1734-1-5/Q551	SPE-1734	SWITCH PANEL , 1X3 HOT PLATE/LIGHT
1734-1-6/Q420	SPE-1734	SWITCH PANEL ENTRY LIGHT
1734-1-8Q100D	SPE-1734	SWITCH PANEL
1944-1-4	CABIN MGMT MODL	CABIN MANAGEMENT MODULE
1944-1-5	CABIN MGMT MODL	CABIN MANAGEMENT MODULE
1944-1-8	CABIN MGMT MODL	CONTROLLER, WATER PURGE SYS
1959-1-1	REMOTE	PIONEER REMOTE
200-97450-101	CABIN SYSTEMS	PLUG-IN ARM
2020-1-1	AVD	DISTRIBUTOR, 8X8 AUDIO
2022-1-1	AVD	8 X 8 AUDIO-VIDEO DISTRIBUTOR
2022-1-10	AVD	8 X 8 AUDIO-VIDEO DISTRIBUTOR
2023-1-1	AVD	16 X 16 AUDIO-VIDEO DISTRIBUTOR
2027-1-1	AVD	24X24 AUDIO/VIDEO DISTRIBUTOR
2040-1-1	SECONDARY PORT CTL	CONTROLLER, SECONDARY PORT
2050-1-1	ACPC-1000	PRIMARY PORT CONTROLLER
2050-1-2	PRIMARY PORT CTL	PRIMARY PORT CONTROLLER
2052-1-1	ACPC-1000	CONTROLLER, ENVIRONMENTAL
2052-1-10	ACPC-1000	ENVIRONMENTAL CONTROLLER
2052-1-2	ACPC-1000	CONTROLLER, ENVIRONMENTAL
2052-1-3	ENVRMNT CTL	CABIN MANAGEMENT MODULE
2052-1-5	ENVRMNT CTL	CONTROLLER, ENVIRONMENTAL
2052-1-6	ENVRMNT CTL	CONTROLLER, ENVIRONMENTAL
2052-1-7	ENVRMNT CTL	CONTROLLER, ENVIRONMENTAL
2052-1-8	ENVRMNT CTL	CONTROLLER, ENVIRONMENTAL
2052-1-9	ENVRMNT CTL	CONTROLLER, ENVIRONMENTAL
2056-1-1	AC/DC PWR MODL	HIGH-POWER RELAY CONTROL
2058-1-1	LAMP DIMMER	CONTROLLER, LAMP DIMMER
2080-1-1	NODE BOX	EXPANDER, MDSB NODE
2090-1-2	ENVRMNT CTL	ENVIRONMENTAL CONTROLLER
245-001	AAE-6200	PASSENGER ADDRESS AMPLIFIER
245-604128-000	EFB6000	EFB - EDU (CMC)
245-604170-105	EFB6010	EFB - EEMU (CMC)
2501-1-005H406A	SPE-2501	SWITCH PANEL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
2501-1-007H101A	SPE-2501	SWITCH PANEL, 1X2 CABIN TABLE LIGHT
2501-1-009C103A	SPE-2501	SWITCH PANEL
2501-1-009H101A	SPE-2501	SWITCH PANEL, 1X1 CABIN READ LIGHT
2501-1-009H794A	SPE-2501	SWITCH PANEL
2501-1-012H406A	SPE-2501	SWITCH PANEL, 1X1 TOILET FLUSH
2501-1-015H101A	SPE-2501	SWITCH PANEL, 1X1 CABIN LIGHT
2501-1-028C101A	SPE-2501	SWITCH PANEL, 2X4 VESTIBULE
2501-1-028Q588A	SPE-2501	SWITCH PANEL, 2X4 VESTIBULE
2501-1-029C103A	SPE-2501	SWITCH PANEL:AS 21 CMS 1X9 (LAV) 1ST
2501-1-030H101A	SPE-2501	SWITCH PANEL, 1X2 CABIN LIGHT & SHADE
2501-1-031C103A	SPE-2501	SWITCH PANEL, AS 21 CMS 1X10 (AFT LAV) 1
2501-1-032Q760A	SPE-2501	SWITCH PANEL, 1X7, FWD LAV.
2501-1-065C103A	SPE-2501	SWITCH PANEL (1X3) 1ST ACFT 5002
2501-1-065Q020A	SPE-2501	SWITCH PANEL (1X3) 1ST ACFT 5002
2501-1-066Q020A	SPE-2501	SWITCH PANEL (1X3) 1ST ACFT 5002
2501-1-071H406A	SPE-2501	SWITCH PANEL, 1X2 "READ/CALL"
2501-1-134/H101A	SPE-2501	SWITCH PANEL, 1X1 TOILET FLUSH
2501-1-134H101A	SPE-2501	SWITCH PANEL, 1X1 TOILET FLUSH
2501-1-136H209N	SPE-2501	SWITCH PANEL: (1X1 AFT BAG LT)1ST AC
2501-1-136H436N	SPE-2501	SWITCH PANEL, 1X1 AFT BAGGAGE LIGHT
2501-1-138H209N	SPE-2501	SWITCH PANEL:(1X4 VANITY/LAV)1ST ACF
2501-1-138H436N	SPE-2501	SWITCH PANEL, 1X4 VANITY
2501-1-139H436N	SPE-2501	SWITCH PANEL, 1X8.5 LAV.
2501-1-140/H114B	SPE-2501	SWITCH PANEL, 1X7 VIP
2501-1-140/H436N	SPE-2501	SWITCH PANEL, 1X7 VIP
2501-1-140H123A	SPE-2501	SWITCH PANEL, 1X7 VIP
2501-1-140H407N	SPE-2501	SWITCH PANEL, 1X7 VIP
2501-1-140H436N	SPE-2501	SWITCH PANEL, 1X7 VIP
2501-1-141H209N	SPE-2501	SWITCH PANEL: (1x1 Entry Lt)1st Acf
2501-1-141H436N	SPE-2501	SWITCH PANEL, 1X1 ENTRY LIGHT
2501-1-142H209N	SPE-2501	SWITCH PANEL: (1X8.5 LAVATORY)1ST A
2501-1-142H436N	SPE-2501	SWITCH PANEL, 1X8.5 LAV.
2501-1-192H406A	SPE-2501	SWITCH PANEL, 1X9 LAV MDSB
2501-1-199T17SA	SPE-2501	SWITCH PANEL, 1X1 FLUSH
2501-1-200T17SA	SPE-2501	SWITCH PANEL, 1X1 SINK DRAIN
2501-1-202T17SA	SPE-2501	SWITCH PANEL, 1X3 ENTRY
2501-1-204T17SA	SPE-2501	SWITCH PANEL, 1X3 WARDROBE SERVICE
2501-1-205T17SA	SPE-2501	SWITCH PANEL, 1X3 WARDROBE SERVICE
2501-1-206T17SA	SPE-2501	SWITCH PANEL, 1X3 AFT LAV
2501-1-207	SPE-2501	SWITCH PANEL, 1X5 ENTRY
2501-1-208	SPE-2501	SWITCH PANEL, 1X4 LAV

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
2501-1-209	SPE-2501	SWITCH PANEL (1X4 PCU)1st Acft Dassa
2501-1-210	SPE-2501	SWITCH PANEL: (1X4 PCU) 1ST
2501-1-212	SPE-2501	SWITCH PANEL (1X1 TABLE)1ST ACFT DAS
2501-1-213	SPE-2501	SWITCH PANEL, 1X1 CLOSET 900EX
2501-1-214	SPE-2501	SWITCH PANEL: (1X2 LIGHT/VANITY)1ST
2501-1-215	SPE-2501	SWITCH PANEL, 1X3 READ/FLUSH/CALL 900EX
2501-1-216	SPE-2501	Switch Panel (1X1 LIGHT)1st Acft Das
2501-1-217	SPE-2501	SWITCH PANEL, 1X1 DOOR 900EX
2501-1-233	SPE-2501	SWITCH PANEL, 1X2 READ TABLE
2501-1-242	SPE-2501	SWITCH PANEL, 1X1 LAV
2501-1-243	SPE-2501	SWITCH PANEL, 1X1 READ
2501-1-245	SPE-2501	SWITCH PANEL, 1X1 VANITY
2501-1-316	SPE-2501	SWITCH PANEL (1X3 READ, TA
2501-1-317	SPE-2501	SWITCH PANEL: (1X1 READ, DISCRETE) 1
2501-1-322	SPE-2501	SWITCH PANEL: (1X1 FAX DISCRETE) 1st
2501-1-325	SPE-2501	SWITCH PANEL (1X1 DEPLOY/RE
2501-1-326	SPE-2501	SWITCH PANEL: (1X4 AFT LAV PANEL) 1S
2501-1-341	SPE-2501	SWITCH PANEL (1X1 PRINTER) 1st Acft
2501-1-342	SPE-2501	SWITCH PANEL: (1X1 UPWASH) 1st Acft
2501-1-343	SPE-2501	SWITCH PANEL: (1X1 WI-FI ON/OFF) 1st
2501-1-344	SPE-2501	SWITCH PANEL (1X2 DUAL ELEC
2501-1-345	SPE-2501	SWITCH PANEL: (1X2 MONITOR POWER/ CL
2501-1-346	SPE-2501	SWITCH PANEL (1X2 LAV VANIT
2501-1-347	SPE-2501	SWITCH PANEL (1X1 VANITY) 1st Acft D
2501-1-348	SPE-2501	SWITCH PANEL (1X1 LAV) 1ST ACFT DASS
2501-1-351	SPE-2501	SWITCH PANEL (1X2 READ CALL) 1st Acf
2501-1-354	SPE-2501	SWITCH PANEL: (1X2 READ TAB
2501-1-369	SPE-2501	SWITCH PANEL: (1X2 WI-FI) 1ST ACFT D
2501-1-370	SPE-2501	SWITCH PANEL (1X2 LAV UPWAS
2501-1-425	SPE-2501	SWITCH PANEL, (1X2 LAV PANEL) 1ST ACFT D
2501-2-002H101A	SPE-2501	SWITCH PANEL, 1X8 A/V
2501-2-004/H101A	SPE-2501	SWITCH PANEL, 1X8 AUDIO
2501-2-004H101A	SPE-2501	SWITCH PANEL, 1X8 AUDIO
2501-2-004Q530A	SPE-2501	SWITCH PANEL, 1X8 AUDIO
2501-2-008H101A	SPE-2501	SWITCH PANEL, 1X8 LIGHT & SHADE
2501-2-029H101A	SPE-2501	SWITCH PANEL, 1X9 A/V W/SHADE CNTRL
2501-2-030H101A	SPE-2501	SWITCH PANEL, 1X9 A/V W/SHADE CNTRL
2501-2-074H101A	SPE-2501	SWITCH PANEL, 1X10 A/V
2501-2-075/H101A	SPE-2501	SWITCH PANEL, 1X10 A/V
2501-2-075H101A	SPE-2501	SWITCH PANEL, 1X10 A/V

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
2501-2-110H101A	SPE-2501	SWITCH PANEL, 2X11 FWD VIP
2501-2-114H101A	SPE-2501	SWITCH PANEL, 2X8 AFT VIP
2501-2-176H436N	SPE-2501	SWITCH PANEL, 1X6 AUDIO CONTROL
2501-2-177H102N	SPE-2501	SWITCH PANEL (1X6 SS)1ST ACFT 800XP
2501-2-206H101A	SPE-2501	SWITCH PANEL, 2X7 ENTERTAINMENT
2501-2-286T17SA	SPE-2501	SWITCH PANEL, 1X10 PCU
2501-2-287T17SA	SPE-2501	SWITCH PANEL, 1X13 PCU W/AUDIO & VIDEO
2501-2-291	SPE-2501	SWITCH PANEL (1X9 VIP)1ST A
2501-2-292	SPE-2501	SWITCH PANEL, 1X9 VIP
2501-2-295H505A	SPE-2501	SWITCH PANEL
2501-2-296H505A	SPE-2501	SWITCH PANEL
2501-2-561	SPE-2501	SWITCH PANEL: (1X10 VIP)1ST ACFT F90
2501-2-562	SPE-2501	SWITCH PANEL: (1X10 VIP)1ST ACFT F90
2501-2-565	SPE-2501	SWITCH PANEL: (1X7 CABIN) 1st Acft D
2501-2-566	SPE-2501	SWITCH PANEL (1X7 CABIN) 1S
2501-2-573	SPE-2501	SWITCH PANEL (1X7 CABIN) 1st Acft DA
2501-2-579	SPE-2501	SWITCH PANEL (2X4 Headphone, Audio,
2501-2-607	SPE-2501	SWITCH PANEL (1X10 VIP)1st Acft F7X
2501-3-010H101A	SPE-2501	SWITCH PANEL
2501-3-047H101A	SPE-2501	SWITCH PANEL
2501-3-056H101A	SPE-2501	SWITCH PANEL
2501-3-074Q515A	SPE-2501	SWITCH PANEL, 3X11 ACP
2501-4-008H101A	SPE-2501	SWITCH PANEL, 1X4 RCA AUX
2501-4-23	SPE-2501	SWITCH PANEL: (2X4 HOT CUP)1ST ACFT
2501-4-24	SPE-2501	SWITCH PANEL, 1 X 1 HEADPHONE
2501-4-034	SPE-2501	JACK PANEL: (1X3 SINGLE IPOD 1)
2501-4-035	SPE-2501	JACK PANEL: (1X3 DUAL IPOD 1-2)
2501-4-036	SPE-2501	JACK PANEL: (1X3 DUAL IPOD 3-4)
2501-4-037	SPE-2501	JACK PANEL: (1X3 SINGLE IPOD 2)
2501-4-038	SPE-2501	JACK PANEL: (1X3 SINGLE IPOD 3)
2501-4-039	SPE-2501	JACK PANEL: (1X3 SINGLE IPOD 4)
2501-4-045	SPE-2501	JACK PANEL: (1X3 SINGLE IPOD) AIRCRA
2507-1-03	PRONTO REMOTE	COLOR TOUCHSCREEN REMOTE
2509-1-011H436N	SPE-2509	SWITCH PANEL, VIP MASTER HH
2509-1-012H436N	SPE-2509	SWITCH PANEL, PCU, LEFT
2509-1-013H436N	SPE-2509	SWITCH PANEL, PCU, RIGHT
2509-1-016H436N	SPE-2509	SWITCH PANEL, LAVATORY HH
2509-1-017H436N	SPE-2509	SWITCH PANEL, GALLEY MASTER
251-003	PA AMP	PA AMPLIFIER
2515-1-1	3.8 COLOR DISP SP	SWITCH, 3.8" COLOR TOUCH SCREEN
2515-1-2	3.8 COLOR DISP SP	ASSEMBLY 3.8 INCH DISPLAY

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
2516-1-1	TSC2516	SWITCH, 3.8" COLOR TOUCH SCREEN
2516-1-2	TSC2516	3.8 INCH COLOR DISPLAY SWITCH PANEL
2517-1-1	TSC2517	JACK PANEL, HEAD PHONE, ANODIZED
2525-1-08400	8.4 COLOR TSC	OUTLINE DRAWING 8.4 INCH DISPLAY
2526-1-01	DAR	RECEPTACLE, DISPLAY ARM, 0# AND 180# LOCK
2526-1-02	DAR	RECEPTACLE, DISPLAY ARM, 0# LOCK
2526-1-03	DAR	RECEPTACLE, DISPLAY ARM, 180# LOCK
2526-1-084L33	ARM MT	ARM MOUNT 8.4
2526-1-084R33	ARM MT	ARM MOUNT 8.4
2526-1-104L33	ARM MT	ARM MOUNT 10.4
2526-1-104R33	ARM MT	ARM MOUNT 10.4
2600-1-10-T17SA	SPE-6300	SWITCH PANEL, 1X3 AFT WARDROBE
2600-1-12-T15SA	SPE-6300	SWITCH PANEL, 1X3 READ/TBL/CALL (LH)
2600-1-12-T17SA	SPE-6300	SWITCH PANEL, 1X3 READ/TBL/CALL (LH)
2600-1-13-T17SA	SPE-6300	SWITCH PANEL, 1X3 READ/READ/CALL
2600-1-14-T17SA	SPE-6300	SWITCH PANEL, 1X3 READ/TABLE/CALL
2600-1-15-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/TABLE/READ
2600-1-16-T17SA	SPE-6300	SWITCH PANEL, 1X3 READ/TABLE/CALL
2600-1-17-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/TABLE/READ
2600-1-1-T15SA	SPE-6100	SWITCH PANEL, 1X1 FLUSH
2600-1-1-T17SA	SPE-6100	SWITCH PANEL, 1X1 FLUSH
2600-1-27-T17SA	SPE-6220	SWITCH PANEL, 2X2 LAV.
2600-1-28-T17SA	SPE-6300	SWITCH PANEL, 1X3 AFT LAV.
2600-1-2-T17SA	SPE-6100	SWITCH PANEL, 1X1 SINK DRAIN
2600-1-2-T40SA	SPE-6100	SWITCH PANEL, 1X1 SINK DRAIN
2600-1-31-T17SA	SPE-6100	SWITCH PANEL, 1X1 DOOR RELEASE
2600-1-32-T16PA	SPE-6000	SWITCH PANEL GLOBAL 5000 - CONFEREN
2600-1-38-T17SA	SPE-6220	SWITCH PANEL, 2X2 FWD LAV.
2600-1-39-T17SA	SPE-6300	SWITCH PANEL, 1X3 AFT LAV.
2600-1-3-T17SA	SPE-6100	SWITCH PANEL, 1X1 TABLE LIGHT
2600-1-41-T17SA	SPE-6100	SWITCH PANEL, 1X1 FLUSH
2600-1-42-T17SA	SPE-6100	SWITCH PANEL, 1X1 CALL
2600-1-43-T14PA	SPE-6220	SWITCH PANEL,DOME LTS, MIRROR LTS
2600-1-43-T17SA	SPE-6400	SWITCH PANEL, 1X4 LIGHTING
2600-1-44-T17SA	SPE-6100	SWITCH PANEL, 1X1 JUMP SEAT LIGHT
2600-1-45-T17SA	SPE-6400	SWITCH PANEL, 1X4 LIGHTING
2600-1-45-T24SA	SPE-6400	SWITCH PANEL, 1X4 LIGHTING
2600-1-46-T17SA	SPE-6220	SWITCH PANEL, 2X2 LAV.
2600-1-47-T17SA	SPE-6100	SWITCH PANEL, 1X1 DOOR, XRS
2600-1-4-T17SA	SPE-6300	SWITCH PANEL, 1X3 FWD WARDROBE

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
2600-1-6-T17SA	SPE-6300	SWITCH PANEL, 1X3 AFT LAV.
2600-1-7-T17SA	SPE-6400	SWITCH PANEL, 1X4 FWD LAV.
2600-1-8-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/TABLE/READ
2600-1-9-Q220A	SPE-6300	SWITCH PANEL, 1X3 CALL/READ/READ
2600-1-9-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/READ/READ
2600-2-1	JPE-6001	JACK PANEL, HEAD PHONE
2600-2-10	JPE-6001	AUDIO JACK MODULE ASSEMBLY
2600-2-2	JPE-6001	JACK PANEL, KIT RJ45 ETHERNET
2600-2-4	JPE-6001	JACK PANEL, VGA, VIDEO
2600-2-7	JPE-6001	JACK PANEL, 1X1 BLANK
2600-2-8	JPE-6001	JACK PANEL, 1X2 BLANK
2600-3-1	SBE-6000	SWITCHING MODULE, HYBRID
2601-1-10-T17SA	SPE-6300	SWITCH PANEL, 1X3, UNDERMOUNT, CL604
2601-1-11-T17SA	SPE-6300	SWITCH PANEL, 1X3, UNDERMOUNT, CL604
2601-1-14-T138SA	SPE-6000	SWITCH PANEL
2601-1-1-T138SA	SPE-6300	SWITCH PANEL
2601-1-1-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/TABLE/READ UM
2601-1-2-T138SA	SPE-6300	SWITCH PANEL
2601-1-2-T17SA	SPE-6300	SWITCH PANEL, 1X3 READ/TABLE/CALL UM
2601-1-3-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/TABLE/READ
2601-1-4-T17SA	SPE-6300	SWITCH PANEL, 1X3 READ/TABLE/CALL
2601-1-5-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/READ/READ
2601-1-6-T17SA	SPE-6300	SWITCH PANEL, 1X3 READ/READ/CA,,
2601-1-7-T17SA	SPE-6300	SWITCH PANEL, 1X3 CALL/READ/READ UM.
2601-1-8-T17SA	SPE-6300	SWITCH PANEL, 1X3, UNDERMOUNT, CL604
2601-1-9-T17SA	SPE-6300	SWITCH PANEL, 1X3, UNDERMOUNT, CL604
2601-2-2-T17SA	SPE-2601	SWITCH PANEL, UNDERMOUNT, PACP
2601-2-3-T17SA	SPE-2601	SWITCH PANEL, UNDERMOUNT, PACP
2610-1-1	PCU6000	PCU, GLOBAL 5000, TETHERED
2700-1-1	17.0 LCD	MONITOR, 17" CMS2
2710-1-1501	15.0 LCD	DISPLAY BULKHEAD, 15" ANALOG
2710-1-1503	15.0 LCD	BULKHEAD DISPLAYS (15 INCH DISPLAY)
2710-1-1702	17.0 LCD	DISPLAY BULKHEAD, 17" DIGITAL (CMS-TWO)
2710-1-1703	17.0 LCD	BULKHEAD DISPLAYS
2710-1-2133	21.3 LCD	DISPLAY BULKHEAD, 21.3" DIGITAL
273-1	PS-273	D.C. LAMP DIMMER
2800-1-2	DDIB	DECODER DIGITAL INTERFACE BOX
2800-1-3	DDIB	DECODER DIGITAL INTERFACE BOX
2801-1-2	DDIB	DECODER DIGITAL INTERFACE BOX
2801-1-3	DDIB	DECODER DIGITAL INTERFACE BOX
2802-1-1	RU	REPEATER UNIT (RU)

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
297-1	SC-297	DUAL SIGNAL CONDITIONER
3004-1-11	BATTERY	BATTERY B.U.FLUSH MNT. 7.5"
3004-1-12	BATTERY	BATTERY B.U.RACK MNT. 8.5"
307-1	CSW-307	CURRENT SENSOR
3100-1-24	VCP	VCP RACK MNT. 12.5"
3200-1-22	CD CHANGER	CD CHNGR 6 DISC RACK MNT.8.5"
3201-1-1	CD CHANGER	CD CHANGER
3201-1-2	CD CHANGER	CD CHANGER. RACK MOUNT
3210-1-1	CD CHANGER	CD CHANGER, FLUSH MOUNT, CMS
3210-1-2	CD CHANGER	END ITEM, CD CHANGER, RACK MOUNT, CMS
3300-1-21	DVD PLAYER	DVD PLAYER FLUSH MNT. 7.5"
3300-1-23	DVD PLAYER	DVD PLAYER FLUSH MNT. 11.5"
3301-1-1	DVD PLAYER	DVD PLAYER
3302-1-2	DVD PLAYER	DVD PLAYER RACK MOUNT
3310-1-1	DVD PLAYER	DVD PLAYER, FLUSH MOUNT
3400-1-1	DVD PLAYER	VCR NEW CONFIG FOR FUTURE
3402-1-1	VCR PLAYER	VCR, MULTISTANDARD 28V DC
3404-1-2	VCR PLAYER	28 VDC, RACK MOUNT, MS-VCR, PA
3411-1-1	VCR PLAYER	MULTI-STANDARD VCR, 1394, 110V
3413-1-1	VCR PLAYER	VCR. MS 1394 115V AC FLUSH MOUNT
350000-10-010000	CTU-3000	PHONE SYSTEM (INT'L COMM GROUP)
350000-10-010200	CTU-3000	MISC ELECTR:OTHER(INTERNATIONAL COMM
3500-1-1	AUDIO AMP	AMPLIFIER,3-CHANNEL AUDIO
354-1	FB-354	FINAL ASSEMBLY, BALLAST - FLUORESCENT
356-1-1	CTRL	TIME DELAY RELAY
3600-1-1	AUDIO AMP	AMPLIFIER,6-CHANNEL AUDIO 28V
3600-1-2	AUDIO AMP	AMPLIFIER,6-CHANNEL AUDIO 115V
3700-1-1	AUDIO AMP	SPEAKER, CABIN MIDRANGE
3700-1-2	SPEAKER-MIDRANGE	SPEAKER, CABIN SUBWOOFER
373-1-2	CTRL	CONTROLLER VIP
435-1-6	CTRL	LIGHTING CONTROLLER
436-1-19	CTRL	GALLEY CONTROLLER
436-1-9	CTRL	GALLEY CONTROLLER
437-1-4	CTRL	CHIME VOLUME CONTROLLER, GALLEY CALL
437-1-9	CTRL	GALLEY CALL INTERPHONE CONTROLLER
441-0004-100	HD MONITOR	10.6 INCH HD MONITOR WITH ARM
441-0005-100	HD MONITOR	10.6 INCH HD MONITOR - BULKHEAD
441-0006-100	HD MONITOR	BASE RECEPTACLE 10.6 IN HD MONITOR W
441-0007-100	HDAV	HIGH DEFINITION AUDIO VIDEO (HDAV)
441-0007-102	HDAV	HIGH DEFINITION AUDIO VIDEO (HDAV)

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
441-0010-100	PSW	PROGRAMMABLE SWITCH, AUDIO JACK
441-0024-100	MSW	1X1 MINI SWITCH
441-0024-101	MSW	1X1 MINI SWITCH
441-0025-100	MSW	1X3 MINI SWITCH
441-0025-101	MSW	1X3 MINI SWITCH
441-0026-100	JPE	JACK PANEL VGA, RS-232 AND RCA
441-0038-100	ECM	ELECTRONIC CONTROL MODULE
441-0043-100	PSW	PROGRAMMABLE SWITCH AND CABLE ASSEMB
441-0054-100	JPE	USB, USB CHARGE, AUDIO IN JACK PANEL
441-0055-100	JPE	VGA, RCA, HDMI, USB, USB CHARGE, AUDIO I
441-0056-100	JPE	JACK PANEL HDMI STAND-ALONE
441-0062-100	MSW	1X2 MINISWITCH
441-0070-100	PSW	PROGRAMMABLE SWITCH (PSW), AUDIO JACK, L
441-0080-100	JPE	JACK PANEL, HDMI, RS-232, AND RCA
441-0081-100	HD MONITOR	15.3 INCH HIGH DEFINITION MONITOR, BULKH
441-0087-100	TSR441	ASSEMBLY COLOR TOUCHSCREEN REMOTE
441-0089-100	BDP	DUAL BLU-RAY DISC PLAYER
441-0095-100	TSR441	ASSEMBLY COLOR TOUCHSCREEN REMOTE
441-0102-100	HDAV	HIGH DEFINITION AUDIO VIDEO, HDAV-6000
441-0116-100	HD MONITOR	19 INCH BULKHEAD DISPLAY UNIT
441-0117-100	HD MONITOR	22 INCH BULKHEAD DISPLAY UNIT
441-0133-100	HD MONITOR	24 INCH BULKHEAD DISPLAY UNIT
441-0140-100	WAP	WIRELESS ACCESS POINT (WAP-3000)
441-0143-100	HD MONITOR	10.6 INCH HD MONITOR WITH ARM SCOOP PROOF
441-0143-101	HD MONITOR	10.6 INCH HD MONITOR WITH ARM SCOOP PROOF
441-0144-100	HDM-3002	BASE RECEPTACLE, SCOOP PROOF 10.6 IN HD
441-0161-100	REMOTE	TWO-WAY REMOTE, IPOD TOUCH
460-1-12	CABIN SYSTEMS	14 CKT HIGH POWER SPU WITH ALAN I
463092-110	ITPE-6350	1.9 GHZ CORDLESS HANDSET, BLACK (ICG)
463092-120	ITPE-6350	1.9 GHZ CORDLESS CRADLE IN BLACK (ICG)
463092-230	ITPE-6370	1.9 GHZ CORDLESS BASE STATION (ICG)
464-1	CH-464	CHIME
465-1-17	CA-465	ANNUNCIATOR, PANEL
497-1-3	WT-497	WINDSHIELD TEMPERATURE CONTROL
500044-00-00-1	SIGMA7	BLACK SIGMA 7 HANDSET (INT'L COMM GROUP)
500044-00-02-1	SIGMA7	BEIGE SIGMA 7 HANDSET
500044-00-03-1	SIGMA7	GREY SIGMA 7 HANDSET (INT'L COMM GRP)
500044-00-40-1	SIGMA7	SIGMA-7 HANDSET WITH REEL (BLACK)
500044-00-42-1	SIGMA7	SIGMA-7 HANDSET WITH REEL (BEIGE)NO
500092-210	CORDLESS HANDSET	BLACK CORDLESS PHONE HNDST (NO CRADLE)
500092-211	CORDLESS HANDSET	BEIGE CORDLESS PHONE HNDST (NO CRADL

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
500092-215	CORDLESS HANDSET	PANTONE 5435 CORDLESS PHONE HNDST (INT'L)
500092-220	CORDLESS HANDSET	BLACK CORDLESS PHONE CRADLE (INT'L COMM
500092-230	CORDLESS HANDSET	BLACK CORDLESS PHONE BASE STATION (INT'L)
500092-240	ITPE-6300	2.4 GHZ, +28 VDC 4 WIRE CORDLESS HANDSET
500616-2	ITPE-6100	ICS-100 SNGL CHAN IRIDIUM TRANSCEVI(ICG)
500616-3	ITPE-6110	ICS-100 SNGL CHAN IRIDIUM TRAN W/FAX
500617	ICS500	IRIDIUMCOMMSYSTEM(ICS 200)(ICS ELECT
500617-2	ITPE-6200	ICS-200 DUAL CHAN IRIDIUM
500644	ICS500	IRIDIUM GPS ANTENNA
500905-10-10-1	SIGMA7	SIGMA 7 HANDSET (INT'L COMM GRP)
500905-20-00-1	ITPE-6520	SIGMA 7 BLK SHORT CRADLE PHONE HANDS
500918	IF500	IRIDIUM FILTER
501-1-10	CABIN SYSTEMS	SWITCH PANEL
50200-01	ARE-6000	IN ARM MECHANISM WITH HARNESS(LEFT)
50200-02	ARE-6000	IN ARM MECHANISM WITH HARNESS(RIGHT)
507-1-4	CABIN SYSTEMS	AUDIO DISTRIBUTION UNIT (ADU)
517-1-1	CABIN SYSTEMS	6 CIRCUIT CONTROLLER
532-1-5	LD-532	28V LIGHT DIMMER
61-4-03	CABIN SYSTEMS	SWITCH PANEL
656-1-1	APA	25 W AUDIO POWER AMPLIFIER
744000-10-10	ITPE-6500	SIGMA-7 LIGHTED HANDSET LONG CRADLE
807-1-3	AI-807	HORIZONTAL STABILIZER DE-ICER
822-1877-001	MCE-6000	MODULAR CABINET EQPT
822-1879-001	PSE-6000	POWER SUPPLY EQUIP
822-1880-001	PME-6000	PROCESSOR/MASS STORAGE EQPT
822-1881-001	MME-6000	MME-6000 MOVING MAP EQUIP
822-1881-002	MME-6000	MOVING MAP EQPT
822-1881-101	MME-6000	MOVING MAP EQPT
822-1915-001	MME-6100	MOVING MAP EQPT
822-1915-002	MME-6100	MOVING MAP EQPT
822-1915-101	MME-6100	MOVING MAP EQUIPMENT
822-1916-001	MFE-6000	MODULAR FAN EQPT
822-1943-001	ESE-6100	ETHERNET SWITCH EQPT
822-1943-002	ESE-6100	ETHERNET SWITCH EQPT
822-2210-001	WLU-2100	MULTI-MODE WIRELESS LAN UNIT
822-2295-001	JEE-6000	JUMPER ETHERNET EQPT
848-1-1	CA-848	ANNUNCIATOR PANEL
856-1-1	WT-856	WINDSHIELD TEMPERATURE CONTROL
856-1-3	WT-856	WINDSHIELD TEMP CONTROL
866-0022-002	ABDU-6210E	ACS 21.3 ETHERNET LCD VIDEO DISPLAY

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
866-0023-002	ABDU-6240E	ACS 24 ETHERNET LCD VIDEO DISPLAY
866-0024-001	ABDU-6180E	ACS 18.1 ETHERNET LCD VIDEO DISPLAY
866-0024-002	ABDU-6180E	ACS 18.1" ETHERNET LCD VIDEO DISPLAY
866-0025-001	ADVD-6220E	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-001	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-002	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-004	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-005	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-0027-006	ADVD-6220	AIRPLAY DUAL DISC CD/DVD/MP3 PLAYER
866-1-1	PS-866	FINAL ASSEMBLY: DUAL POWER SUPPLY
900304-1	WLU-6000	WIRELESS LAN UNIT
900973-1	WASP-6000	WIRELESS ACCESS SVC POINT
902-1-2	MT-902	MACH TRIM INTERFACE
911010-1	TTDC-400	TIME TO DESTINATION CONTROLLER
911010-2	TTDC-400	TIME TO DESTINATION CONTROLLER
914091-1	RMT-2100	MOUNT,3/8 ATR,RDU
914095-100	ADBT	OUTLINE DRAWING
920040	DIU-400-4	AIRSHOW 4XXX, FLANGE MOUNT, DIU
920050	DIU-400-5	AIRSHOW 400, 1/2 ATR, COMPOSITE VIDE
920055	DIU-400-5	1/2 ATR MOUNT DIU, AS410
920060	DIU-4006	GENESYS SYSTEM DCU
920062	DIU-400-6	GENESYS DCU,NTSC/RGB
920072	DCU	FLANGE MOUNT, COMPACT DATA
920080	DIU-4008	CD-ROM UNIT,REMOTE,CDCU
920090	FDCU-400	FLANGE DCU,NTSC
920092	FDCU-400	FLANGE DCU,RGB
921000	DIU420	AIRSHOW 420,NTSC/RGB
921005	DIU420	AIRSHOW 420,NTSC,BOEING
921006	DIU420	AIRSHOW 420,NTSC/RGB
922000-1	FDC-400	FLIGHT DECK CONTROLLER
922000-2	FDC-400	FLIGHT DECK CONTROLLER
922000-3	FDC4000	FLIGHT DECK CONT,ROCKWELL GRAY
92450-52	10.4 LCD	MONITOR, 10.4" LCD RUGGEDIZED
925000-100	DMS4000	DIGITAL MEDIA SERVER
925010-100	DIU4200	AIRSHOW 4200
925010-101	DIU4200	AIRSHOW 4200, W/ ACARS
925010-110	DIU4200	AIRSHOW 4200D
925410-100-1	DIU4200	MOUNT KIT,4 MCU,DMS
930010-02	IMU	IF MULTIPLEXER UNIT, TAILWIND
930011-02	IMU	IF MULTIPLEXER UNIT, TAILWIND
931000-101	RDU	RDU, DUAL CONUS,DIRECTV, TAILWIND

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
931000-105	RDU	RDU, DUAL EUROPE,TPS, TAILWIND
931000-120	RDU	RDU, CONUS/DTV,EUROPE/TPS, TAILWIND
931000-200	RDU	RDU, COMMON INTERFACE (CI), TAILWIND
931000-201	RDU	RDU, CONUS DIRECTV, TAILWIND
931000-202	RDU	RDU, US/COMMON INTERFACE, TAILWIND
931000-205	RDU	RDU, DUAL EUROPE, TPS, TAILWIND
931000-207	RDU	RDU, DUAL MIDDLE EAST, SHOWTIME, TAILWIND
931000-212	RDU	RDU, DUAL MIDDLE EAST, (ARABSAT), TAILWIND
931000-220	RDU	RDU, CONUS DIRECTV/EUROPE TPS, TAILWIND
931000-227	RDU	RDU, EUROPE TPS/MIDDLE EAST, TAILWIND
932000-100	FMU	FUSELAGE MOUNTED UNIT, TAILWIND
932000-200	FMU	FUSELAGE MOUNTED UNIT, TAILWIND
932000-201	FMU	FUSELAGE MOUNTED UNIT, TAILWIND
932000-202	FMU	FUSELAGE MOUNTED UNIT, TAILWIND
932000-203	FMU	FUSELAGE MOUNTED UNIT, TAILWIND
932001-100	TMU	TAIL MOUNT UNIT, TAILWIND
932001-102	TMU	TAIL MOUNT UNIT, TAILWIND
932002-100	SSP	SYSTEM SIGNAL PROCESSOR, TAILWIND
932003-100	CDM	CONFIGURATION DATA MODULE, TAILWIND
932006-100	GEM	GIMBAL ELECTRONICS MODULE, TAILWIND
932007-101	IMU	IF MULTIPLEXER UNIT, TAILWIND
932007-102	IMU	IF MULTIPLEXER UNIT, TAILWIND
933001-100	CPIF	CONTROLLER POWER INTERMEDIATE, TAILWIND
933002-100	RDU	RDU8, RECEIVER DECODER UNIT, TAILWIND
933003-301	IRDM	INTEGRATED RECEIVER DECODER MODULE
933003-305	IRDM	INTEGRATED RECEIVER DECODER MODULE
933003-309	IRDM	INTEGRATED RECEIVER DECODER MODULE
934104-100	PAU	POWER AMPLIFIER UNIT, TAILWIND
936001-100	TMU	TAIL MOUNT UNIT, TAILWIND
936002-100	ACU	ANTENNA CONTROL UNIT, TAILWIND
937-1-1	AI-937	DE-ICE TIMER
938-1-1	CA-938	ANNUNCIATOR
938500-200	CABIN SYSTEMS	AEROCOM 3000 TRAY (INT'L COMM GROUP)
938810A-B	CABIN SYSTEMS	JET PHONE (BLACK) (INT'L COMM GROUP)
962000-101	ADB	AREA DISTRIBUTION BOX,CMS2
962001-101	ADB	AREA DISTRIBUTION BOX,CMS2
963000-103	EDIB	EDIB, ENCODER BOX CMS2
963001-103	EDIB	ENCODER DIGITAL INTERFACE BOX
964000-103	DIB	DIB, DECODER BOX CMS2
964001-103	DIB	OUTLINE, DECODER DIGITAL INTERFACE BOX
981-1-1	AVC	AUDIO/VIDEO CONTROLLER

Part Number Lists

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
990-4132-005	SAE-6300	3 CHANNEL HONEYWELL/BAKER AMP (BAKER)
ALD-1801D	BDE-6180	18.1 IN BULKHEAD DISPLAY EQPT (ACS)
ALD-2131D	BDE6210	BULKHEAD DISPLAY EQPT 21.3 IN (ACS)
AT208-1	AT-2081	INDICATOR, FUEL TOTALIZER
DT-A4RC	SRE-6000	MID RANGE TWEETER
DT-AUS-4MRC	SPKR	SUBWOOFER (UNDER SEAT) (DTSYSTEMS)
DT-AWMR-4MBA	SPKR	SUBWOOFER (MAG RACK) (DTSYSTEMS)
DT-AWMR-4MBA-8	SPKR	SUBWOOFER 8OHM MAG RACK
DT-PA2N	SPKR	4 OHM CABIN PA SPEAKERS
DT-PA2N-8	SPKR	8 OHM SPEAKER
FA979AA	PCU-6100	HP HANDHELD CONTROL UNIT
FG-8000RC-001	EFB-6000	ELECT FLGHT BAG
HX2790C	PCU-6100	WIRELESS PCU
HX4700	PCU-6100	WIRELESS PCU
PC900-3A2000PH1-1	FFI	FUEL FLOW INDICATOR
Q1679A	PRNTR	PRINTER/SCANNER/FAX
Q5801A	PRNTR	PRINTER/SCANNER/FAX
RCTV-5000	RCTV-5000	TEST EQUIPMENT, ELECTRICAL
RS1432-5	EFA	ELEVATOR FEEL ACTUATOR
RS1433-5	RTA	RUDDER TRIM ACTUATOR
RS1436-2	STA	STICK SHAKER
RS1437-3	ECFT	TRANSDUCER, FORCE, ELEVATOR CONTROLS
RS1451-3	RVDT	RVDT, TRIPLE CLUSTER, YAW CONTROLS
RS1452-3	RVDT	RVDT, TRIPLE CLUSTER, ELEVATOR CONTROLS
RS1453-4	RVDT	RVDT, QUADRUPLE CLUSTER, LATERAL CONTROL
RS1462-3	LCFT	TRANSDUCER, FORCE, LATERAL CONTROLS
RS1463-3	YCFT	TRANSDUCER, FORCE, YAW CONTROLS
RS1467-3	YTLT	TRANSDUCER, LINEAR, YAW TRIM POSITION, E
RS1492-3	BPPS	SENSOR, BRAKE PEDAL POSITION
XMR200-01	XM RADIO	HUT XM RADIO 2 CHANNEL RECEIVER
XMR400-01	XM RADIO	XM RADIO

Part Number Lists

ROCKWELL COLLINS — UNITED KINGDOM 'P@VES' POOL

The following part numbers are available from the Rockwell Collins United Kingdom 'P@VES' Pool only. Orders must be placed directly at (Tel: 44.118.926.2977 & Fax: 44.118.966.8543)

PART NUMBER	EQUIPMENT TYPE	DESCRIPTION
RV617-6231-001	VM-8.6/8.4	8.6" LCD
RV617-6231-002	VM-8.6/8.4	8.6" LCD
RV617-6231-011	VM-8.6/8.4	8.4" LCD
RV617-6231-012	VM-8.6/8.4	8.4" LCD
RV617-6265-001	VM-8.6/8.4	8.6" LCD
RV617-6265-002	VM-8.6/8.4	8.6" LCD
RV700-2061-001	VM-8.6/8.4	8.6" LCD
RV700-2184-001	SVDU	SVDU
RV700-2200-001	SVDU	SVDU
RV743-0238-001	TRI-AUDIO	H18 VTR
RV743-0288-001	AMUX	MUX AUDIO
RV743-0293-001	VRU	H18 VTR
RV743-0304-001	VRU	H18 VTR
RV743-0315-002	PSCU	PSCU
RV743-0315-003	PSCU	PSCU
RV980-9900-001	ARU	AUDIO-140

Rockwell Collins provides total life-cycle service solutions. In addition to component repair and parts support, we provide complete asset management, with the reliability, training, technical information, and engineering solutions for total life-cycle service and support you need to achieve your operational goals and business success.

Rockwell Collins distributes, repairs, overhauls, upgrades and manages everything from analog cockpit electronics to the latest digital avionics - from quick cost estimating, to equipment installation, to obsolescence management for lifetime support.

Our team of dedicated technicians regularly service over 2,500 product types — every Rockwell Collins part, as well as a number of suppliers' products. And we are committed to providing extensive, up to date information resources, including product engineering, training and the latest documentation. Factory-trained service specialists know the intricacies of every product, from your first cockpit radio to the newest IFE system.

Rockwell Collins service locations and distribution hubs are strategically positioned around the globe. Extensive pre-positioned parts are ready when you need them. These worldwide support centers are linked through a high-performance, networked business system that tracks every repair, upgrade and service bulletins.

Aircraft on Ground (AOG) emergency service harnesses the power of more than 80 globally linked locations and delivers it to your doorstep. Seven days a week. Twenty-four hours a day. And when it is not an emergency, our line-to-shop maintenance support provides on-site service with the same guaranteed reliability and convenience, with the industry's best repair cycle times.

Rockwell Collins total life-cycle service solutions include flexible pricing options tailored to your business — time and material, exchange, rental, leasing and maintenance-by-the-hour. Our Dispatch 100SM program provides complete turnkey support with guaranteed availability and performance — a single source for the services that are most vital to your business. We also work with the Defense Priority Allocation System (DPAS) to establish the priorities for military customers. So whether you operate a commercial airline, business aircraft or a military fleet, Rockwell Collins can tailor a plan for your business.

Twenty-four hours a day customers may access Rockwell Collins service information via www.rockwellcollins.com/services_and_support for real-time, global access to: Maintenance and Repair, Service Parts, and Technical Information.

Rockwell Collins is headquartered in Cedar Rapids, Iowa, U.S.A. with service capabilities that include total life-cycle service solutions for Maintenance, Repair & Overhaul (MRO) of Rockwell Collins avionics and other OEM products for commercial, business, corporate, and military operations. Additional supply chain management logistics capabilities include on-board services, provisioning, service parts, digital technical information services and asset management services. In addition, Rockwell Collins provides exchange, lease and rental of equipment.

SUMMARY OF SERVICE SOLUTIONS

Rockwell Collins services include:

- Maintenance, Repair and Overhaul
- Logistics Services
- Field Service Engineering
- Rental Exchange

MAINTENANCE, REPAIR, AND OVERHAUL

Rockwell Collins has long recognized the need to provide customers with superior after-sale support and has responded to that need with a worldwide service organization that is unsurpassed. Rockwell Collins service locations consist of international Service Centers and Bases, U.S. Centers and Bases, Quality Administration and Service Center Support, all committed to applying Lean Electronics for customer focused total life cycle value solutions.

SERVICE CENTERS

Rockwell Collins Service Centers are strategically located throughout the world to provide maintenance on Rockwell Collins equipment both in and out of warranty. Overhaul and repair service can also be obtained at each location. As new products are introduced, service center capabilities are continually updated to support these products. Located within each Service Center is a dedicated Customer Service Representative, available to answer customer questions or problems.

Rockwell Collins Service Centers are all licensed or approved by the appropriate agency within the country they are located and for the countries they serve. Generally, all are Federal Aviation Administration (FAA) and/or Joint Aviation Authorities (JAA) licensed or approved. The Rockwell Collins Service Centers are AS9100 certified.

SERVICE BASES

Global Service Solutions

Advanced In-Flight Entertainment (IFE) systems with unprecedented performance and variety require thorough and reliable support. Rockwell Collins maintains the world's largest IFE service support network with over 400 trained service personnel at Service Bases throughout the world. Rockwell Collins is strategically positioned to provide premiere service and support to our airline customers.

On-Board Services

On-board support is available for a variety of products including cabin management, standard and interactive video, audio and in-flight telephone systems. Our FAA and JAA certified technicians are qualified to support Rockwell Collins and other OEM IFE systems with industry leading reliability and responsiveness.

SERVICE AGENCY AGREEMENTS

Rockwell Collins approved Service Agencies are:

Avionica S.P.A. (www.avionica.aero) is the Rockwell Collins approved service agency for military and paramilitary repairs and services in Italy.

Tokyo Aircraft Instrument Co. (www.tkk-air.co.jp)

FIELD SERVICE ENGINEERING

Rockwell Collins Field Service Engineers (FSE) are highly trained technical experts who are routinely involved in every phase of program development. Participation begins in design, continues through test and integration, and matures into post-delivery support. This depth of involvement ensures an unsurpassed level of proficient customer support.

Our field service staff is supported by program management, engineering and manufacturing leadership. In combination with our Customer Response Center, we offer a highly skilled, motivated and supported work force. The Field Service Engineering organization is experienced in both hardware and software dealing with all Rockwell Collins products from display systems, integrated avionics systems, communication systems and navigation systems, as well as new product development and testing.

INTEGRATED LOGISTICS SUPPORT

Integrated Logistics Support (ILS) provides complete services and support throughout the life cycle of our products and systems. Working with you, our ILS team develops plans and integrates both short and long term support considerations into product design. We establish and maintain ILS solutions that address operations and maintenance throughout the life cycle of a system. This ensures you have a reliable support solution providing high survivability for sustained operational readiness.

INTERNATIONAL AND SERVICE SOLUTIONS CONTACT INFORMATION

International and Service Solutions
M/S 153–150
400 Collins Road NE
Cedar Rapids, IA 52498–3161

In the U.S.: 1.888.265.5467
Outside the U.S.: 1.319.265.5467

REPAIR, OVERHAUL AND MODIFICATION

1. **TAXES.** Except as otherwise specified, the prices stated do not include any state, federal, or local sales, use or excise taxes applicable to the repair, overhaul, delivery, or use of said equipment, and the Buyer expressly agrees to pay to Seller, in addition to the prices stated, the amount of any such taxes, domestic or foreign, which may be imposed upon or payable by Seller.
2. **TERMS.** The net price for all repair, overhauls, or modifications are required to be paid thirty (30) days after receipt of invoice. Notwithstanding any statement of terms or time of payment appearing on the face of the order, Seller reserves the right to require payment in advance of shipment or to ship C.O.D. In the event Buyer fails to pay any invoice when due, in addition to any other rights reserved hereunder, Seller reserves the right to suspend or limit performance until all past due sums are paid. Further, Seller reserves the right to charge interest at the rate of one and one half percent (1.5%) per month, or the maximum rate permitted by law, whichever rate is lower, on any unpaid balance owing by Buyer from the date due until the date paid.
3. **DELIVERY.** Unless otherwise specified, Buyer shall deliver any equipment returned for repair to Sellers designated repair facility, transportation prepaid. Seller will return equipment to Customer's designated receiving facility at Customer's expense, according to the delivery schedule specified, which schedule is subject to delays due to causes beyond Seller's control including but not limited to, inability to obtain material, labor, acts of God, or of the public enemy, any preference, priority or allocation order issued by the Government or any other act of Government, fires, floods, epidemics, quarantine restrictions, strikes, freight embargoes, or delays of Seller's suppliers. In the event of such delay, delivery dates shall be extended accordingly for a period equal to the time lost by reason of such delay. Partial deliveries are acceptable. Further, subject to Buyer failing to accept/take delivery of serviced equipment within thirty (30) days of the service completion date, and Buyer being notified in writing of such infringement, Seller reserves the right to charge a one-hundred dollar (\$100) storage fee for each subsequent thirty (30) day period that Buyer's equipment is not claimed (first fee to be applied and invoiced sixty (60) days after completion of service.)
4. **SHIPMENT.** In the absence of specific instructions Seller will select the carrier to whom delivery will be made for shipment to Buyer. Except for its obligations under the sections hereof entitled 'Warranty' and 'Patents and Copyright Indemnification', all responsibility of Seller for said equipment ceases upon delivery to carrier. All claims to the carrier for equipment damaged or lost in transit shall be made by the Buyer.
5. **WARRANTY.** The equipment repaired, overhauled or modified hereunder and any software provided in connection therewith are subject to the following warranties:
 - A. Seller agrees that it will correct, without charge, any defect in material or workmanship provided by Seller for the repair, overhaul, or modification work performed hereunder, provided that the equipment is returned, transportation prepaid, to Seller's service center which performed the repair work, subject to:
 - i. Unless another warranty duration is specified in writing and signed by Seller, written notice of the claimed defect being given to Seller within the period stated below:

General Conditions of Sale

- (1) Repair and Modification Labor and Material: Warranted for one (1) year from date equipment is shipped.
 - (2) Overhauled equipment shall be covered under this warranty clause for a period of one (1) year from date shipped, except for conditions set forth in C below. Any repair, modification labor and material required to repair such overhauled equipment within the one (1) year warranty period will be performed at no cost and such repair and/or modification shall be covered under this warranty clause for the remaining balance of the one (1) year overhaul warranty.
 - (3) Test Equipment Repair and Modification Labor and Material: Warranted for sixty (60) days from date equipment is shipped.
- ii. Seller's obligations with respect to such equipment are conditioned upon the proper installation and operation of such equipment by Buyer in accordance with Seller's written directions.
 - iii. The warranty stated in this Section 5A shall be void if such equipment is altered or repair is attempted or made by other than Seller or Seller's authorized service center.
- B. Seller warrants that any software delivered hereunder, either embedded in equipment described herein or specifically designed for use in or with such equipment, will substantially provide the function(s) set forth in the applicable specification (or absent a specification, as described in the applicable Service Bulletin). Seller will, at its option, without charge, revise or replace such nonconforming software provided:
- i. Notice of the claimed defect is given Seller within one (1) year from the date of delivery or one hundred eighty (180) days from the date of first installation, whichever occurs first. An exception to the aforementioned guidelines is Test Equipment, such notice of the claimed defect is given Seller within sixty (60) days from date equipment is shipped or from the date of first installation, whichever occurs first.
 - ii. Software shall not be deemed to be defective if the software or the host medium is exposed to any computer virus or to any condition in excess of those published in the applicable specification(s).
 - iii. Seller's obligations are conditioned upon the proper installation and operation of software and the host medium in accordance with Seller's written instructions.
 - iv. The warranty stated in this Section 5B shall be void if such software (or its host medium) is altered (or alterations are attempted) by other than Seller or Seller's authorized service center.
- C. Repair, overhaul, or modification shall not be deemed to be defective if failure is caused by interface with other equipment, customer caused damage, shipping or handling damage, or exposure to conditions in excess of those published in the equipment specifications.

The warranty of these paragraphs is void if the equipment is altered or repair is attempted or made by other than Seller or Seller's authorized service center or Buyer has supplied non-Rockwell Collins' material(s) used in the repair.

NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE SHALL BE APPLICABLE TO ANY EQUIPMENT SOLD OR SOFTWARE REPAIRED, OVERHAULED OR MODIFIED HEREUNDER, AND THE FOREGOING SHALL CONSTITUTE THE BUYER'S SOLE RIGHT AND REMEDY UNDER THIS AGREEMENT.

6. **PATENT AND COPYRIGHT INDEMNIFICATION.** Seller agrees that it will defend, at its own expense, all suits against Buyer for infringement of any United States patent or copyright covering, or alleged to cover, repair, overhaul, and modification of equipment and any software associated therewith in the form delivered hereunder by Seller. Seller agrees that it will pay all sums which, by final judgment or decree in any such suits, may be assessed against the Buyer on account of such infringement, provided that Seller shall be given (i) immediate written notice of all claims of any such infringement and of any suits brought or threatened against Buyer and (ii) authority to assume the sole defense thereof through its own counsel and to compromise or settle any suits so far as this may be done without prejudice of the right of the Buyer to continue the use, as contemplated, of the equipment repaired or modified hereunder. If in any such suit so defended such repair, overhaul, or modification is held to constitute an infringement and its use is enjoined, or if in the light of any claim of infringement Seller deems it advisable to do so, Seller may either procure the right to continue the use of the same for the Buyer, or replace the same with a noninfringing equipment or modify said equipment so as to be non-infringing, or remove the infringing apparatus and refund the price of the repair, overhaul or modification, less a reasonable allowance for use, damage, or obsolescence.
7. **SOFTWARE LICENSE FOR EQUIPMENT SPECIFIC SOFTWARE.** Software delivered hereunder, either embedded in equipment described herein or specifically designed for use in or such equipment, is copyrighted by Seller and shall remain the sole and exclusive property of Seller. Seller grants the Buyer a perpetual, worldwide, nonexclusive license to use the software only in or with the equipment. The Buyer shall not copy, modify, or disassemble the software, or permit others to do so. Buyer shall not transfer the license granted hereby or possession of the software except as part of or with the equipment, such transfer being subject to the restrictions contained herein. Seller may terminate this license upon written notice for violation of any of the terms of the foregoing license.
8. **GOVERNING LAW.** This agreement shall be construed in accordance with, and the rights of the parties shall be governed by, the laws of the State of Iowa, USA, as the same would be applied to transactions between residents thereof, but without regard to that state's conflict of laws principles and specifically excluding the provisions of the 1980 UN. Convention on Contracts for the International Sale of Goods. The Parties will abide by all U.S. Government laws and regulations, including without limitation, those applicable to export regulations and the export and re-export, as well as the regulations promulgated by the U.S. Dept. of Treasury, Office of Foreign Assets Control ("OFAC"), implementing Executive Orders which require the blocking of property or interests in property of persons and/or companies listed on the Specially Designed Nationals and Blocked Entities List. When required by such export and import laws or regulations, Buyer will apply for the necessary and appropriate export licenses. Rockwell Collins will apply for an export license when necessary for the purpose of exporting hardware and/or data to be provided under this Agreement to the Buyer or end user during or at the completion of this Agreement. If U.S. Government regulation or laws preclude the approval of the issuance of such license or performance of this Agreement in any manner,

General Conditions of Sale

such event will not impede payment of the fees hereunder and is to be considered an excusable delay and not a default under this Agreement. Rockwell Collins will inform Buyer in writing of any delays or difficulties relating thereto. Buyer is responsible for all charges associated with obtaining an import or export license. If Rockwell Collins pays, on behalf of Buyer, any fees or charges associated with the export or import of Equipment or documentation, Buyer will reimburse Rockwell Collins for such fees or charges. Rockwell Collins and Buyer are each responsible for any fines imposed due to their own action or in-action. In addition, Rockwell Collins will, at no cost to Buyer, promptly provide reasonable support and documentation, if required, for export license application. All costs and expenses associated with import, export or re-export will be paid by Buyer or end user in accordance with Article 2 herein. Buyer will identify all material being sent in for repair by Part Number, Commodity Code, Description, End Use, End User, and indicate that the equipment is being returned for repair. In connection with the regulations promulgated by OFAC implementing Executive Orders which require the blocking of property or interests in property of persons and/or companies listed on the Specially Designated Nationals and Blocked Entities List, regardless of whether Buyer is considered to be a U.S. Person under such regulations, Buyer will comply with such regulations relating to any transactions under this Agreement and will not retransfer any product received from Rockwell Collins to any persons or companies listed on the Specially Designated Nationals and Blocked Entities List.

9. FEDERAL ACQUISITION REGULATION (FAR) CLAUSES APPLICABLE TO SALES TO THE U.S. GOVERNMENT.

- A. The word "Contractor", as used in the FAR, shall be synonymous with the word "Seller" as used in these General Conditions of Sale and any reference to the "Government" or to the "Contracting Officer"- shall be synonymous with the word "Buyer". Similarly, any reference to the word "Supplies" shall be synonymous with the word "Equipment".
- B. The clause set forth at FAR 52.212-4, CONTRACT TERMS AND CONDITIONS-COMMERCIAL TERMS, as tailored herein [pursuant to FAR 12.302], shall be applicable to all sales made directly to the U.S. Government.
 - i. With respect to paragraphs (a) and (o) of the FAR clause, the Seller's Warranty set forth above at Article 5 shall have precedence and shall govern in the event of any post acceptance activity contemplated by said paragraph (a). The Seller's Warranty shall supersede and replace the warranty set forth at said paragraph (o) of the FAR clause.
 - ii. With aspect to paragraph (h) of the FAR clause, the Seller's PATENT AND COPYRIGHT INDEMNIFICATION set forth above at Article 6 shall supersede and replace the Patent Indemnity set forth at said paragraph (h) of the FAR clause.
 - iii. With respect to paragraph (k) of the FAR clause, the Seller's provision entitled 'TAXES' as set forth above at Article I shall supersede and replace the Taxes provision set forth at said paragraph (k) of the FAR clause.
 - iv. With respect to paragraph (s) of the FAR clause, the clarifications set forth in this Article shall have precedence over all other provisions of this contract.
- C. The clause set forth at FAR 52.212-5, CONTRACT TERMS AND CONDITIONS REQUIRED TO IMPLEMENT STATUTES EXECUTIVE ORDERS COMMERCIAL ITEMS, as clarified herein, shall be applicable to all sales made directly to the U.S. Government.

- i. Paragraphs (b) and (c) of said clause shall only be applicable when Buyer and Seller have duly executed an addendum to these General Conditions of Sale specifically citing which of the clauses referenced in paragraphs (b) and (c) are applicable to this contract.

10. FEDERAL ACQUISITION REGULATION (FAR) CLAUSES APPLICABLE TO SALES TO COMMERCIAL CONCERNS IN SUPPORT OF SALES TO THE U.S. GOVERNMENT.

The clause set forth at FAR 52.244-6, SUBCONTRACTS FOR COMMERCIAL ITEMS AND COMMERCIAL COMPONENTS, and the FAR clauses cited therein, shall be applicable to sales made hereunder only when such sales are specifically identified in the order as being in support of U.S. Government prime contract requirements. The actions required under the referenced clauses made applicable under this Section shall constitute the entirety or Seller's FAR obligations hereunder for such sales.

- 11. NO WAIVER.** No failure by either party to exercise and no delay in exercising any right power or privilege hereunder will operate as a waiver hereof, nor will any single or partial exercise of any right or privilege hereunder preclude further exercise of the same right or the exercise of any right hereunder. A waiver on one or more occasions of any of the provisions Hereof shall not be deemed a continuing one.

- 12. LIMITATION OF LIABILITY. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, OR BUSINESS INTERRUPTION) RELATING TO OR ARISING UNDER THIS CONTRACT AND/OR THE USE OF OR INABILITY TO USE ANY PRODUCT, EQUIPMENT OR ASSOCIATED SOFTWARE DESCRIBED HEREIN, EITHER SEPARATELY OR IN COMBINATION WITH] ANY OTHER PRODUCT, EQUIPMENT, SOFTWARE OR OTHER MATERIALS, EVEN IF SELLER HAS BEEN ADVISED OF THE POSSIBILITY OR CERTAINTY OF SUCH DAMAGES. SELLER'S TOTAL AGGREGATE LIABILITY HEREUNDER, WHETHER BASED UPON CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHERWISE, SHALL IN NO EVENT EXCEED THE PRICE PAID BY BUYER HEREUNDER.**

- 13. PHYSICAL DAMAGE AND CANNIBALIZATION.** Except as otherwise specified, prices stated are for equipment subjected to normal use only. Physically damaged or cannibalized equipment, or equipment which has a secondary failure or parts availability problems, will be repaired only after Buyer approval of an estimate of additional charges.

- 14. PRESERVATION, PACKING, AND PACKAGING.** Except as otherwise specified, Seller will use commercial standards to preserve, pack, and package equipment for return shipping to Buyer. Equipment returned to Seller's service center must be packaged in the original shipping container or equivalent. Seller reserves the right to charge Buyer the cost of such proper shipping container for return shipment should Buyer fail to comply with the aforementioned shipping requirement.

- 15. ENTIRE CONTRACT.** These General Conditions of Sale shall comprise the exclusive terms, conditions and agreements of the parties respecting Repair, Modification or Overhaul described herein, and supersede any provisions on the face and/or reverse side of Buyer's order or any prior agreement inconsistent with the provisions hereof. Acceptance by Buyer of such Repair, Modification or Overhaul covered hereunder shall, absent a contrary agreement in writing signed by Seller, constitute acceptance of these General Conditions of Sale. The invalidity of the whole or in part of any provisions

General Conditions of Sale

hereof shall not affect the validity of any other provision. The headings of the sections herein have been inserted for convenience of reference only and shall not affect the interpretation of any of the provisions hereof.

074-8431-866 (Rev 12/08)

AOG — Aircraft on Ground

ASA — Airline Supplier Association

ATA — Air Transport Association

CASP — Corporate Aircraft Service Program

COD — Cash on Delivery

DPAS — Defense Priority Allocation System

EAR — Export Administration Regulations

FAA — Federal Aviation Administration

FSE — Field Service Engineer

HGS® — Head-up Guidance System

IFE — In-Flight Entertainment

ILS — Integrated Logistics Support

ITAR — International Traffic in Arms Regulation

JAA — Joint Aviation Authorities

MRO — Maintenance, Repair, and Overhaul

NFF — No Fault Found

OEM — Original Equipment Manufacturer

QTO — Quote to Order